

# Solid Beech A Frame Series




## AFR-WOODSCREWS INSTRUCTIONS

Hardware Included	Rectangular Desks Need:	L-Desks Need:
Qty 12 - 1-5/8" Self Threading Wood Screws	8	12
Qty 6 - 1" Self Threading Wood Screws	N/A	6
Qty 18 - Washers	8	18

### Tools You Will Need: Power Drill/Screwdriver

Desk

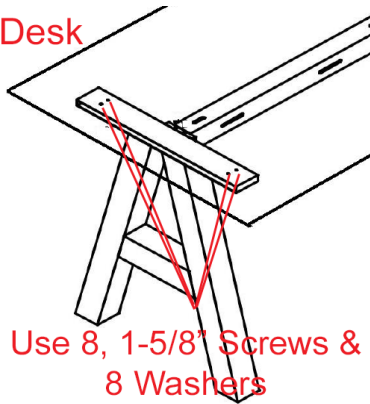


Use 8, 1-5/8" Screws &  
8 Washers

**Step 1:** Assemble desk upside down, on a clean carpeted or a blanketed floor.

**Step 2:** Position assembled steel base on underside of wood top. Use power drill/screwdriver to screw the 1-5/8" self-threading wood screws with washers

through the holes of the legs. Screws drill into the solid wood for a strong and durable connection.

**For L Desk Assembly** - Use the 6 - 1" Self Threading Wood Screws and 6 Washers to attach the connecting plate included with the 24" Leg, between the main desk and return desk.

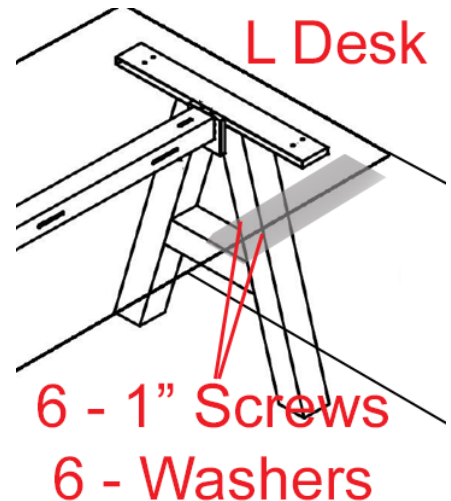

6 - 1" Screws  
6 - Washers