


Panel Bracket Installation Guide

Tip:

When assembling your Laminate Modular Office Cube always begin with Corner, 3-Way or 4-Way Connections. These connecting brackets can be more difficult since you will need to insert the bottom leveling glides through the brackets. This may require tipping the panels on their side for ease of connection. Straight line connections should be done last as the bottom brackets for straight line connection are an "H" shape so there is no need to insert glides through brackets

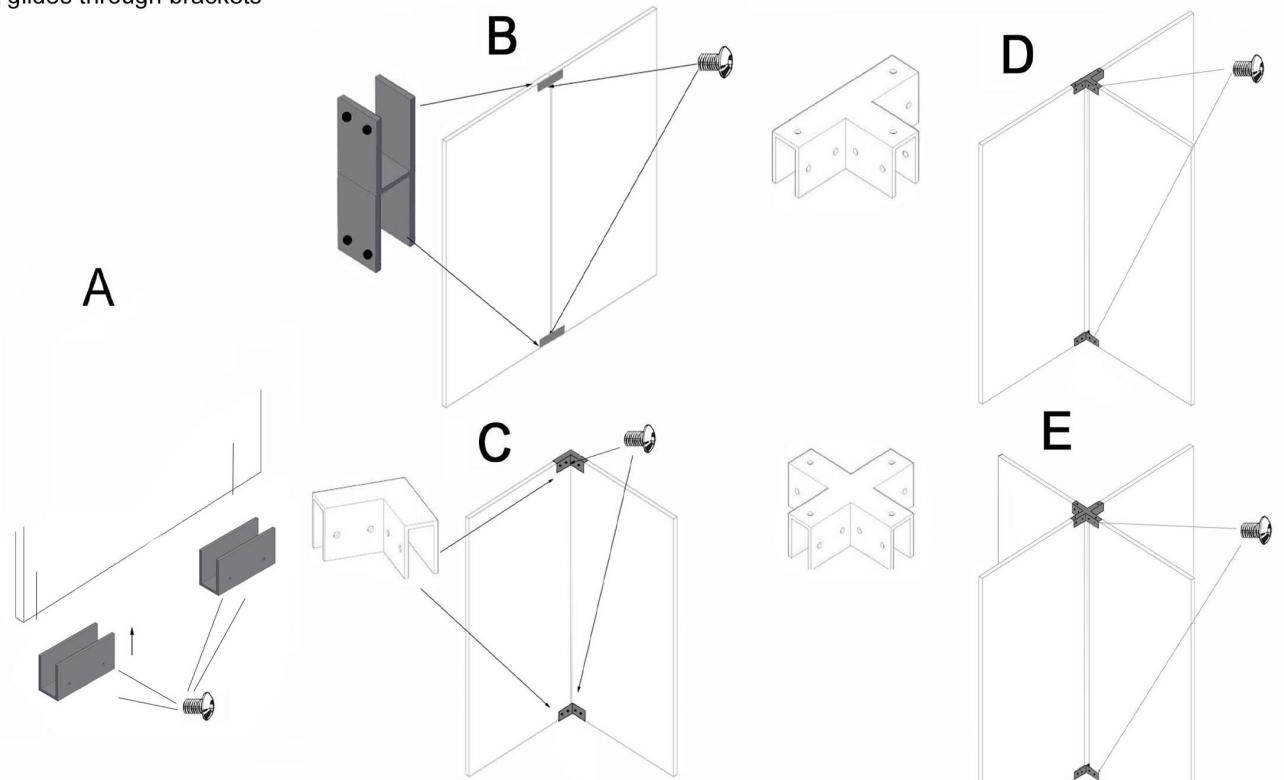

A - In-Line Panel Connection - Top of Panels: Attach Clip over seam of 2 panels. Attach with 2 screws per Clip.

B - In-Line Panel Connection - Bottom of Panels. Attach H-Bracket between 2 panels. Attach with 4 screws per Bracket.

C - L-Panel Connection: Attach L-Shaped Bracket between 2 panels, one on the top and one on the bottom. Attach with 4 screws per bracket.

D - 3-Way Connection: Attach T-Shaped Bracket between 3 panels, one on the top and one on the bottom. Attach with 6 screws per bracket.

E - 4-Way Connection: Attach T-Shaped Bracket between 4 panels, one on the top and one on the bottom. Attach with 8 screws per bracket.

Questions? Please call 1-800-443-5117.

Customer Service available 8:30 - 5:00 Central Time, Monday - Friday