





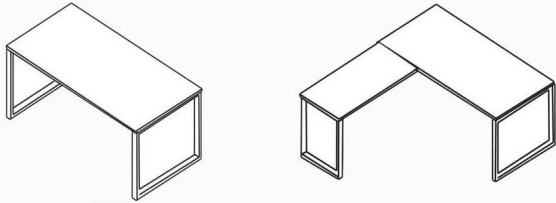

TrendSpaces Desk Series Solid Wood Desk / L-Desk Assembly Instructions



Questions? Please call 1-800-443-5117.

Customer Service available 8:30 - 5:00 Central Time, Monday - Friday

A	 Leveling Glide	4
B	 Bolt for Frame	1
C	 2-1/2" Self Threading Wood Screw	8 to 12
D	 Mounting Plate for return desk	1
E	 1" Self Threading Wood Screw for return desk	6

Tools Needed: - Allen Wrench (included)
- Phillips Screwdriver
(or power screwdriver)
- A helper

1.) Assemble on carpet or cardboard to protect parts during assembly. Assembly will require 2 people for safety. Place the 66" x 30" desk top finished side down.

2.) Assemble the metal desk frame using the (B) Bolts to connect the cross bar to the left and right side frames.

3.) Insert the (A) Leveling Glides then turn the metal desk frame upside down.

4.) Place the metal desk frame on top of the underside (unfinished side) of the desk top and center. Use the (C) Self-Threading Wood Screws to drill the screws into the wood to connect the base to the desk top.

5) Flip the desk over with a helper.

L-Desk Instructions:

6.) Turn the 24"x48" desktop over so that the finished side is face down.

7.) Set the metal leg on one end of the desk top and center. Attach the metal leg to the top using the (C) Self-Threading Wood Screws.

8.) Center the (D) Mounting Plate on the opposite side of the desk top. The bracket should overhang halfway off of the surface. Mount using 3 (E) Screws.

9.) Carefully flip return over and attach the (D) Mounting Plate to the underside of the 66" x 30" desk using 3 additional (E) Screws.

