


White Laminate Panel / Cubicle Assembly Guide

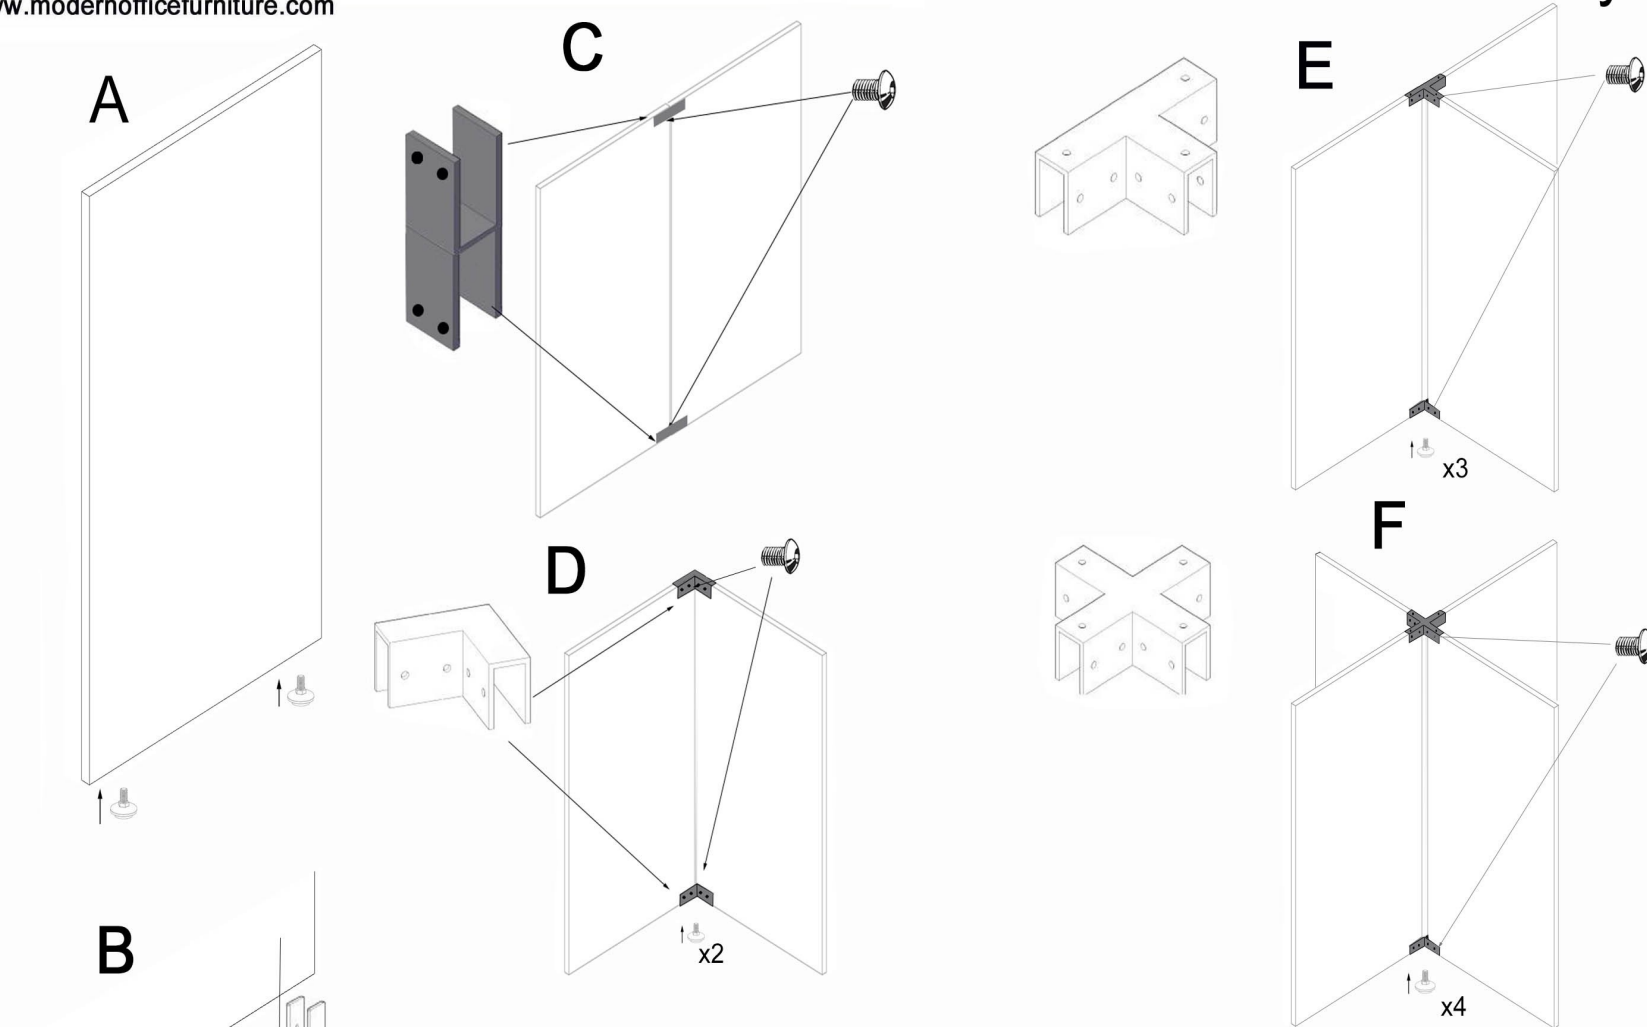

A - For non mobile panels, insert 2 leveling glides in each panel.

B - For panels being used with 45 degree foot kit, slide the panel in between the prongs and attach with one leveling glide on the underside. Then, screw in either your leveling glides or casters into the feet. Finish each screw head with a nut cap.

C - In-Line Panel Connection: Attach 2 H-Brackets between 2 panels, one on the top and one on the bottom. Attach with 4 screws per bracket.

D - L-Panel Connection: Attach L-Shaped Bracket between 2 panels, one on the top and one on the bottom. Attach with 4 screws per bracket. On the bottom bracket, insert 2 leveling glides through the bracket and into the panels.

E - 3-Way Connection: Attach T-Shaped Bracket between 3 panels, one on the top and one on the bottom. Attach with 6 screws per bracket. On the bottom bracket, insert 3 leveling glides through the bracket and into the panels.

F - 4-Way Connection: Attach T-Shaped Bracket between 4 panels, one on the top and one on the bottom. Attach with 8 screws per bracket. On the bottom bracket, insert 4 leveling glides through the bracket and into the panels.

Questions? Please call 1-800-443-5117.

Customer Service available 8:30 - 5:00 Central Time, Monday - Friday