

Team Standing Height Meeting Table Assembly Instructions



CHAR/MWAL/WH4272T

List of Hardware:

Part	Part
 Wood Dowel	 Cap
 Cam Pin	 Leveling Glide
 Cam Lock	 Grommet

Tools Needed:

- Phillips Screwdriver
- A helper!


1.) Assemble on carpet or cardboard to protect parts during assembly. Assembly will require 2 people for safety.

2.) Locate left & right side panels. Screw in the leveling glides by hand.

3.) Next, locate the front and back panels and insert all cam locks, pins and dowels into the holes.

4.) Connect the side panels to the front and back panels using the cam lock hardware. Use a Phillips Screwdriver to twist the cam lock to secure the cam pin on the adjoining panel.

5.) Attach table top in same manner. Your last step is to insert the grommets.

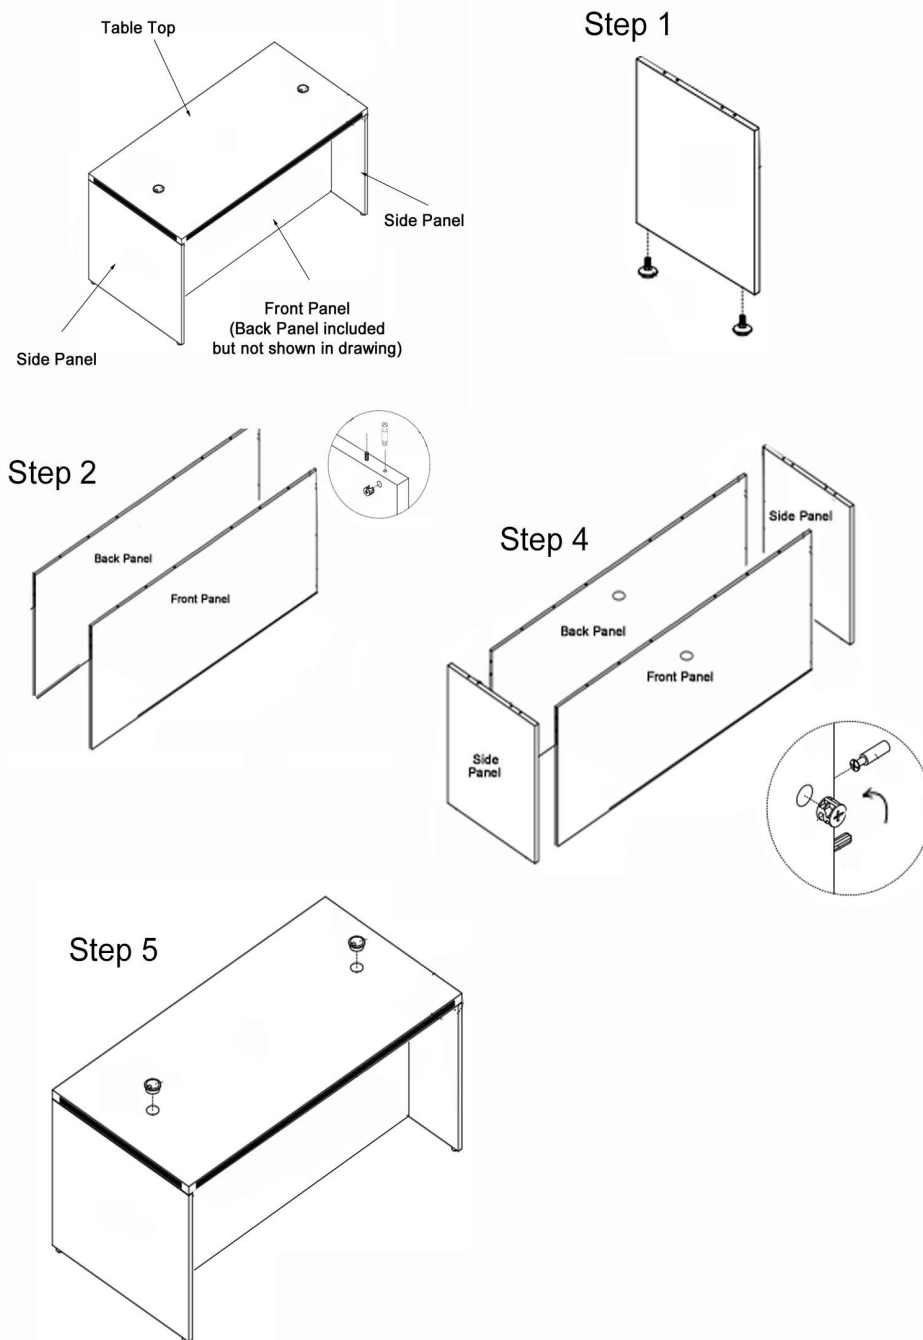

Questions? Please call 1-800-443-5117.
Customer Service available 8:30 - 5:00 Central Time, Monday - Friday