


# Wall Connector Installation Instructions

Questions? Call Customer Service at 1-800-443-5117, 8:30-5 Central Time, Mon-Fri

## This set includes: Tools Needed:

8 coupling brackets,  
 4 wall inserts  
 4 screws  
 4 set screws  
 4 washers (optional)

Phillips Screwdriver  
 Power Screwdriver  
 Straight Edge  
 A Helper

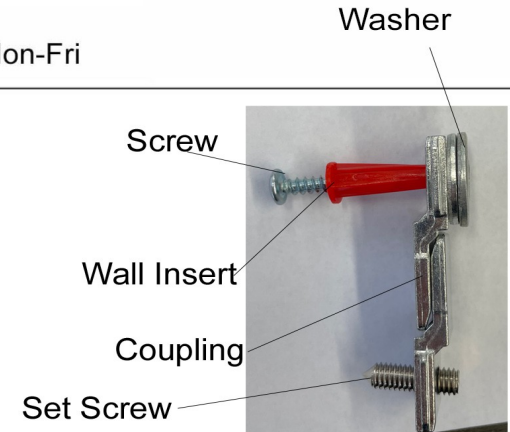

Your panel system can easily and securely mount to the wall by following these easy steps.

1- Begin by attaching the 4 coupling brackets to the edge of the panel as shown. Brackets will mount in top hole of each set of holes directed in downward position.

2 – Position panel against wall as desired. Now fold panel 90 degrees so it is flat against wall. Have helper hold firmly against wall.

3 - Using a straight edge, align the rule with the bottom set of holes perpendicular to the wall. Mark a dot on the wall that will align with the lower hole in the panel. This dot will mark where the coupling will screw to the wall.

4 – Using a 1/4” drill bit, drill into the sheetrock where the four holes are marked and then gently tap the sheetrock insert into the hole.

### Important Note

Before the next step of attaching upward facing couplings to the wall please determine if there is either a carpet or vinyl border at the wall base. If so, you may need to make use of washers included to extend the coupler connector slightly from the wall to account for the space of the vinyl base.

5 – Screw the four couplings into the wall inserts with or without the washers depending on your carpet/vinyl base situation.

6 – By lifting up the panel and aligning the couplings you should now be able to drop the panel onto the mounted wall coupling connectors.

