



Assemble on cardboard or carpet for protection. 2-person assembly team suggested.

**PARTS**



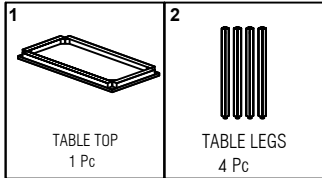


**HARDWARE**

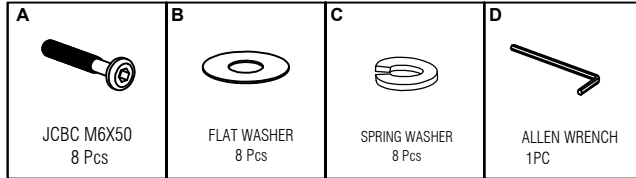

**PACKED WITH MX2 ML725**

**STEP 1:**

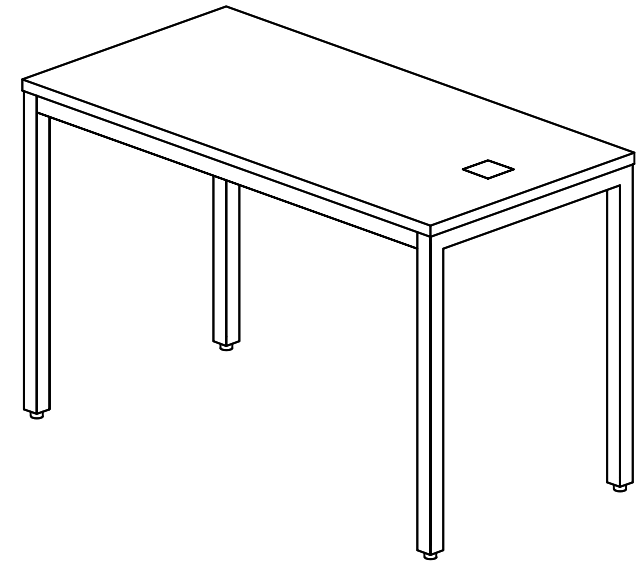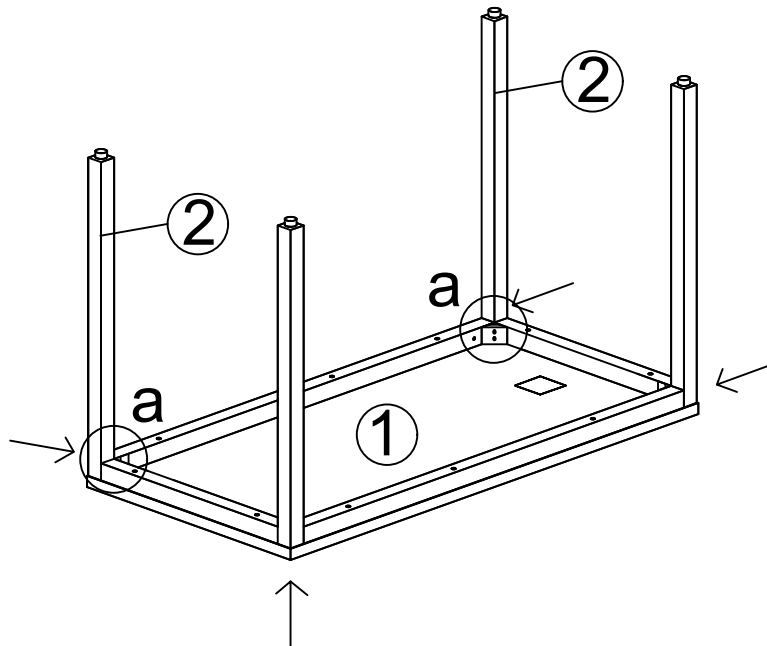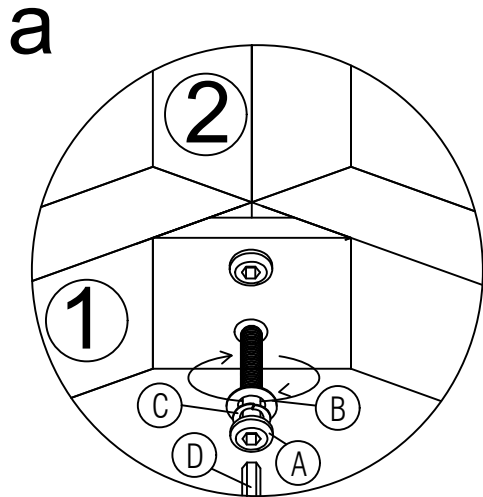


# Assembly Instructions

## Contrasts Rustic Sliding Door Cabinet


Questions?  
 Call Customer Service at  
 1-800-443-5117, Mon-Fri, 8:30 - 5PM Central Time  
 or email at  
 CustomerSvc@ModernOfficeFurniture.com

Assemble on cardboard or carpet for protection during assembly. 2-person assembly team suggested.


### COMPONENTS

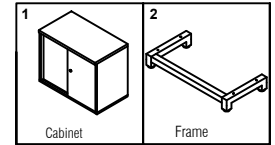

### HARDWARE

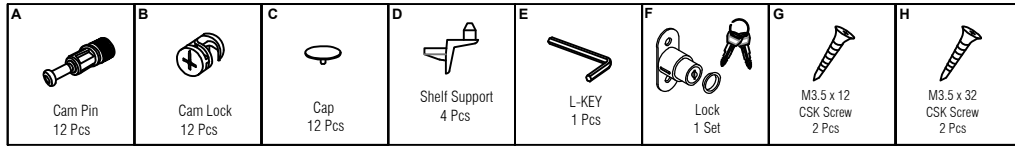


PACKED WITH MX2 LCS750

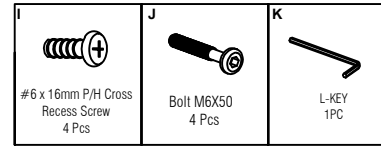


PACKED WITH MX2 MLB8042


### STEP 1

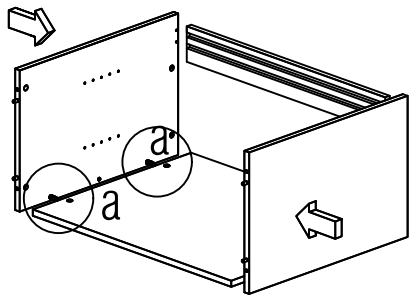


### STEP 2

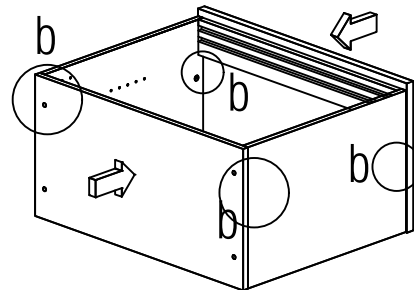











### STEP 3

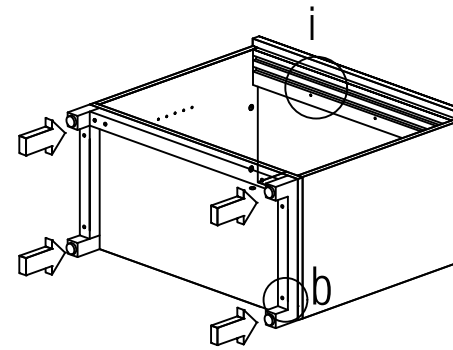

### STEP 4

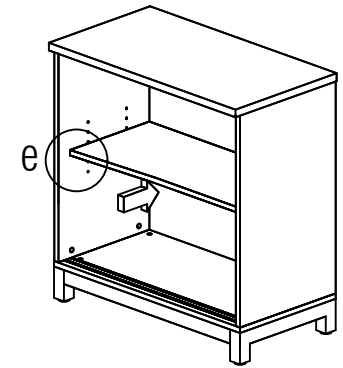



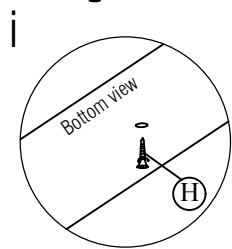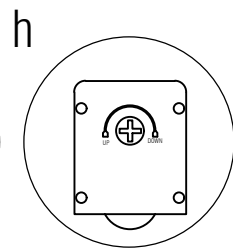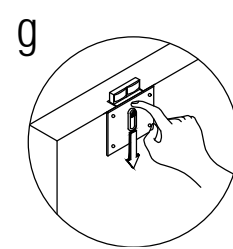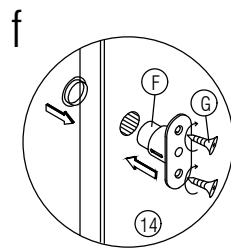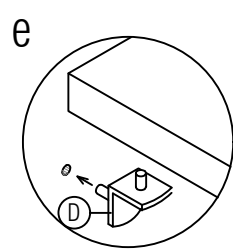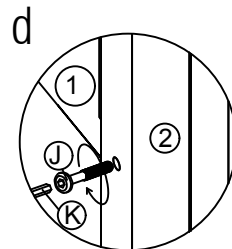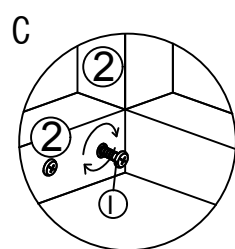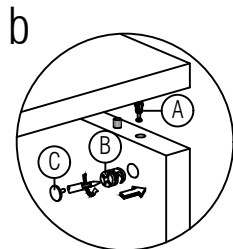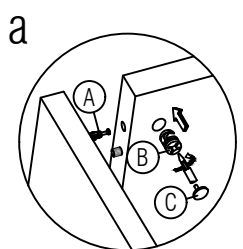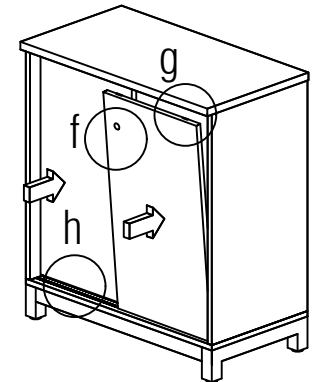






### STEP 5



Assemble on cardboard or carpet for protection during assembly. 2-person assembly team suggested.

### HARDWARE

<p><b>A</b></p>  <p>Cam Pin 27 Pcs</p>	<p><b>B</b></p>  <p>Cam Lock 27 Pcs</p>	<p><b>C</b></p>  <p>Cap 27 Pcs</p>	<p><b>D</b></p>  <p>Screw #3.5 x 16mm 24 Pcs</p>	<p><b>E</b></p>  <p>Screw #6X5/8 CSK RATTAN 12 Pcs</p>	<p><b>F</b></p>  <p>Shelf Support 4 Pcs</p>	<p><b>G</b></p>  <p>Door Hinges 4 Pcs</p>	<p><b>H</b></p>  <p>L-Bracket 6 Hole 2 Pcs</p>	<p><b>I</b></p>  <p>Allen-Key 1 Pc</p>
---	--	---	---	---	--	--	---	---

