



**INSTALLATION INSTRUCTIONS
PART #5038WHD / 5000 SERIES
2003-08 FORD CROWN VICTORIA**


Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!

PARTS LIST

<u>QTY</u>	<u>PARTS DESCRIPTION</u>	<u>QTY</u>	<u>PARTS DESCRIPTION</u>
6	3/8" X 1" HEX BOLTS	4	5/16" FLAT WASHERS
6	3/8" LOCK WASHERS	4	5/16" HEX NUTS
6	3/8" HEX NUTS	4	1/2" FLAT WASHERS
4	1/2" X 1 1/2" HEX BOLTS	4	1/2" HEX NUTS
4	1/2" LOCK WASHERS	1	5036PTP PASSENGER SIDE BRUSH GUARD
4	5/16" X 1" HEX BOLTS	1	5036PTD DRIVER SIDE BRUSH GUARD
4	5/16" LOCK WASHERS	1	5038D DRIVER SIDE MOUNTING BRACKET
4	CABLE TIE WRAPS	1	5038P PASSENGER SIDE MOUNTING BRACKET


INSTALLATION INSTRUCTIONS

STEP 1. BEGIN BY NOTCHING THE DRIVER SIDE FRONT BUMPER FASCIA. MEASURE ALONG THE TRIM CHANNELS 5 1/2" AND 8 1/2" AND MARK TWO VERTICAL LINES AS SHOWN IN DIAGRAM. USING A UTILITY KNIFE CUT AND REMOVE THE BUMPER FASCIA BETWEEN THE LINES.

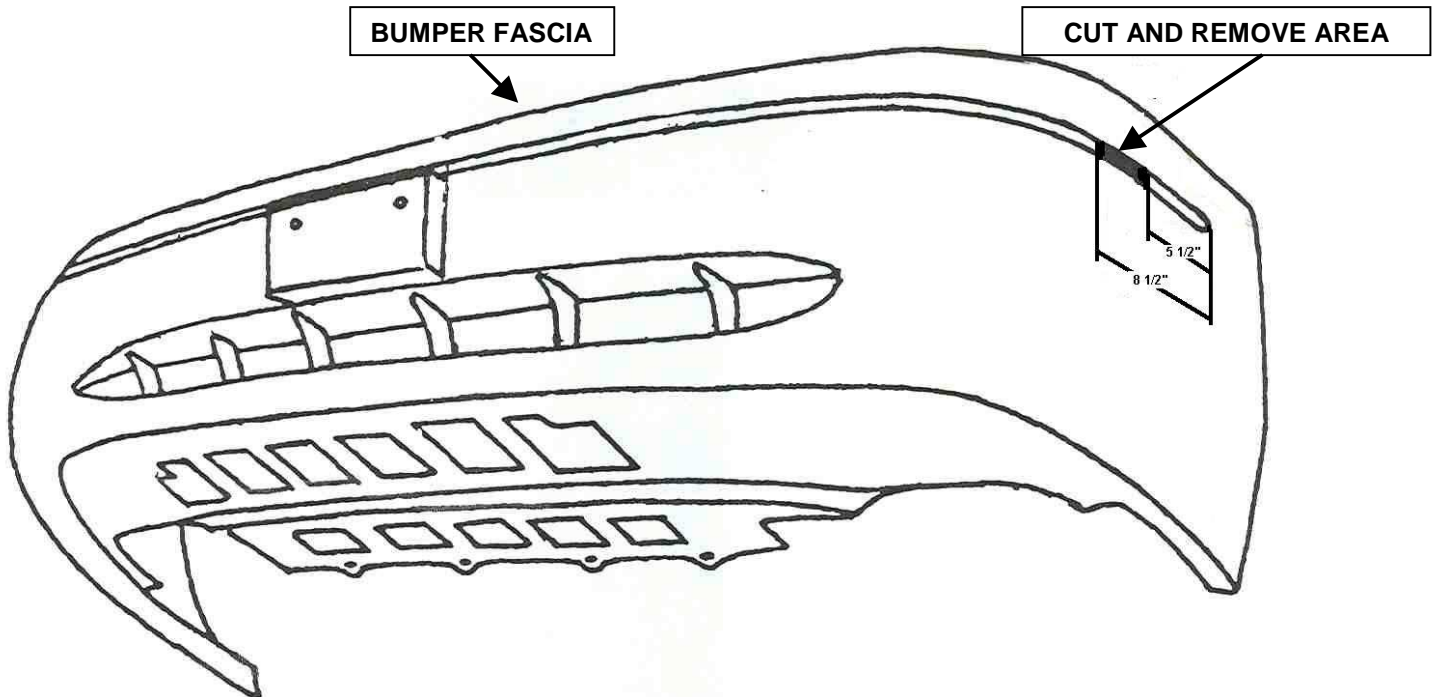

STEP 2. REMOVE THE (2) OUTER HEX NUTS AND BOLT PLATE SECURING THE DRIVER SIDE BUMPER BRACKET TO THE FRAME.


STEP 3. ATTACH 5038D MOUNTING BRACKET TO THE FRAME USING THE 5/16" FASTENERS. (FINGER TIGHTEN ONLY).

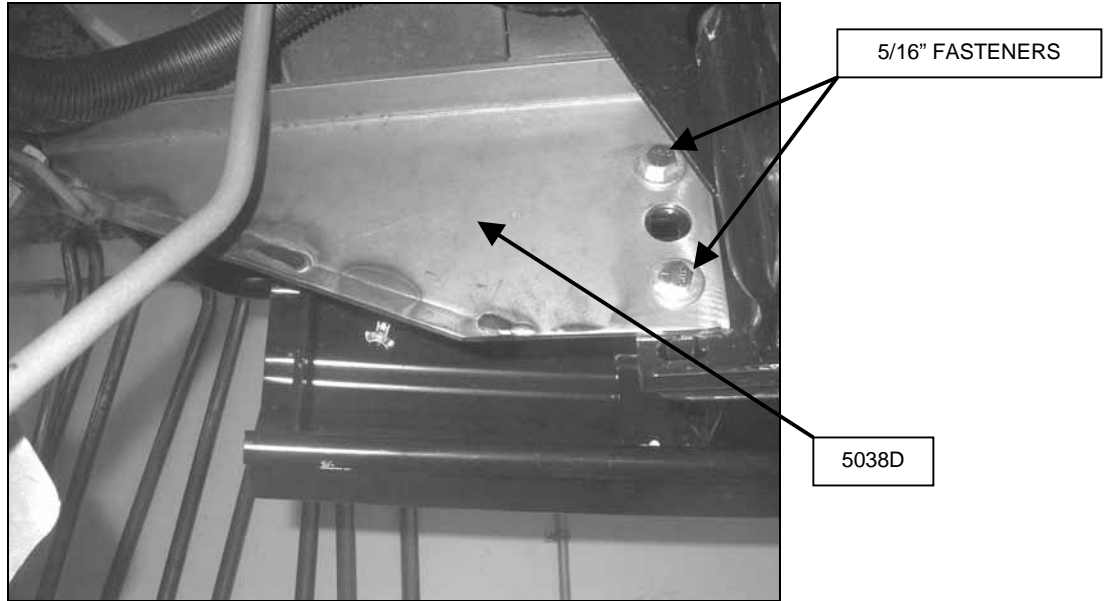

STEP 4. INSERT THE DRIVER SIDE BRUSH GUARD MOUNTING TAB THROUGH THE CUT OUT IN THE BUMPER FASCIA AND POSITION IT ON THE BOTTOM OF THE MOUNTING BRACKET TAB.

STEP 5. ATTACH THE BRUSH GUARD TO THE MOUNTING BRACKET USING THE 1/2" FASTENERS, AND TO THE PUSH GUARD USING THE 1/2" AND 3/8" FASTENERS. (FINGER TIGHTEN ONLY).

STEP 6. REPEAT THE ABOVE FOR THE PASSENGER SIDE THEN TIGHTEN ALL NUTS AND BOLTS.

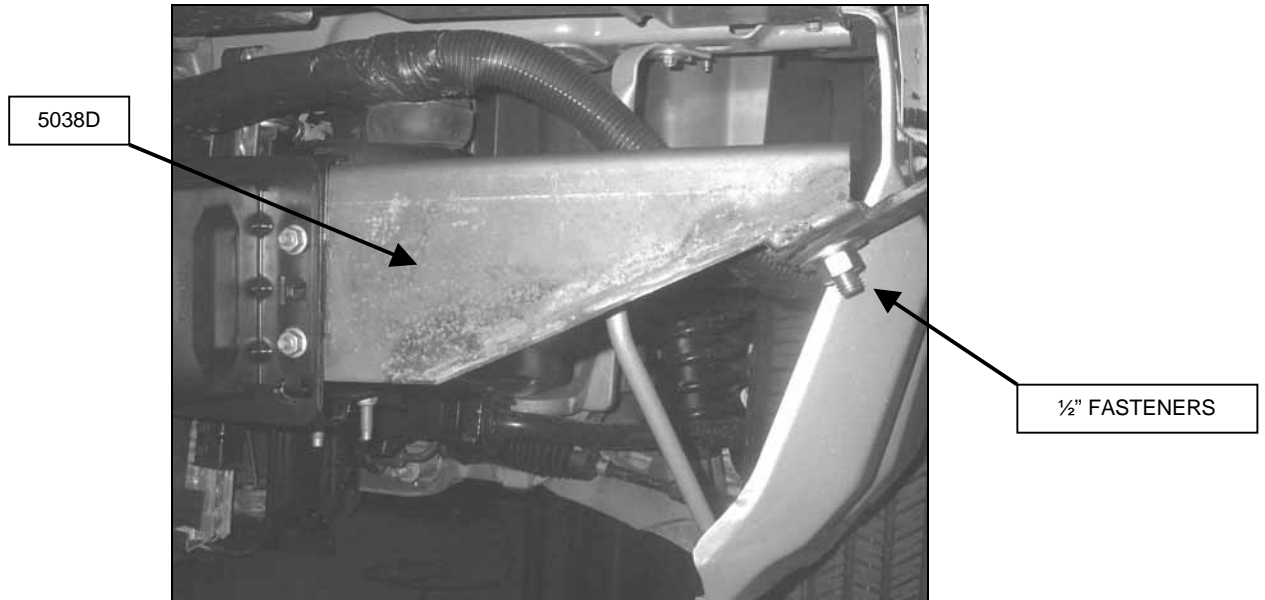

WARNING: It is the installer's responsibility, to tie wrap the wiring harness to the underside of the body to prevent the harness from coming in contact with the mounting bracket. Failure to do so may damage the harness and the vehicles electrical system.

GO RHINO! Products® XtremeRacks™ QuickRacks®
591 W. Apollo St. Brea, CA 92821
(714)255-0420 (888)427-4466 FAX(714)529-5252