

Sunnytech Cat7 RJ45 Modular Crimping Tool


Installation guide

3 things that you need to complete a successful crimp:


A Sunnytech Cat 7
RJ-45 Modular
Crimping Tool



A Sunnytech Cat7
RJ45 Crimp Plug

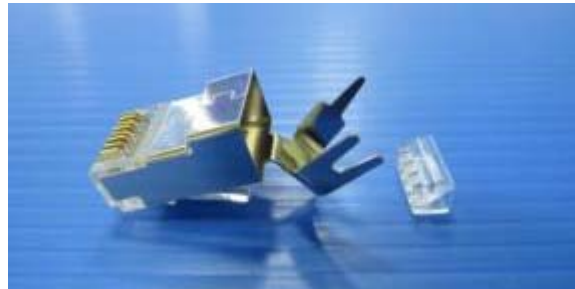

A Sunnytech Cat7/7a
Cable

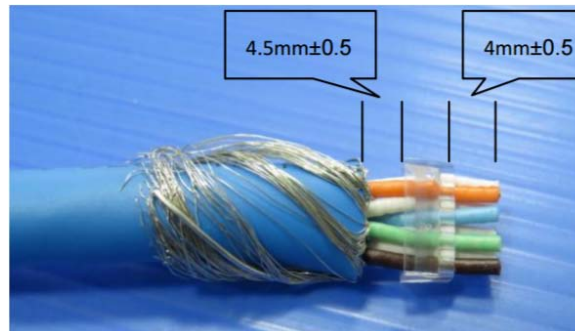


ACTION

Step 1

Slide conductors into insert,
and leave White space
around 4.5mm.

Step 2

Push cable and insert into PLUG body.

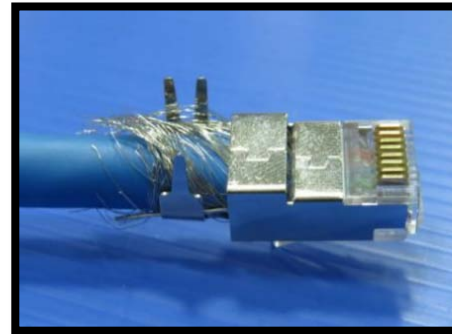


Step 3

Put the plug into a Crimping tool for Termination.



Step 4

Press the Crimping Tool hard to make the plug and tail in shape

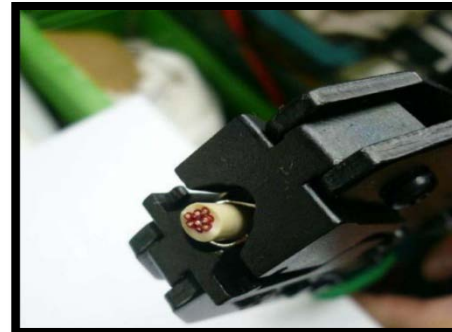

Step 5

Release from the Crimping press and the Plug is now fully installed on the cable.

