



FALCON RIDGE

+1(800)-213-7981

Instructions for Installation and Care of Kawasaki KRX 100 Soft Door Kit

52-10099-Z - KAW-KRX-SDK01

Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab Material is Flammable.

1. Be sure to read these instructions thoroughly before opening and installing the Kawasaki KRX 1000 Soft Door Kit. The installation is best done when the temperature is 70 degrees F or warmer. The temperature affects the adhesive Velcro, if conditions prevent installing in warmer weather, store the adhesive Velcro at room temperature prior to installation.
2. Carefully open the carton and remove the enclosure on a large flat surface that is clean and free of dirt.
3. Check the parts included in the carton with the parts list shown below:

Included Parts:

Soft Doors (Front)	2pcs
2in Adhesive Backed Hook Velcro	18pcs x 3in Length
2in Adhesive Backed Hook Velcro	2pcs x 5in Length
Snap Studs	20pcs

If any parts are damaged or missing, please contact customer service at (606) 845-7439.

Note: Loosening or even removing a previously installed windshield or top will make installation much easier.



Tools Needed for Installation:

1. Phillips Screwdriver or Electric Screwdriver with Phillips bit.

Note: If using an electric screwdriver, set torque to a low setting to avoid overtightening while installing the snap studs. This can damage the body panels.

Soft Door Installation

1. Begin by holding the front door up to the frame and attach it using the double-sided Velcro strips sewn onto the edge of the door. The edge of the door should be about 1/2in above the center line of the frame. Clean the area near each of the double-sided Velcro straps. At location of each double-sided strip, take one of the 3" adhesive Velcro strips and adhere it to the inside of the frame. Then wrap the double-sided strip around it so that the adhesive strip holds it firmly in place. Also note the placement of the 5in adhesive Velcro strip in the top front corner on each side. The following diagrams shows how it should look.

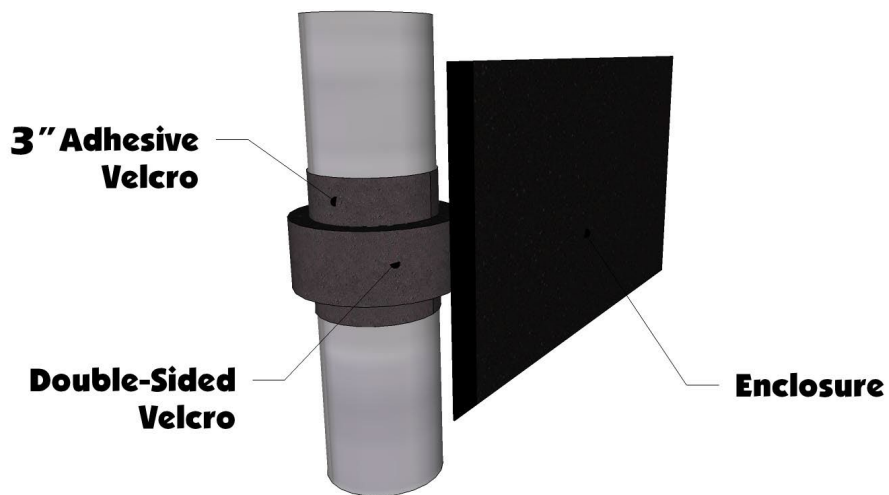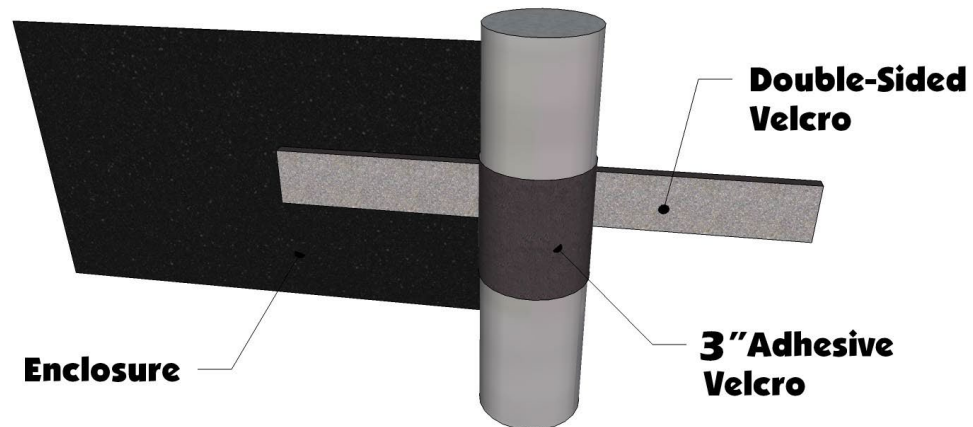

Location of each Velcro tab.



2. Next install the threaded snap studs into the body at the location of each snap. It is best to work from the front to the rear of the unit when installing the snap studs. The following image shows the location of each snap. Be sure to pull the door tight as you locate each snap stud to ensure proper fit of the door.



Cleaning and Storage Recommendations:

1. Before removing the Over Armour Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.
3. A special cleaner conditioner is available from Over Armour that will greatly increase the service life of the Cab Enclosure. In addition, if additional hook and loop sets are needed, they can also be ordered.

Return Policy

If for any reason you choose to return this product it must be returned within **30 days from date item is received**. You **MUST** package the product exactly **as it was originally packaged from the factory to get a full refund for the product!**

The vinyl windows should never be folded when packaging in the box or for storage purposes. Lay all the windows on top of each other with the canvas folded in between and the paper (if available) on both sides of the windows.

All returned products will be inspected upon arrival at the production facility and must be in unused, factory new condition to receive refund - a 25% restocking fee will apply.

If ordered from Falcon Ridge please call at 1-800-213-7981 to gain a return authorization number, use our preferred shipping carrier (UPS) to return the item (unless the item is defective, you are responsible for paying the shipping to return the item.) **Any returns submitted to Falcon Ridge without a return authorization number will be charged a 20% restocking fee.** If ordered from one of Falcon Ridge's many distributors, you must first call them and see what their return policy is. Once your item reaches our production facility, our customer satisfaction team will inspect your item to ensure unused, factory new condition. **NOTE: All windshields must be returned with the original protective film intact and not removed. Do NOT REMOVE if you have any intentions of returning the item. Refund/ replacement of a windshield will only be processed on items with original protective film or if the windshield is defective.**

Items must be properly packaged in the original shipping carton to protect them during transit and ensure your returned item arrives back factory fresh, and in new resalable condition (**any returned items that have been used, altered or damaged in any way will not be subject for a**

refund.) All contents including instruction manuals, accessories, hardware, Velcro, etc. must be included in your return shipment. Only items in OEM factory new condition will be approved. Once returned items are received, credit will be issued to the original credit card/ payment method used for the purchase. Outbound shipping and return shipping cost will not be refunded. Please allow 4 to 6 weeks for your refund to be processed.

Warranty

To The Owner of this Product:

Thank you for purchasing one of our Falcon Ridge Cab Enclosures, Tops &/or Windshields! Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.



WARNING: This product contains a chemical known to the State of California to cause cancer. For more information, go to www.P65Warnings.ca.gov.