



1-800-213-7981

Instructions for Installation and Care of Can-Am Defender
Soft Door Kit

52-10195- Z - CA-DEFENDER-SDK01

Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.

Be sure to read these instructions thoroughly before opening and installing the enclosure. The installation is best done when the temperature is 70 degrees F. or warmer. The temperature affects the adhesive Velcro, if conditions prevent installing in warmer weather it helps to store the adhesive Velcro at room temperature prior to installation.

1. Check over the parts included in the carton with the parts list shown below:

2" Adhesive Velcro Strip

4 each 36" long

2 each 30" long

Snap studs 24 each (2 extra)

Door Panels 2 each

If any parts are damaged or missing please contact customer service at (606) 845-7439.

2. Begin by cleaning the roll cage and plastic that surrounds the doors. Using rubbing alcohol is preferable. This step is very important for the Velcro strips to properly adhere.
3. Now start installation by placing the 2" adhesive Velcro strips around the outside edges of the upper door frame. As you install the adhesive Velcro you will need to pull it into a curve. The result will have wrinkles in it, this is normal, just pull it around as best you can making sure to rub down the Velcro good for maximum adhesion. Starting at the front of the frame first place the 32" strips on the front and top as shown in the following photos.






4. Next place the 30" strip on the rear vertical bar. See photo below



5. At this point all you need to do is attach the door to the Velcro along the top and sides. This is done so much easier if you start at the front corner and work your way around the frame.
6. Lastly for the doors you will need to attach the screws holding the bottom of the doors. **NOTE: It helps to put the snap studs into the sockets in the canvas first. Then one at a time push the screw into the plastic hard enough so that a mark is left behind. Pull the snap stud back out of the door and screw it into the plastic where the mark was made. Snap the door in place and move on to the next one.** The snaps along the front of the door wrap around the fenders and will go inside along the fender well. See photos below.

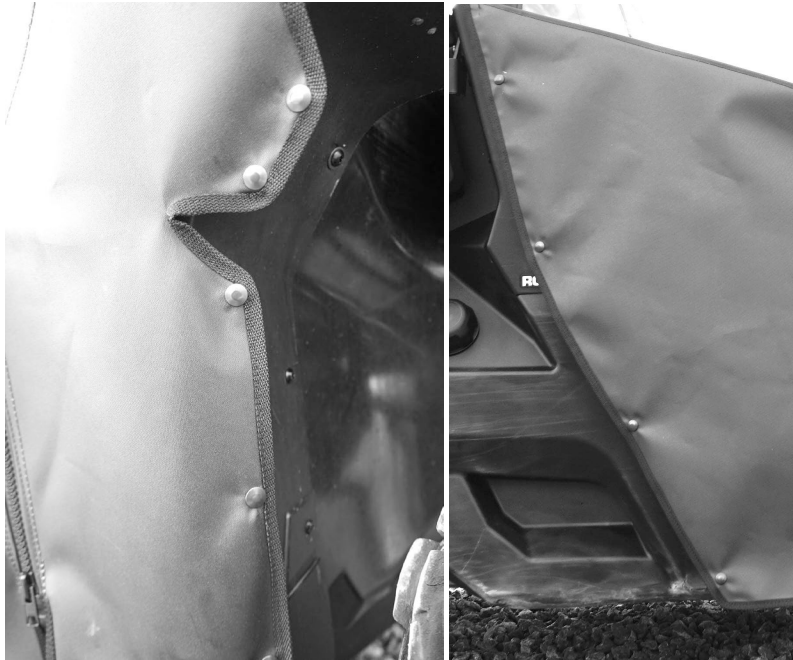

Cleaning and Storage Recommendations:

1. Before removing the Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.

Thank you for your purchase!

Warranty

To The Owner of this Product:

Thank you for purchasing one of our Falcon Ridge Cab Enclosures, Tops &/or Windshields! Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.



WARNING: This product contains a chemical known to the State of California to cause cancer. For more information, go to www.P65Warnings.ca.gov.