


Kit Contents		
Item	Description	QTY
1	Lock & Ride Anchor	2
2	8MM BOLT	2

Tools Required:
12mm Wrench

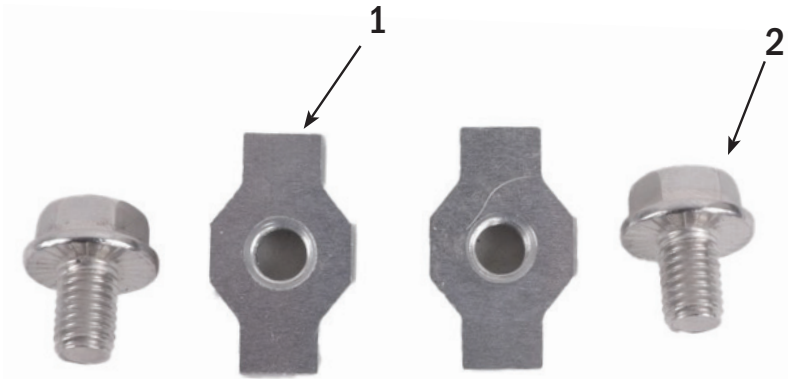

BEFORE YOU BEGIN


Before beginning assembly, inspect the kit to be sure all parts and tools are accounted for and not damaged. If there are parts missing or damaged, please contact Nivel Customer Service (800-959-0852)

Make sure the vehicle is parked on a flat surface, with the vehicle shifted into PARK, and the key turned to the OFF position. Remove key.

INSTALLATION

1

Align the anchor up to the cut out in the rail system and push the anchor into the track. Slide the anchor to the position desired.

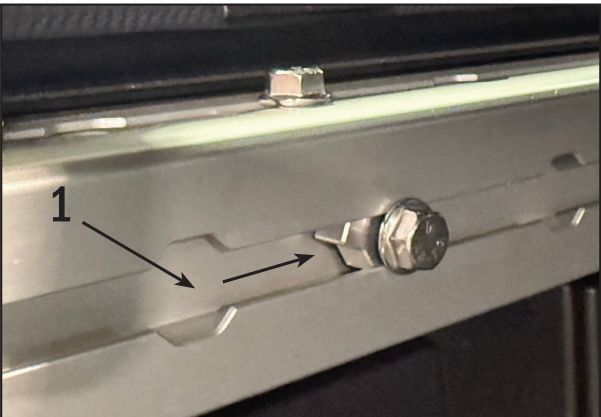

2

Remove the 8MM bolt, and align the holes in the accessory that is being installed. Install the 8MM bolt and tighten to the accessory.

