

INSTALLATION INSTRUCTIONS CFMOTO ZFORCE REAR VENTED WINDSHIELD

PART # 77-3201V-R

IMPORTANT NOTICES

READ AND UNDERSTAND THESE INSTRUCTIONS COMPLETELY BEFORE INSTALLATION TO AVOID INJURY TO YOURSELF, DAMAGE TO THE VEHICLE OR ACCESSORY.


- For proper installation, TWO people are required.
- Torque specifications must be followed when tightening bolts. Over-tightening any and/or all screws will cause cracks around mounting holes which is not covered by any warranty.
 - As specified on carton label, once protective film on shields is removed, product cannot be returned.
- As specified on carton label, damage caused by packaging staples is not covered by warranty. All staples must be removed prior to removing product from carton.
- Failure to follow these installation instructions completely may void any warrantable components and result in product damage or personal injury.
- Do not use Loctite or any other similar fastener adhesive. These types of products react to plastics and cause cracking. Not covered by any warranty.
- Our windshields are made from the highest quality material providing optimum transparency and clarity. Blurriness and/or extrusion marks may or may not appear when looking through windshield from a wide, side-angle. This is normal for all extruded clear plastic materials.
- The application of improper cleaners, abrasive and/or dirty cleaning towels can severely damage the product. Failure to follow cleaning recommendation (provided herewith) may void any warrantable components.

DEALER

These instructions contain important information for future reference and must be given to the customer at time of purchase or upon completion of installation.

Parts List (parts available with kit only and not available separately)


ITEM		PART NAME	DESCRIPTION	QTY
A		Windshield	CNC windshield cut-out made of 1/8" thick GE polycarbonate or equivalent	1
В		Vent grill	CNC vent grill cut-out made of 3/16" tint polycarbonate	1
INSTRUCTION BAG	D	Flop clamp set	Includes: 4 flop clamps, 4 rubber strip pads ½", 4 phillips truss head screws M6 x 16, 4 plastic shoulder washers M6 and 6 push type retainer ½"	1
	Е	Vent hardware	Includes: 2 carriage bolts M6 x 30, 2 thin plastic washers, 4 plastic washers M6, 2 rubber washers M6 and 2 female thread knobs M6	1

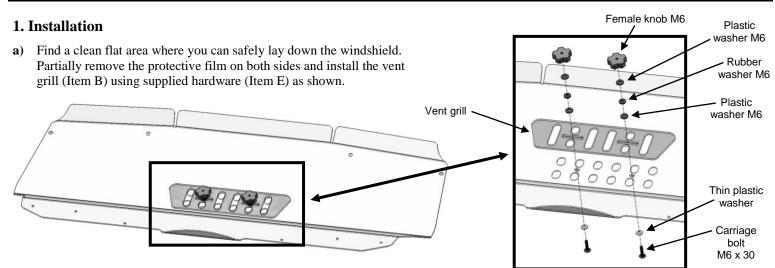


IMPORTANT NOTICES

Over-tightening any and/or all screws will cause cracks around mounting holes which is not covered by any warranty.


b) Peel and stick the rubber strips 1/4" to clamps (Items D) as shown below.

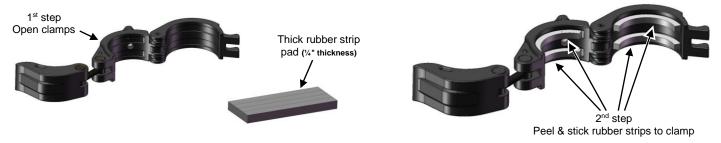

c) Attach the clamps to the roll-cage as shown below and pre-adjust tightening tension of all clamps. NOTE: Keep all clamp handles open as shown in step 3 below; this will allow you to move the clamps up or down when installing the windshield for the first time.

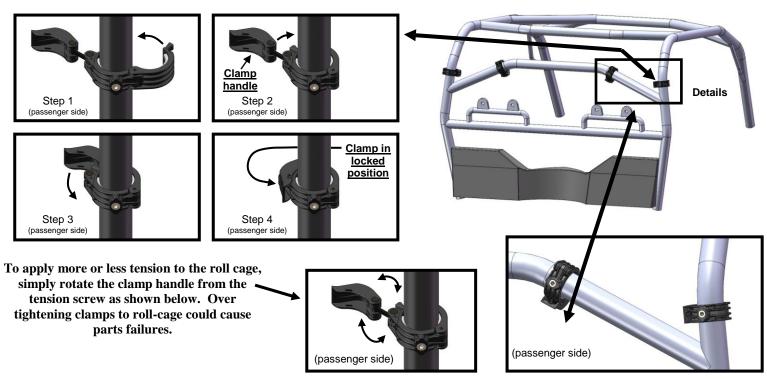


d) From behind the vehicle, first insert the lower windshield portion and lift to proper position as shown below.

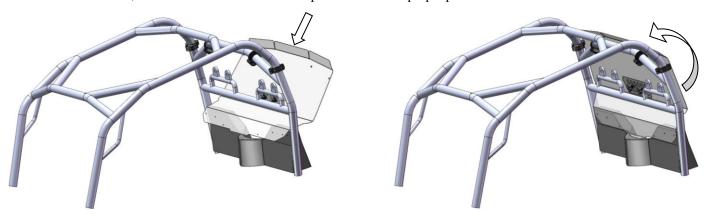


IMPORTANT NOTICES


Over-tightening any and/or all screws will cause cracks around mounting holes which is not covered by any warranty.

e) Secure the rear windshield top section to all clamps using supplied hardware (Item D) without applying final torque. Adjust the position of the windshield, secure all clamps in locking position [Ref: Step 4 - section c] and tighten all screws as shown below.

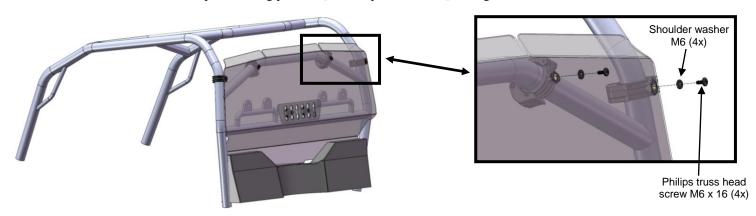

f) Using a ¼" drill bit, make 6 holes to the black panel located behind the seats using the windshield mounting holes as guide. Secure the lower windshield section using supplied push type retainers.

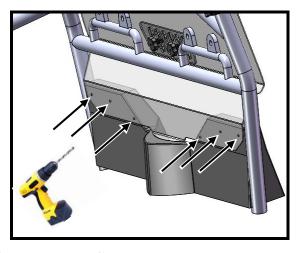

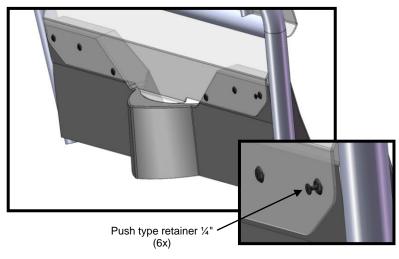

2. Maintenance and Care

Tighten all hardware after first use and periodically thereafter.

CLEANING:

- Rinse with lukewarm water; wash gently with mild soap or detergent and lukewarm water, using a soft cloth or sponge. DO NOT SCRUB
 or use brushes or squeegees.
 - Rinse again. Dry with soft cloth or moist cellulose sponge to prevent water spotting.
- To remove wet paint, glazing compound or grease, rub lightly with a good grade of VM&P naphtha or isopropyl alcohol, then wash and rinse. DO NOT USE GASOLINE.

NOTICE: Abusive cleaning procedures by hand washing or automated washing equipment will eventually result in visual hazing, loss of light transmission and coating delamination.

Compatible Cleaning Agents

Aqueous Solution of Soaps and Detergents

Joy Freon T.F. Palmolive liquid Top Job VM&P grade Naphtha Windex (with ammonia D)

MINIMIZING HAIRLINE SCRATCHES

For minimizing scratches and minor abrasions, mild automobile polish can be used.

Recommended products: Johnson Paste Wax, Novus Plastic Polish #1 and #2, Mirror Glaze plastic polish and Plexux1.

Testing polish on a separate Lexan sample is recommended. Be sure to follow product instructions carefully.