


AT-9706SP

2015-UP, ARCTIC CAT WILDCAT 1000
SXS, OVAL SLIP-ON

MBRP
INC.
PERFORMANCE EXHAUST

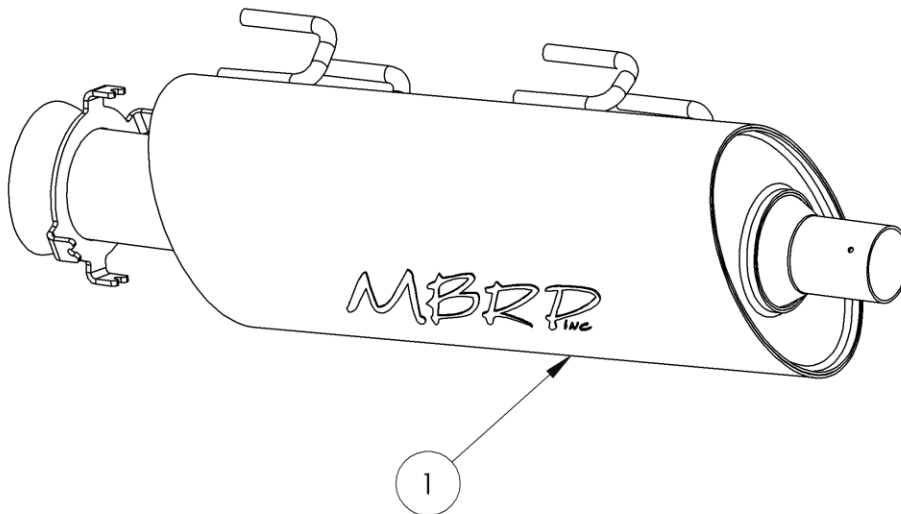

1. MUFFLER ASSEMBLY

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.



Figure 1

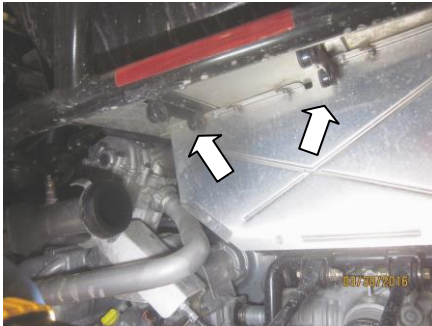


Figure 2



Figure 3



Figure 4



Figure 5

Removal of Stock Exhaust:

1. Unhook the four muffer retention springs. The springs will be re-used for installation. Refer to Figure 1.
2. Remove the muffer by sliding the hangers out of the rubber isolators. Refer to Figure 2.
3. Remove factory spark arrestor screw and spark arrestor. Keep for installation in the new Muffer Assembly. Refer to Figure 3.

Installation of MBRP Inc. Exhaust:

1. Install factory spark arrestor into the Muffer Assembly using the factory screw.
2. Slide the hanger rods into the rubber isolators on the vehicle and mate the Muffer Assembly inlet pipe to the end of the exhaust pipe. Refer to Figure 4.
3. Install the factory muffer retention springs. Refer to Figure 5.



Congratulations! You are ready to begin experiencing the improved performance and driving excitement of your MBRP Inc. ATV Exhaust upgrade. We know you will enjoy your purchase.