



**INSTALLATION INSTRUCTIONS: Polaris 570
mid-size, crew roof**

It is recommended that bolts remain "hand tight" until all bolts are installed.



Front Roof Panel



Rear Roof Panel



Rear Dust Panel



Center Roof Clamp Set (3 sets)



Side Roof Clamp (6)

**INSTALLATION INSTRUCTIONS: Polaris 570
mid-size, crew roof**

STEP 1



- Locate the holes to be used to install the Rear Dust Panel on the rear section of the ROPS.

STEP 2



- Using the provided bolts, install the Rear Dust Panel.

STEP 3



- Loosely set in place the 3 Center Roof Clamps.


**INSTALLATION INSTRUCTIONS: Polaris 570
mid-size, crew roof**

STEP 4




- Set the Rear Roof Panel first.
- Set the Front Roof Panel in, overlapping the rear panel.

STEP 5

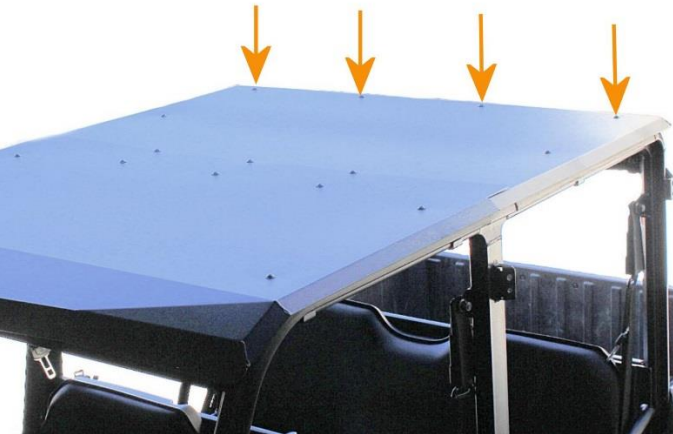

- Align the rear section of holes in the Rear Roof Panel with the corresponding holes of the Rear dust panel.
- Insert the provided bolts (with flat washer).
- Get the bolts started but leave loose for future adjustment.


STEP 6

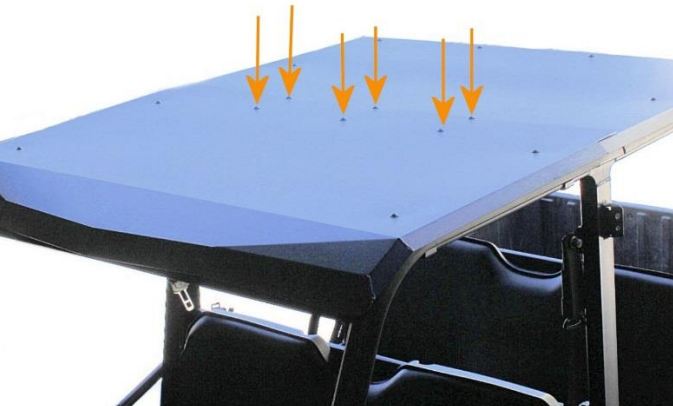

- Align the corresponding holes of the Front and Rear Roof Panels with the Center Roof Clamps previously installed (step 3).
- Insert the provided bolts (with flat washer).


**INSTALLATION INSTRUCTIONS: Polaris 570
mid-size, crew roof**

STEP 7

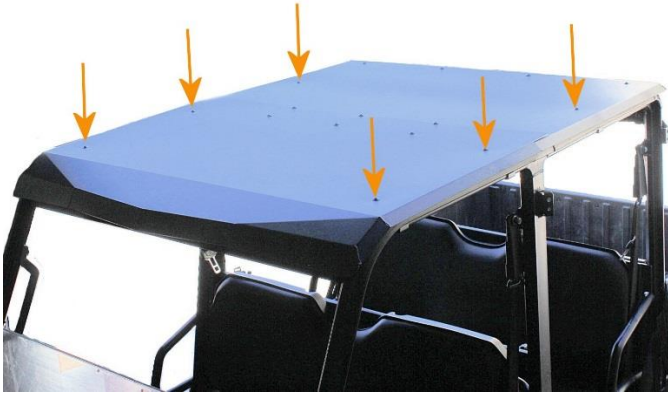


- Install the Side Roof Clamps.

STEP 8

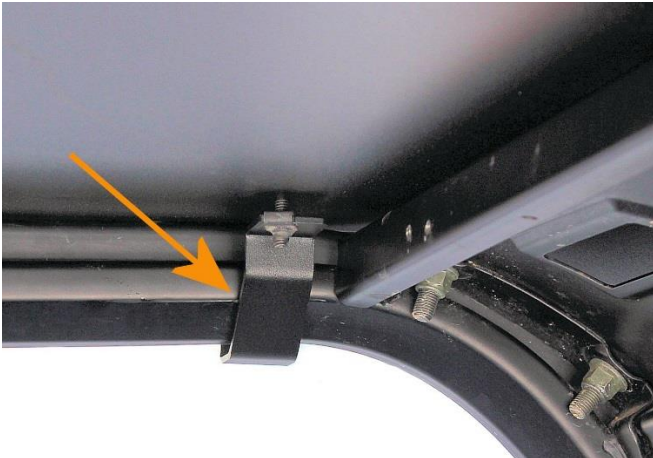

- Align the corresponding holes with the front and rear roof panels and insert the provided bolts (with flat washers).
- Shown here is how the clamp fits around the profile tubing.

STEP 9

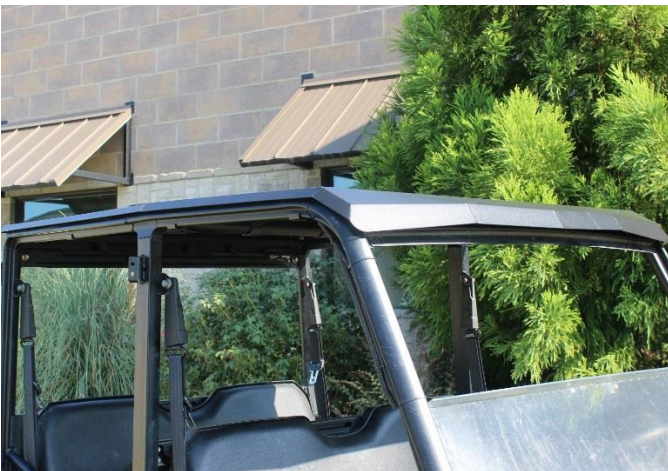

- Make any final adjustments to square the roof.
- Tighten all bolts.