



(Installation performed on 2016 Polaris RZR XP[®] 4 1000 EPS)

Read instructions and view illustrations before beginning.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Thank You

For Choosing

SUPERATV.COM[®]

Liability Statement


SuperATV's[®] products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV[®] and is not recommended. SuperATV's[®] products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV[®] to verify that they will work together.

Although SuperATV[®] has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV[®] urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV[®] products, user agrees that should damages occur, SuperATV[®] will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV[®], nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV[®]. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV[®] will warranty only parts provided by SuperATV[®]. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV[®]. SuperATV[®] parts and products are not warranted if item was not installed properly, misused, or modified.

kit contents continue on following page

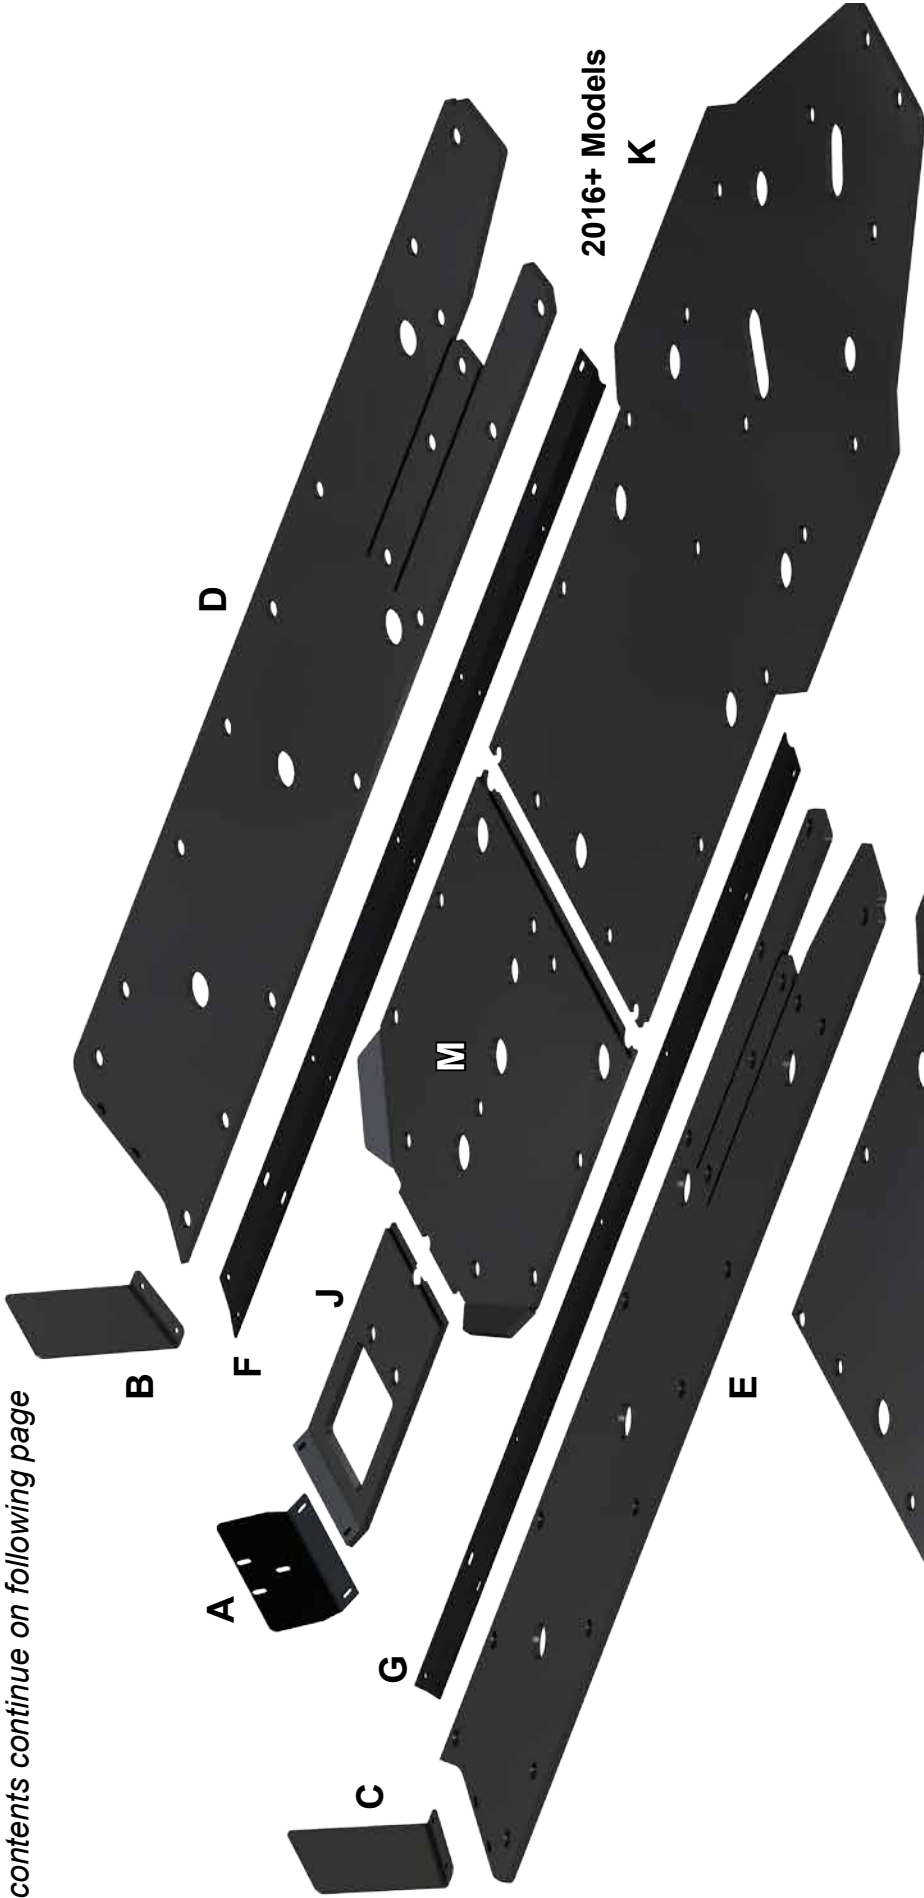

2016+ Models
K



2015 Models
K*










2015 Models must
use this Spacer

Item	Description
A	Front Metal Plate
B	Right Splash Guard
C	Left Splash Guard
D	Right Plate
E	Left Plate
F	Right Bracket
G	Left Bracket
J	Front Plate
K	Rear Plate
M	Center Plate



kit contents continued



Discard any remaining hardware.

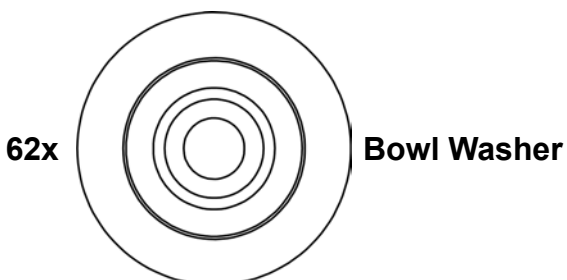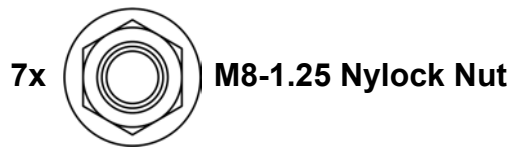



Bowl Washers will be used when installing Plates unless noted

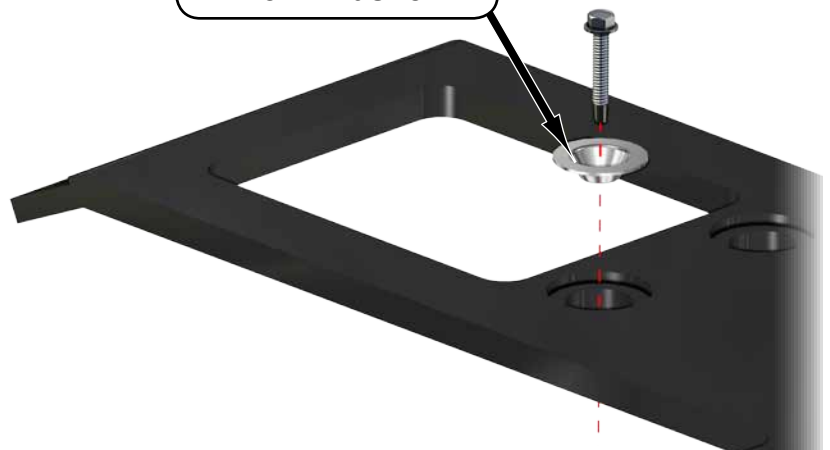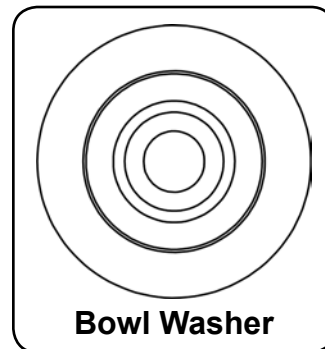


Keep all components removed from machine.

Gently flip machine onto its side and remove stock Skid Plates.

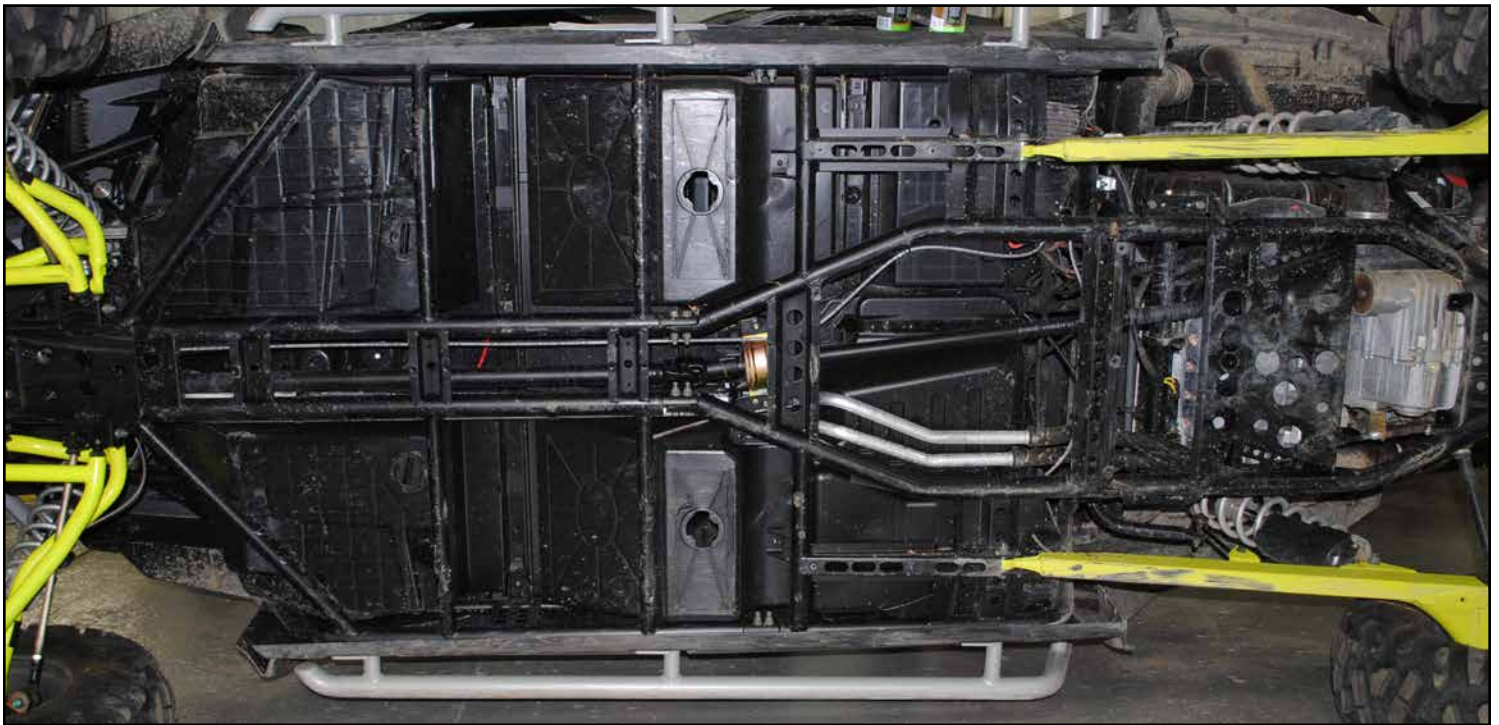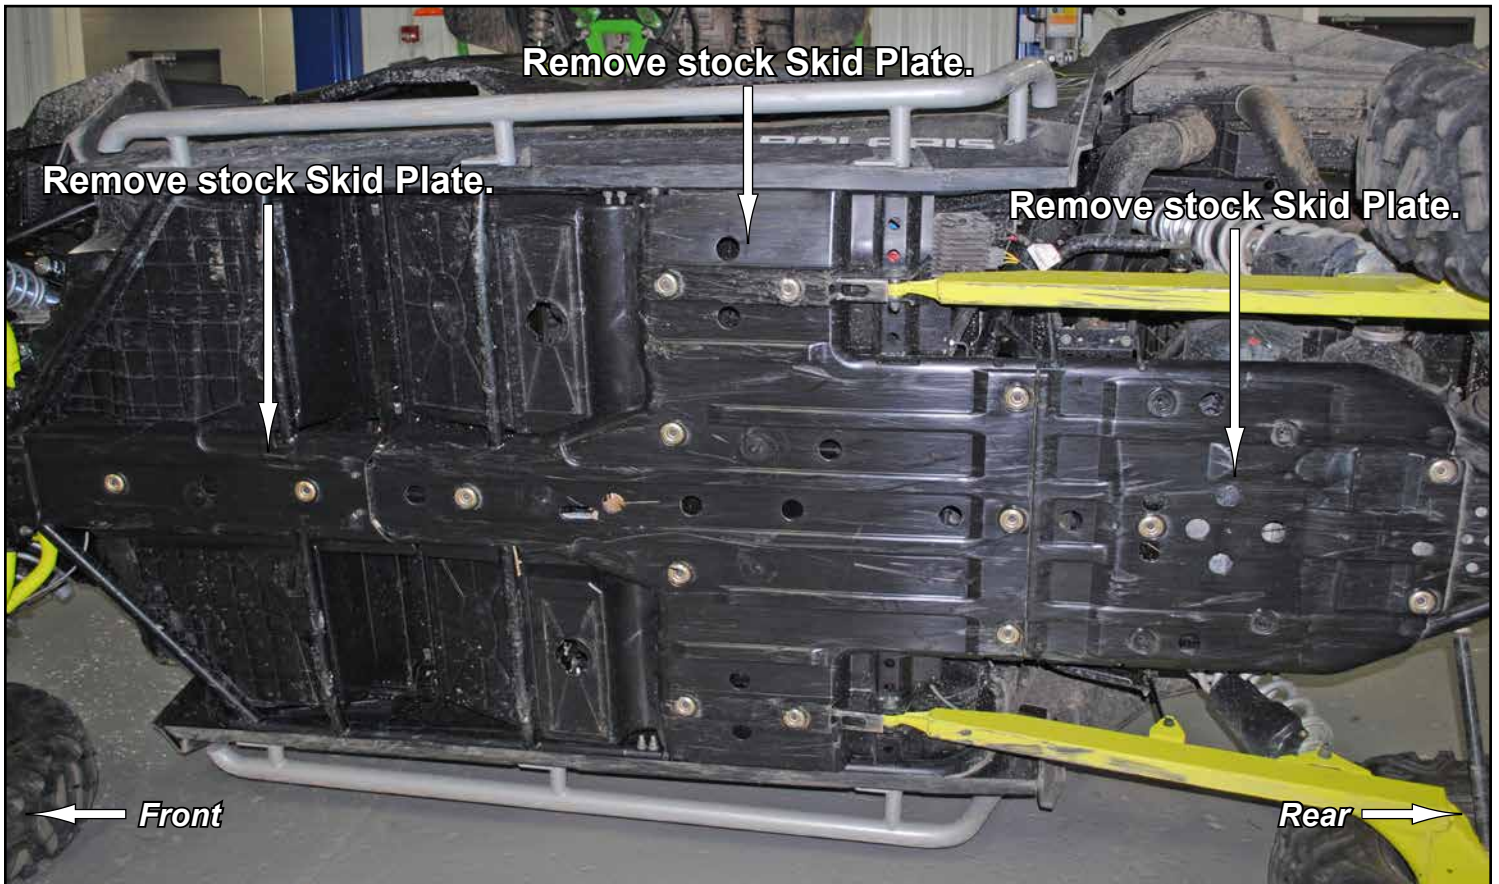

DO NOT TIGHTEN ANY HARDWARE COMPLETELY UNLESS NOTED





Install Rear Plate (K) with hardware shown.

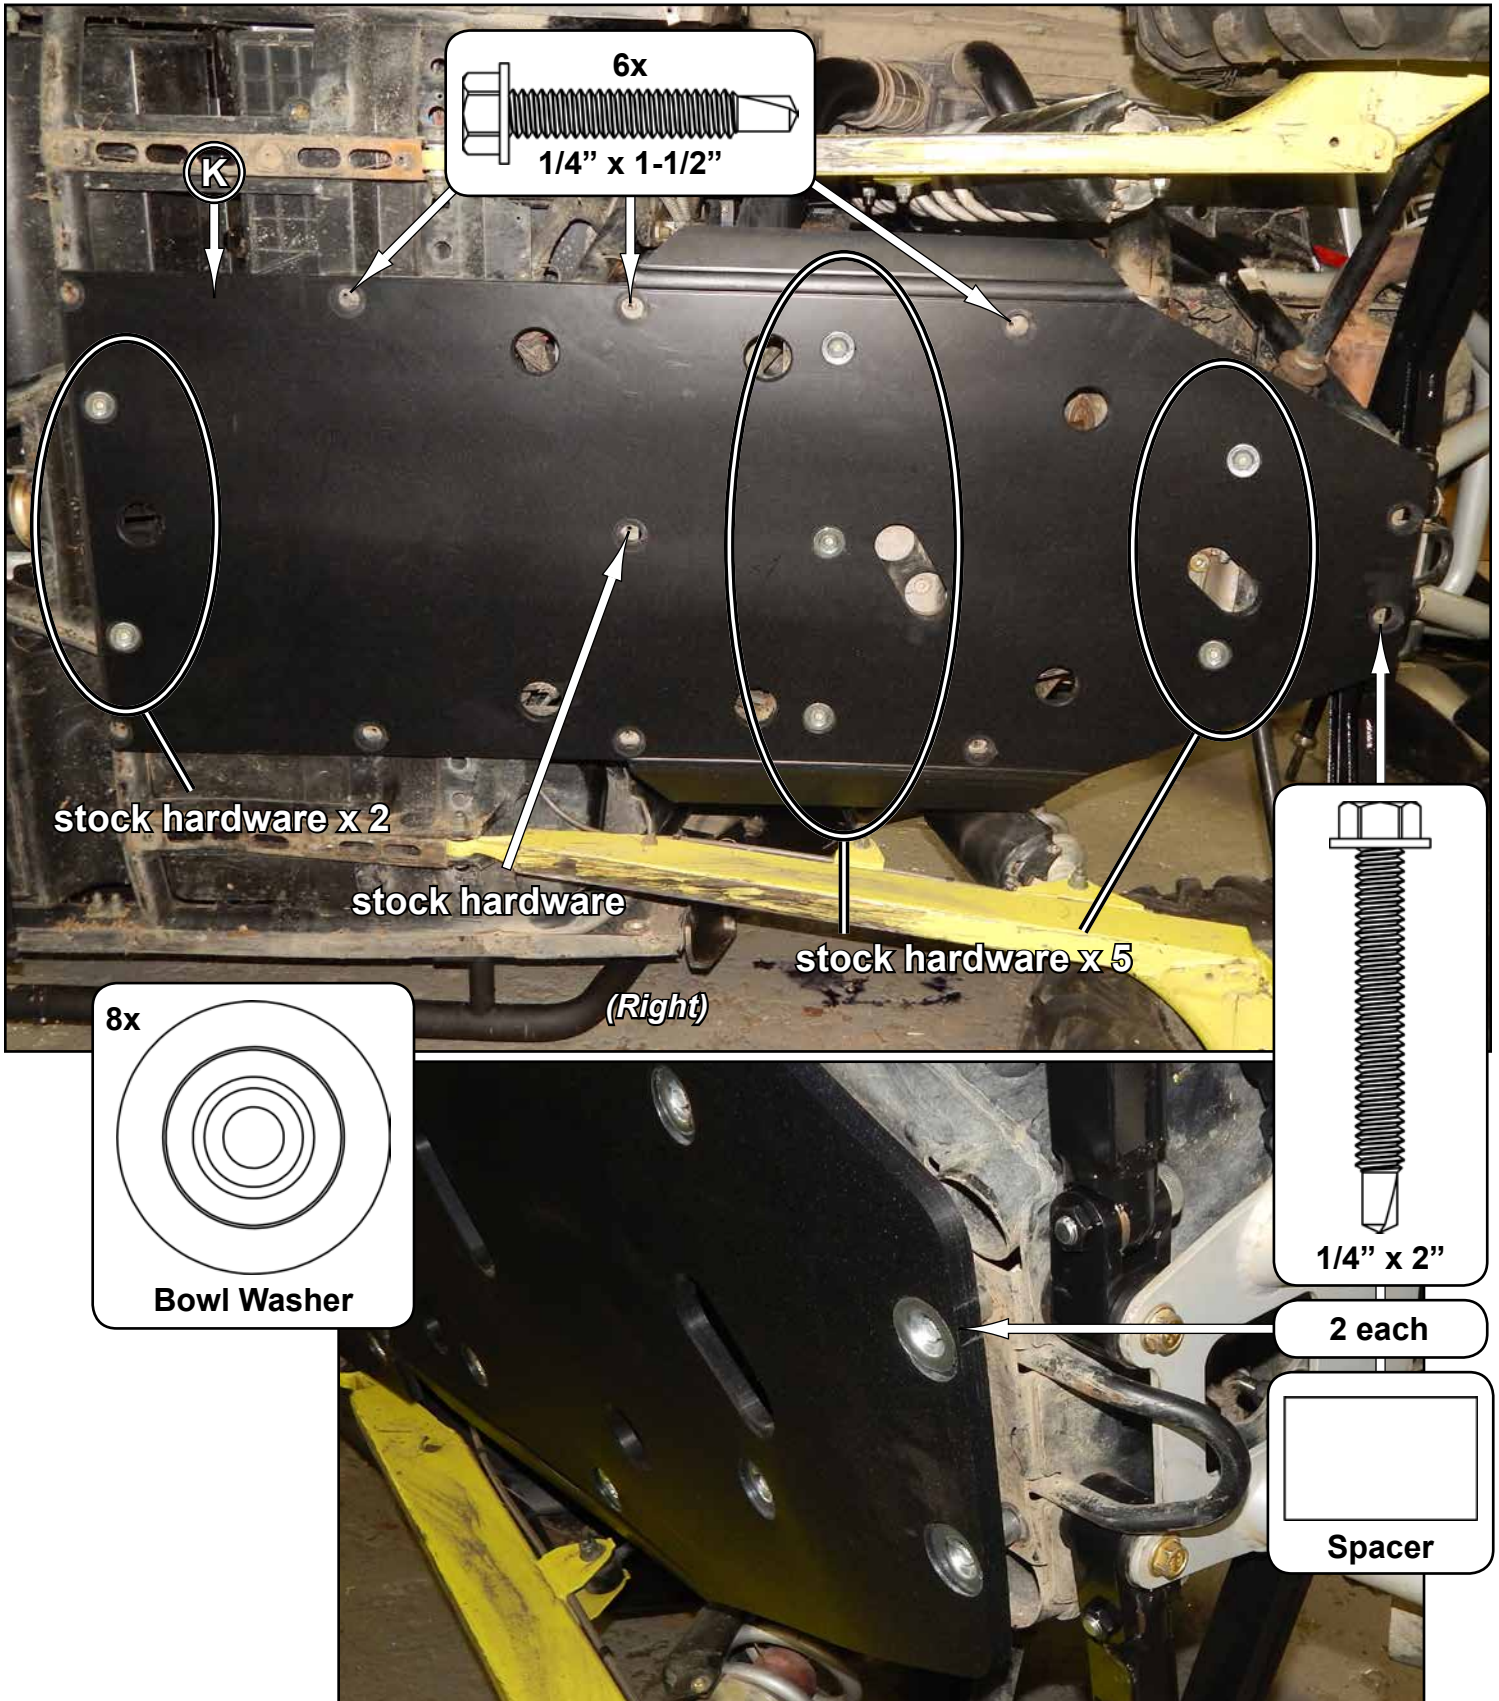




2015 models see next page for Rear Plate (K) installation.

2015 models:


(Left)

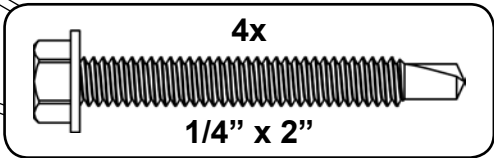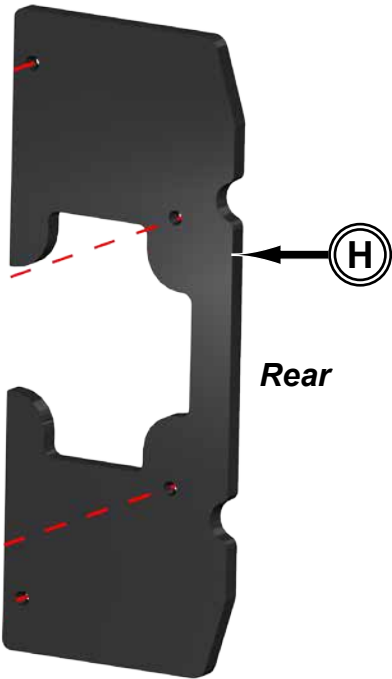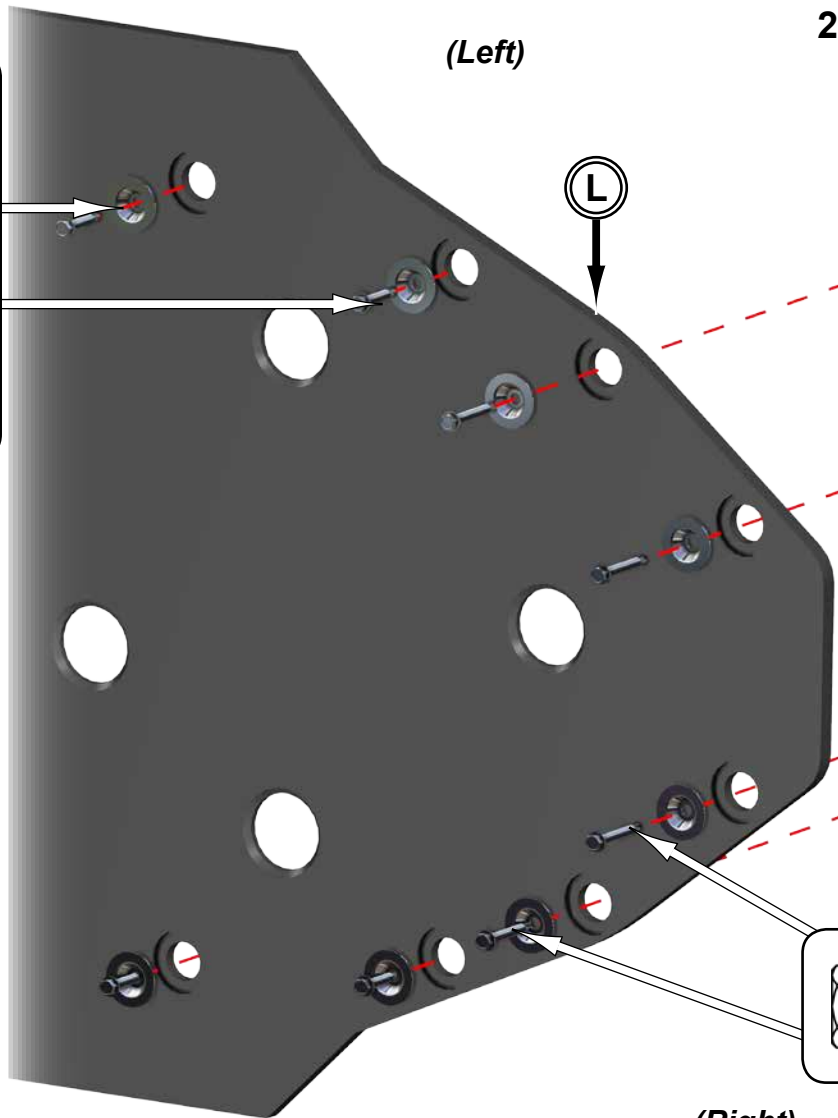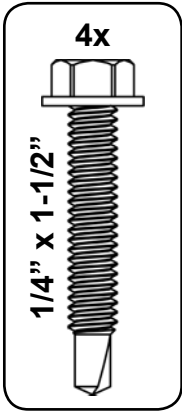


(Right)

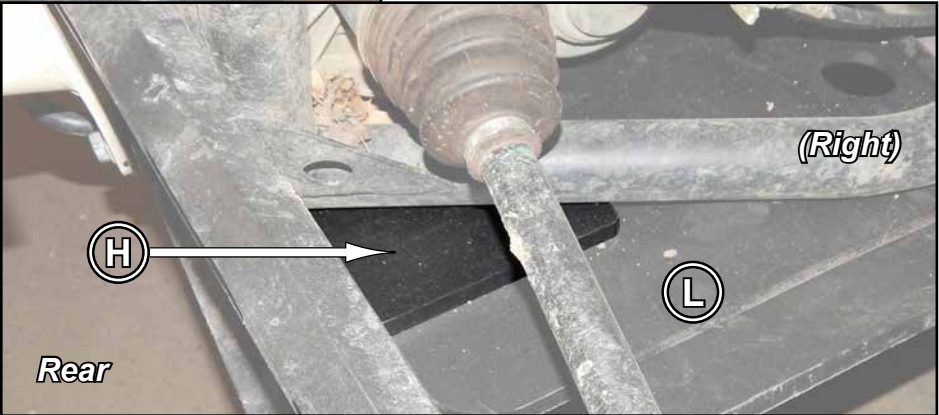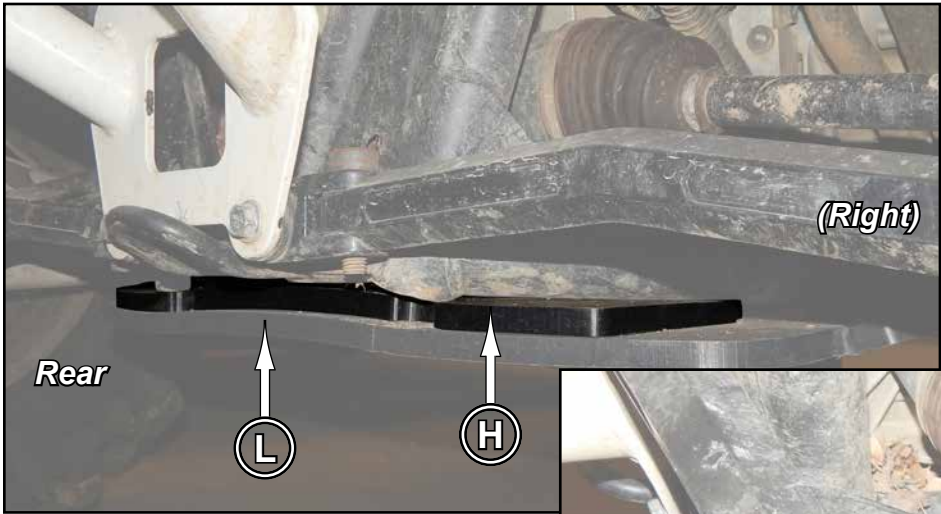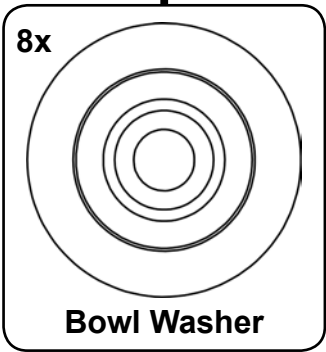

Install Center Plate (M) with hardware shown.

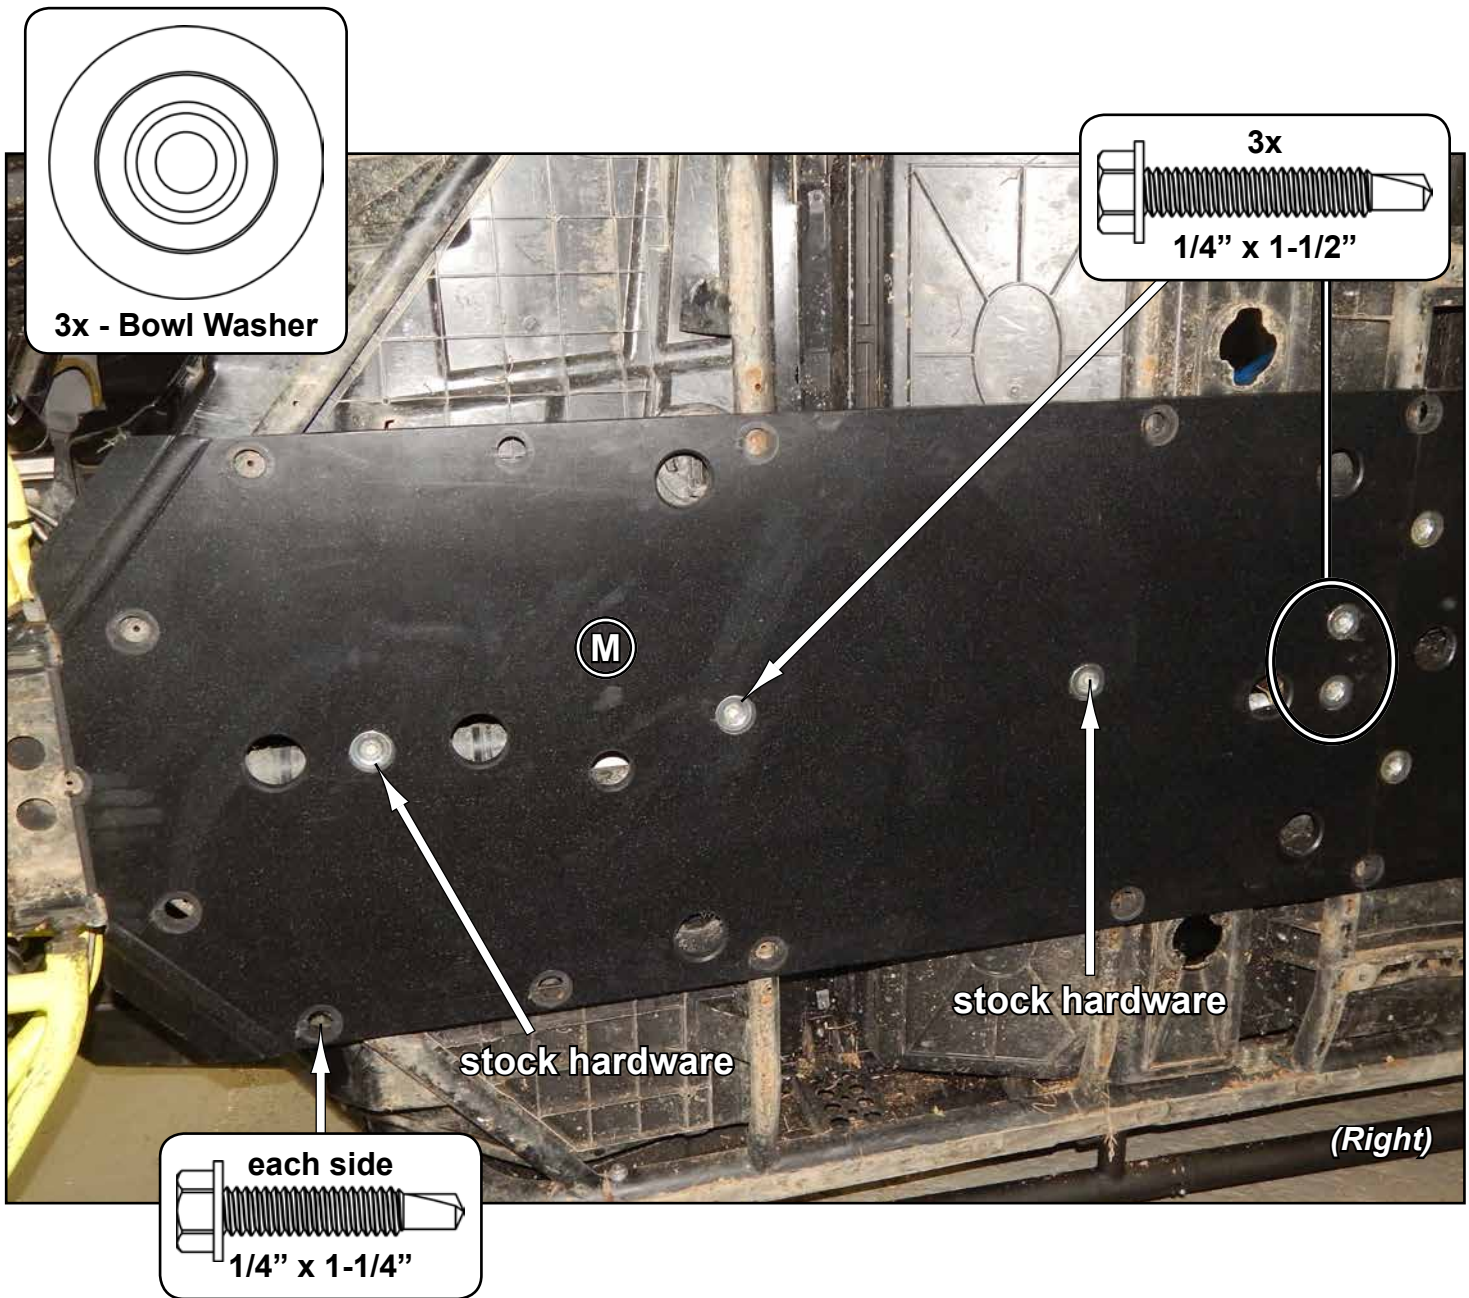

- Install Front Metal Plate (A) to Front Plate (J) and Frame with hardware shown.

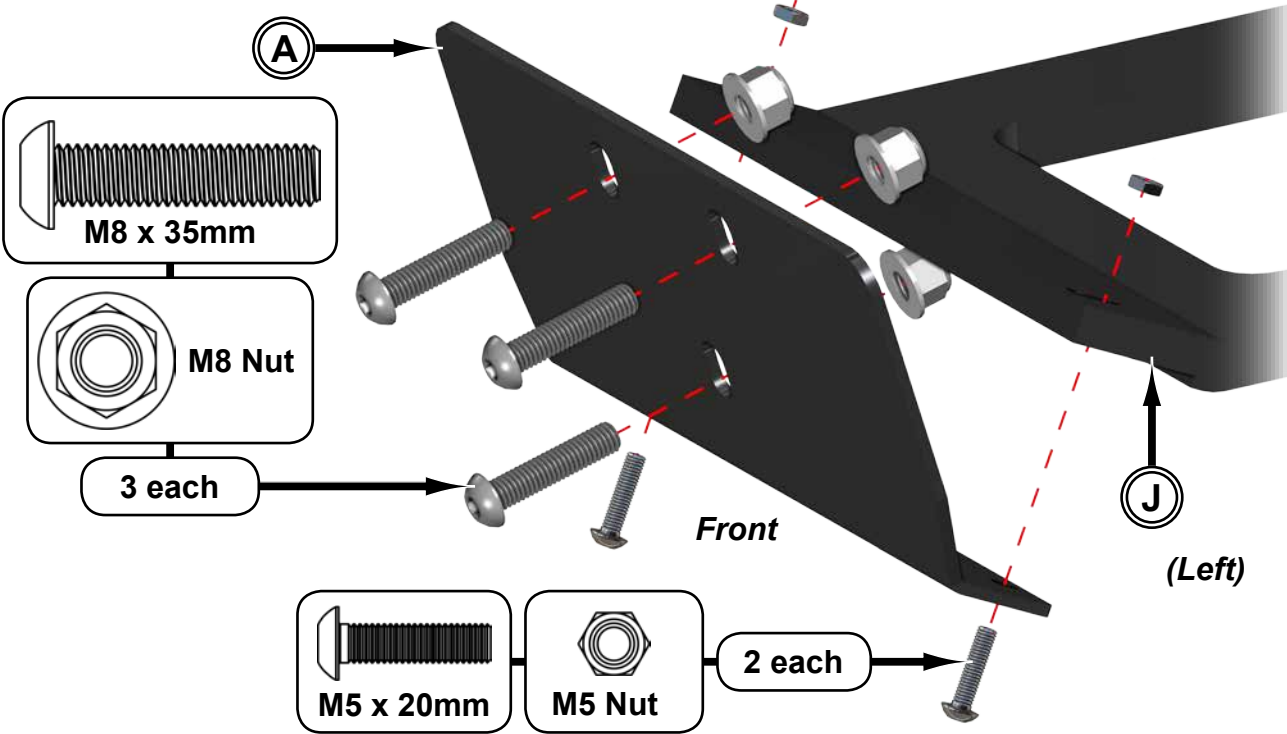


Machines with a Bumper installed, see next page for Front Metal Plate (A) installation.


- Secure Front Bumper as shown if applicable.




Install Clip Nuts to Left Bracket (G) as shown.

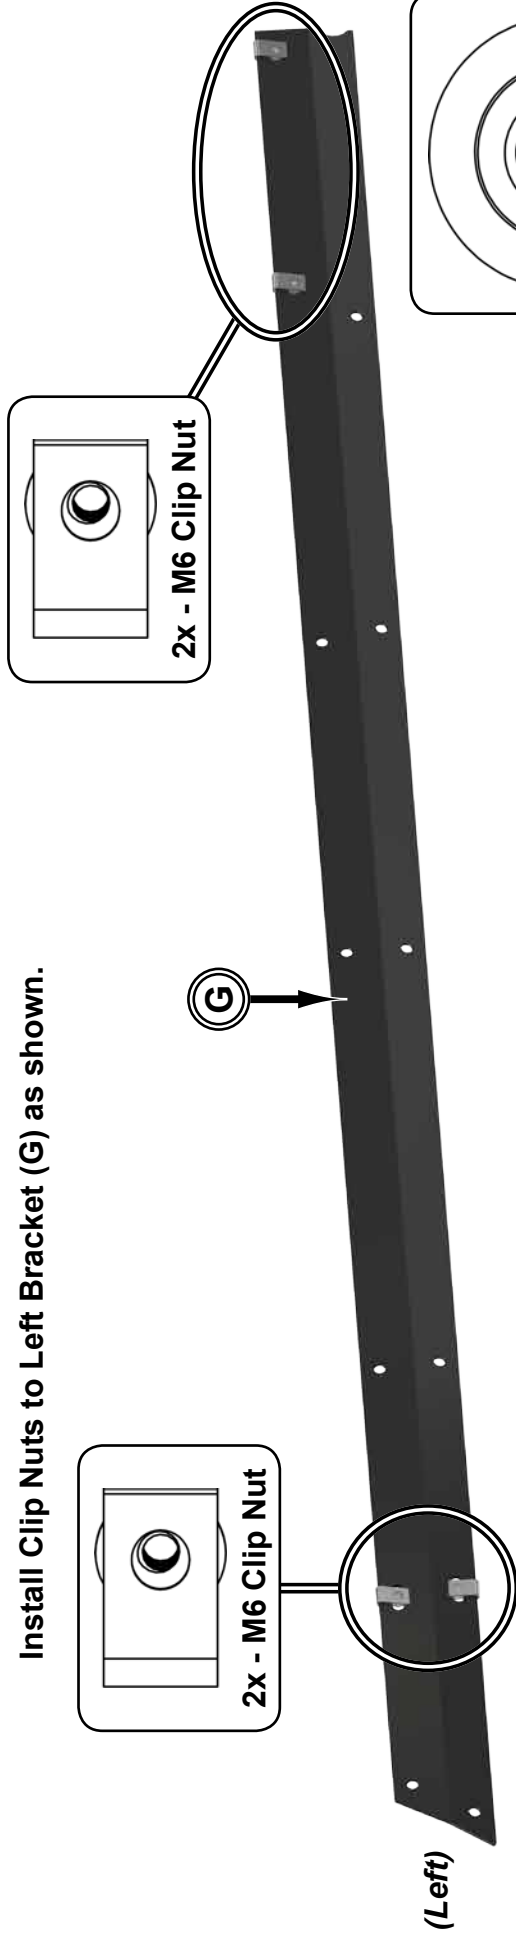

Secure Left Bracket (G) to Center Plate (M) and Rear Plate (K) with hardware shown.










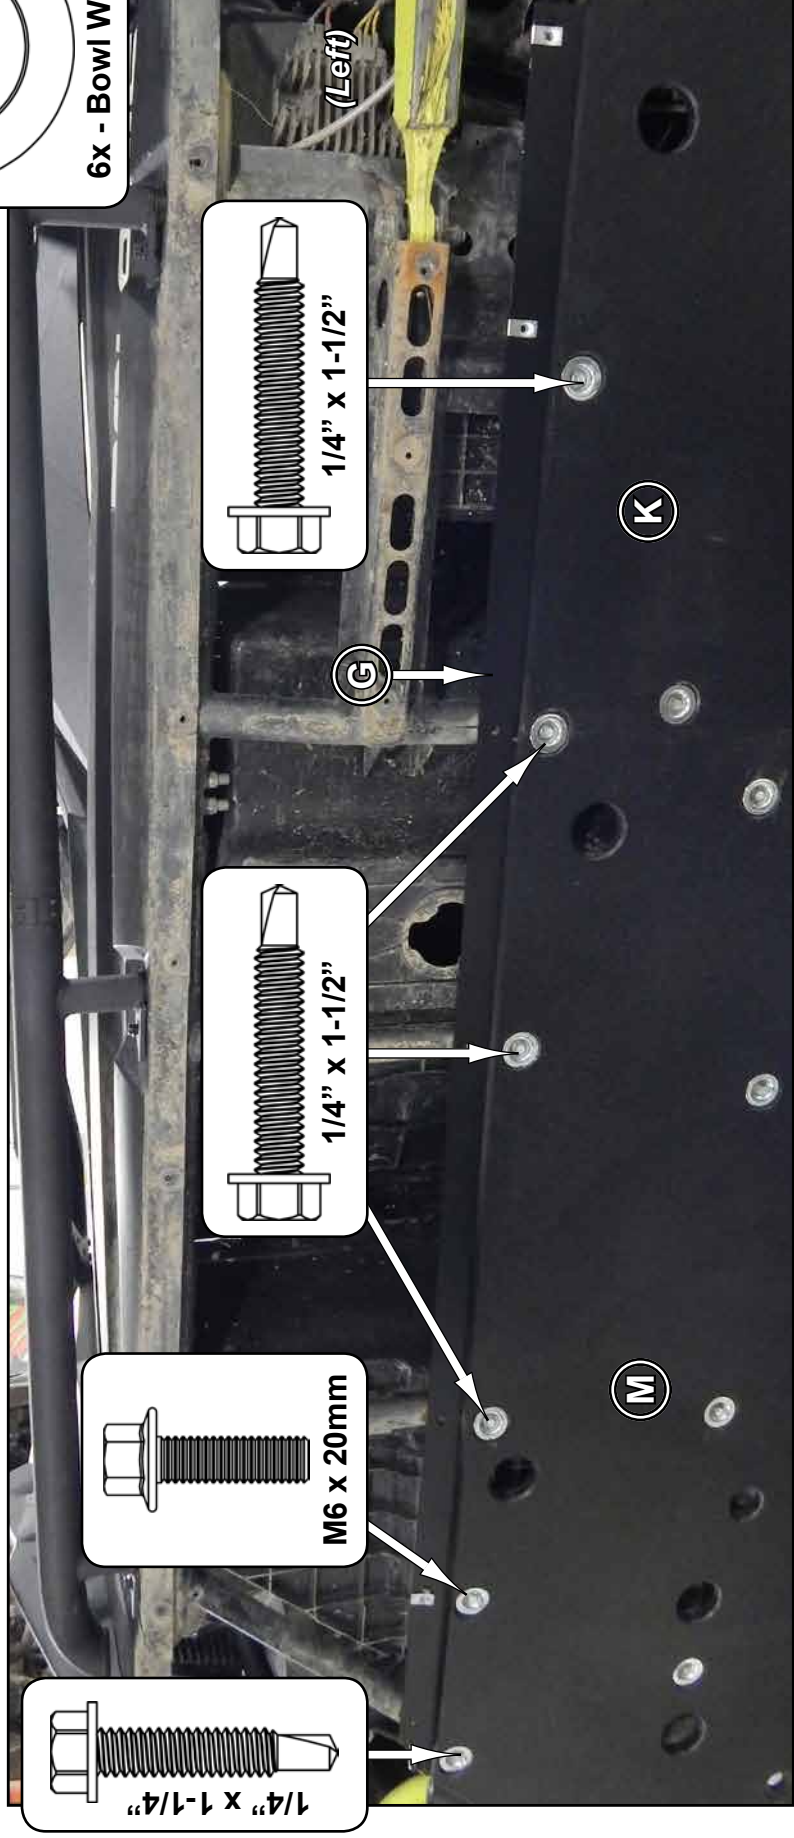


Repeat steps for Right Bracket (F).

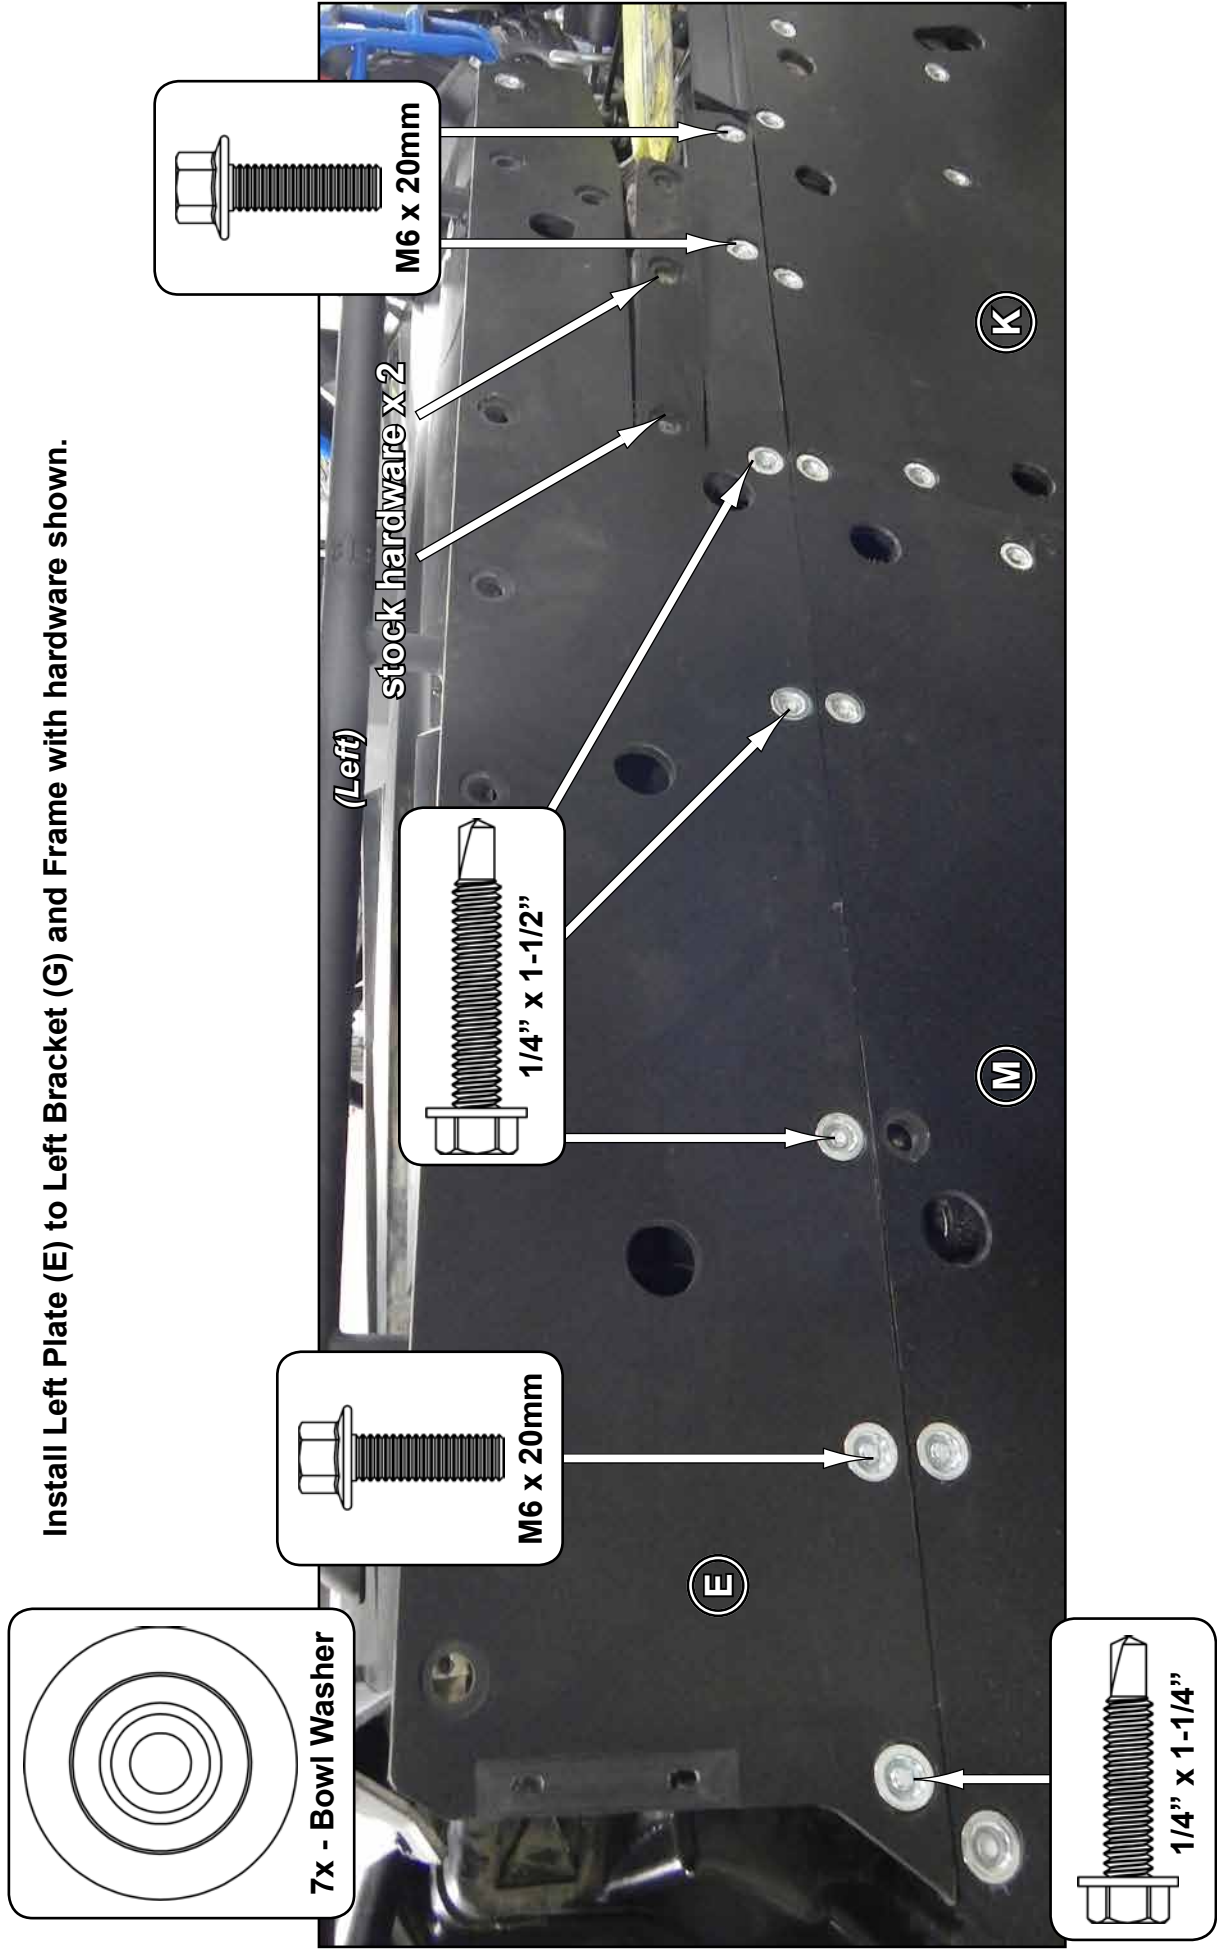


Install Left Plate (E) to Left Bracket (G) and Frame with hardware shown.

- Use holes in Left Plate (E) as a template and drill Ø10 holes in plastic.
- Install Clip Nuts to plastic.

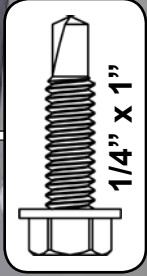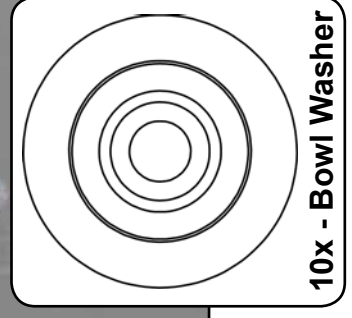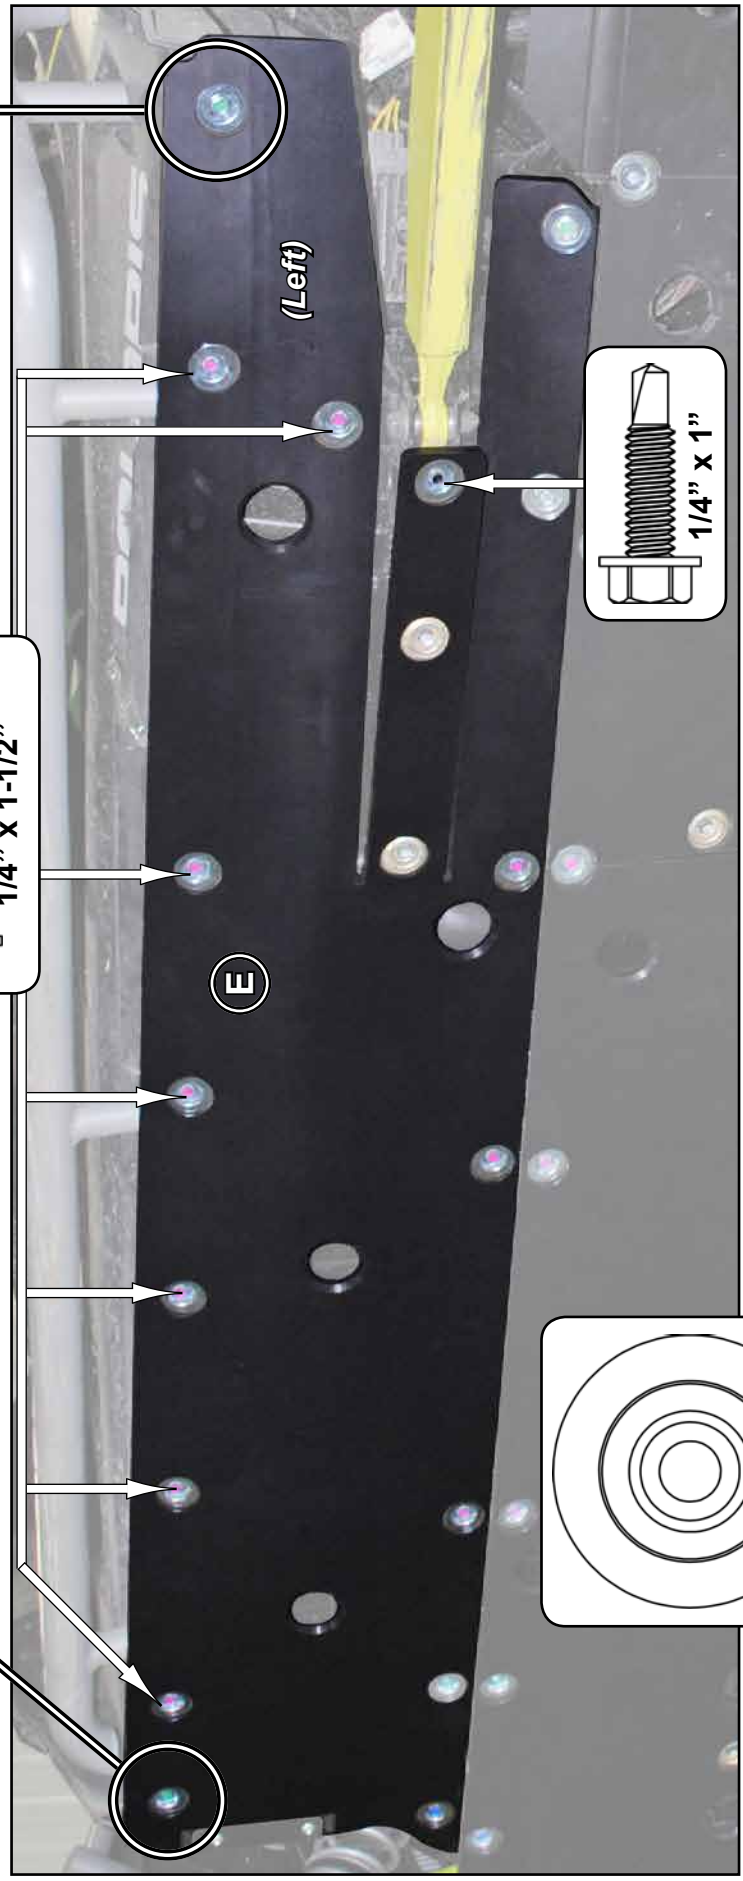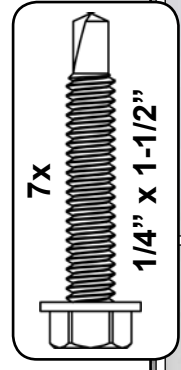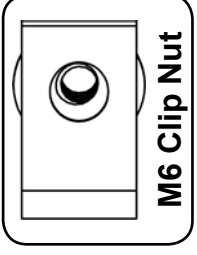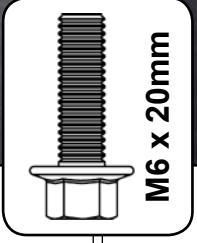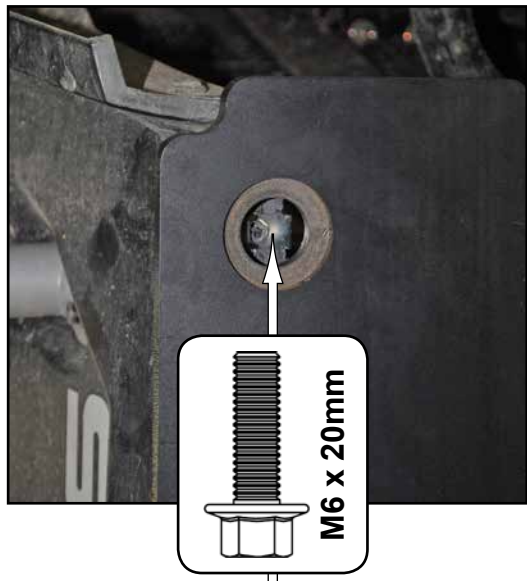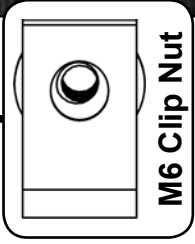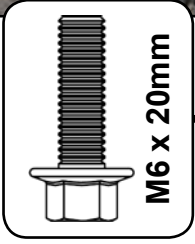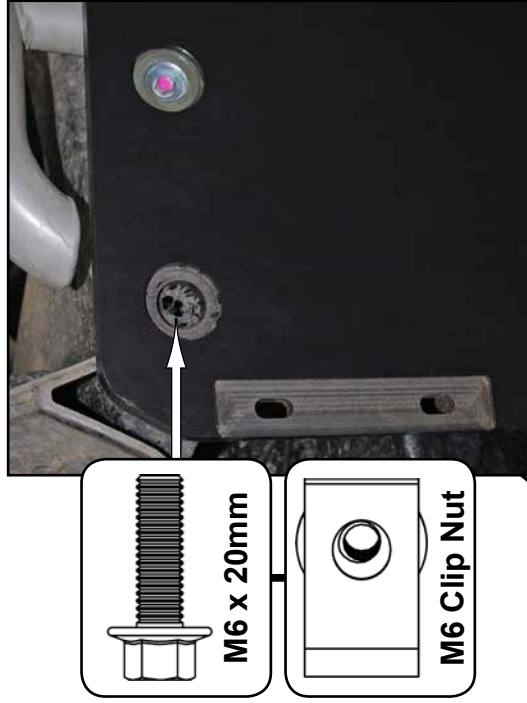

Repeat steps for Right Plate (D) installation.

- Install Left Splash Guard (C) to Left Plate (E) with hardware shown.
- Repeat for opposite side.

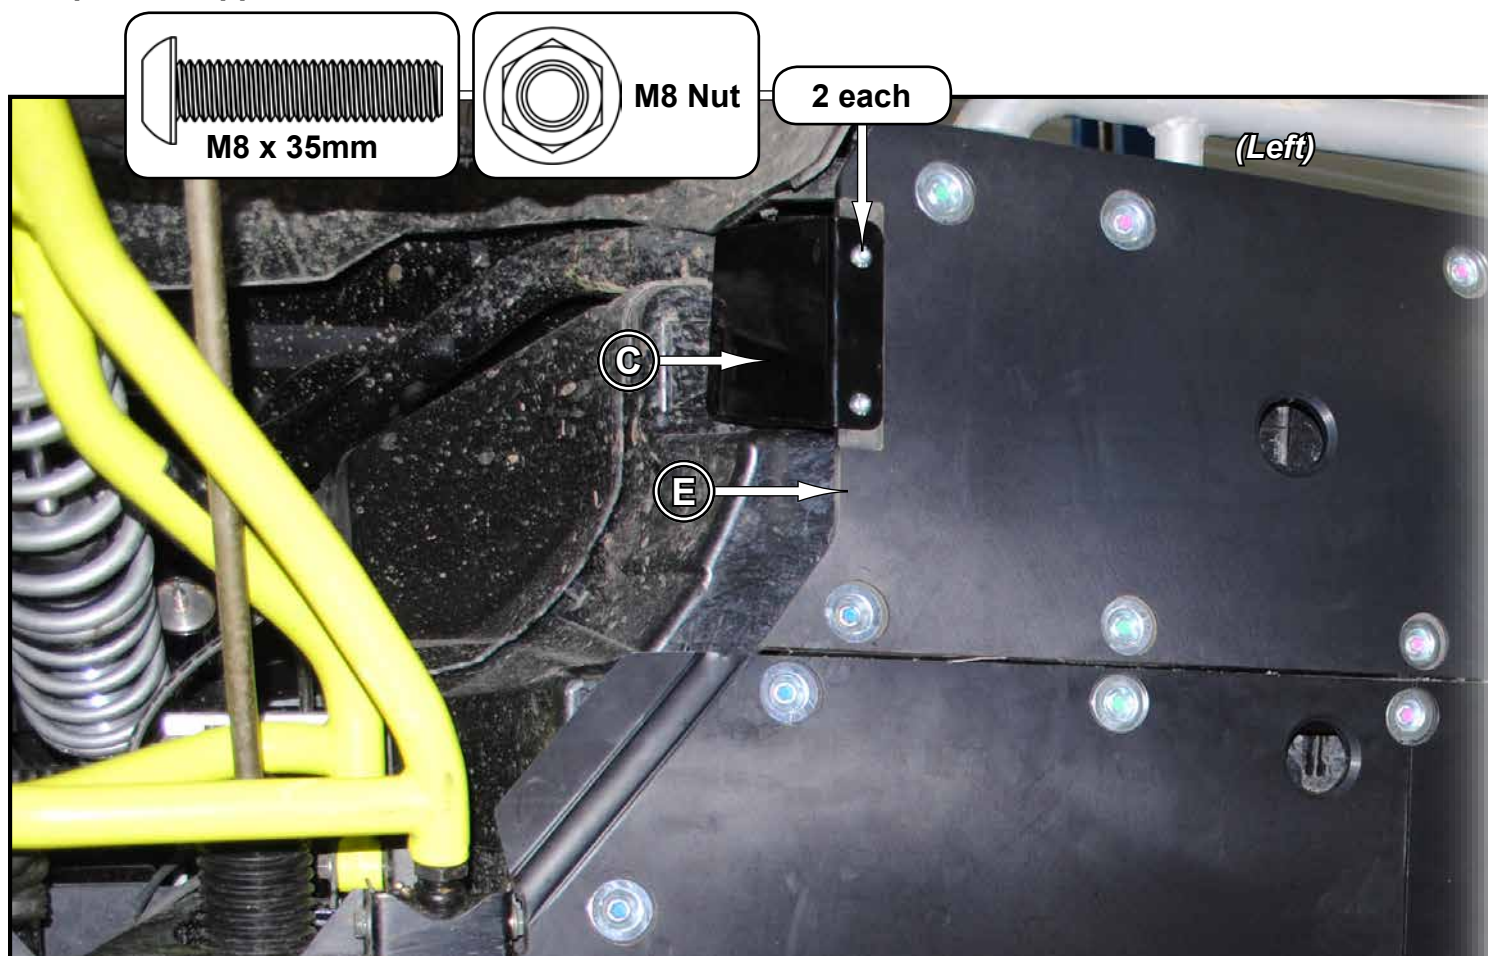

TIGHTEN ALL HARDWARE COMPLETELY