


INSTALLATION INSTRUCTIONS
Roof: for Polaris Ranger Crew[®] XP 900

Item	Description
A	Front Plate
B	Rear Plate
C	Middle Plate
D	Rear
E	Front
F	Right Panel
G	Center Panel
H	Left Panel

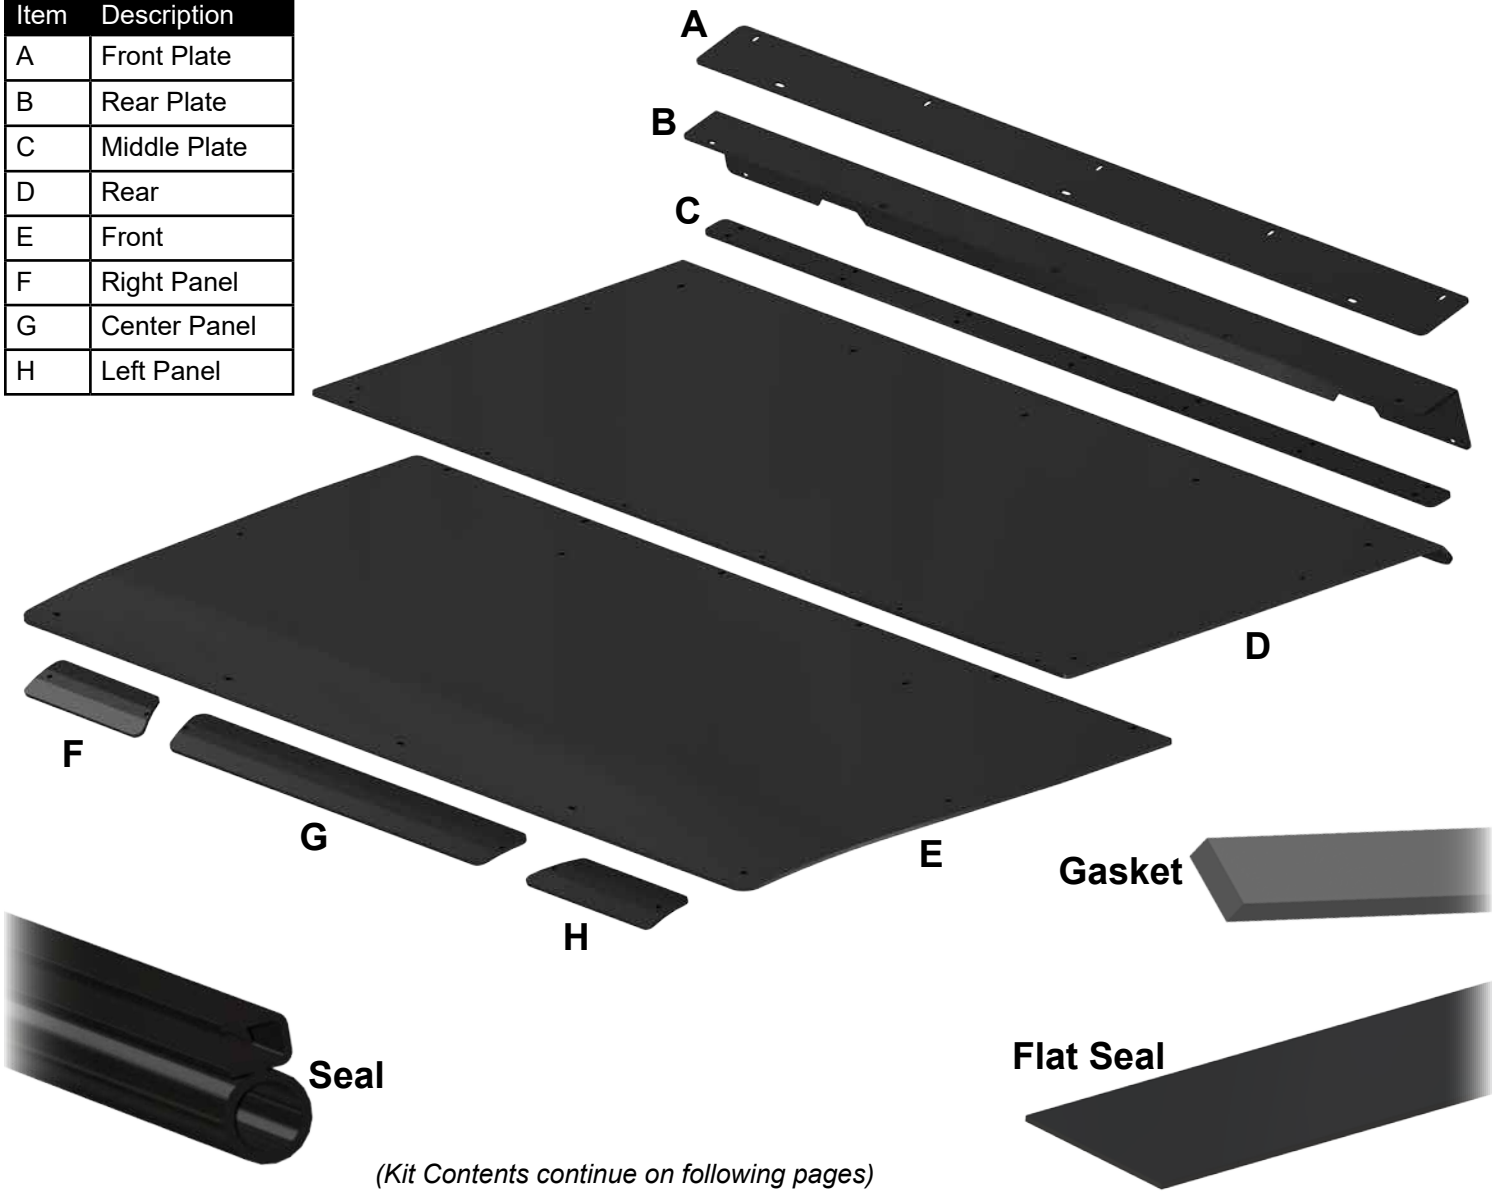

(Kit Contents continue on following pages)

Read instructions and view illustrations before beginning.

Need help with your installation?

✉ sales@superatv.com 🖥 www.superatv.com

☎ 1-812-574-7777 🕒 8:00am - 9:00pm EST M-Th
 8:00am - 7:00pm EST Friday
 9:00am - 2:00pm EST Saturday

Liability Statement
 SuperATV's[®] products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV[®] and is not recommended. SuperATV's[®] products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV[®] to verify that they will work together.


Although SuperATV[®] has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV[®] urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV[®] products, user agrees that should damages occur, SuperATV[®] will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV[®], nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV[®]. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.


SuperATV[®] will warranty only parts provided by SuperATV[®]. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV[®]. SuperATV[®] parts and products are not warranted if item was not installed properly, misused, or modified.

Thank You
For Choosing
SUPERATV.COM[®]


(Kit Contents continued)

2x  M5-.80 x 20mm Lg. BHCS


12x  M6 Acorn Nut

21x  M6-1.0 x 20mm Lg. BHCS


2x  M5 Flat Washer

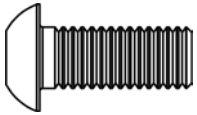2x  M8-1.25 x 20mm Lg. BHCS


18x  M6 Lock Washer


25x  M6-1.0 x 25mm Lg. BHCS

8x  M6 Flat Washer


2x  M5-.80 Nylock Nut

2x  M8 Flat Washer

28x  M6-1.0 Nylock Nut


2x  M8-1.25 Nylock Nut

37x  M6 Sealing Washer

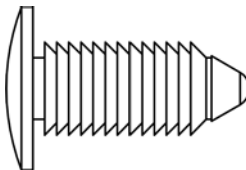
4x  Ø10 x 27.5mm Lg. Shank




Rubber must face Roof when installing M6 Sealing Washer

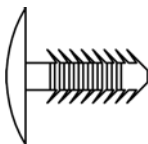3x  Ø1/4" x 5/8" Lg. Shank

Use hand tools only when assembling.

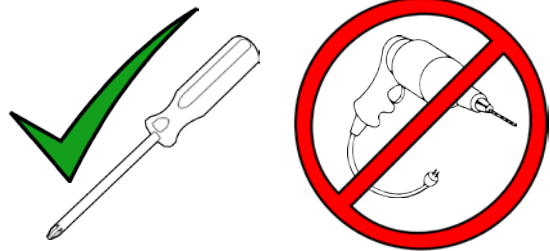

Do not use power tools.

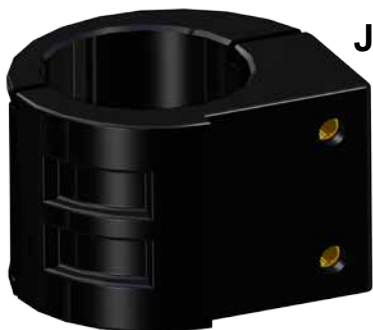

**Clamps are pre-assembled.
Separate and set aside.**



Item	Description	Qty
J	Clamp	2
K	Bracket	6
L	Middle Mount Bracket	2


(Disregard any remaining components)

Cleaning:


- Do not use window cleaning fluids (Windex, 409, etc) or any solvents (gasoline, denatured alcohol, acetone, etc).
 - Never use abrasive cleaners, abrasive pads, or gritty cloths.
 - Never use razor blades, scrapers, squeegees, brushes, etc.
1. Thoroughly rinse Roof to float off dirt and mud.
 2. Using a soft cloth, or microfiber cloth, clean Roof with warm water and a gentle detergent. Baby shampoo or hand washing soap are recommended.
 3. To prevent water spots, use a chamois to blot Roof dry.

Seal and Gasket installation: *set aside when completed.*

- Install provided Flat Seal to Front Plate (A), Rear Plate (B), and Middle Plate (C).


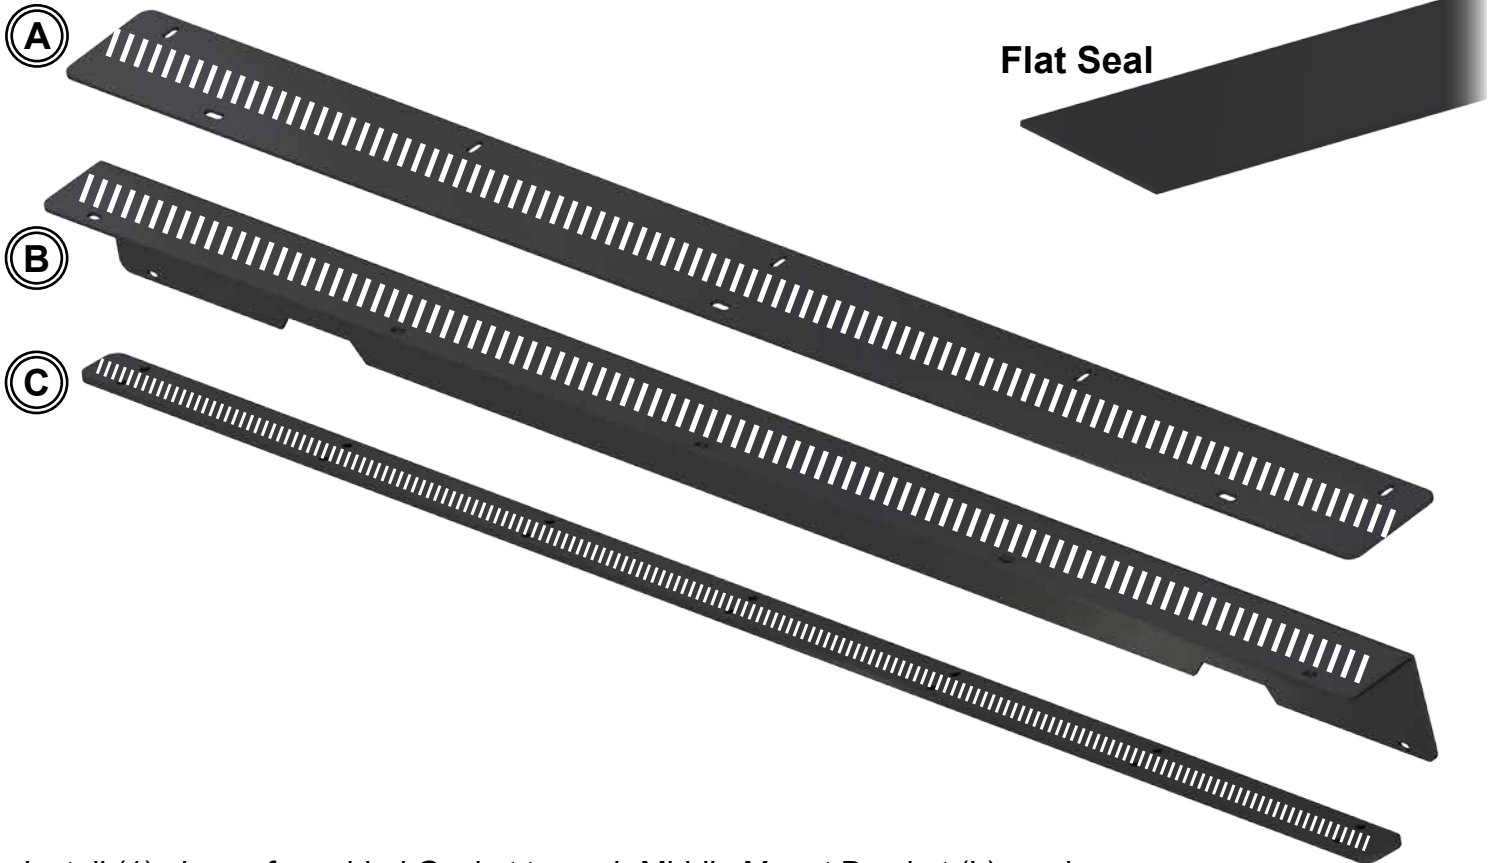


- Install (1) piece of provided Gasket to each Middle Mount Bracket (L) as shown.

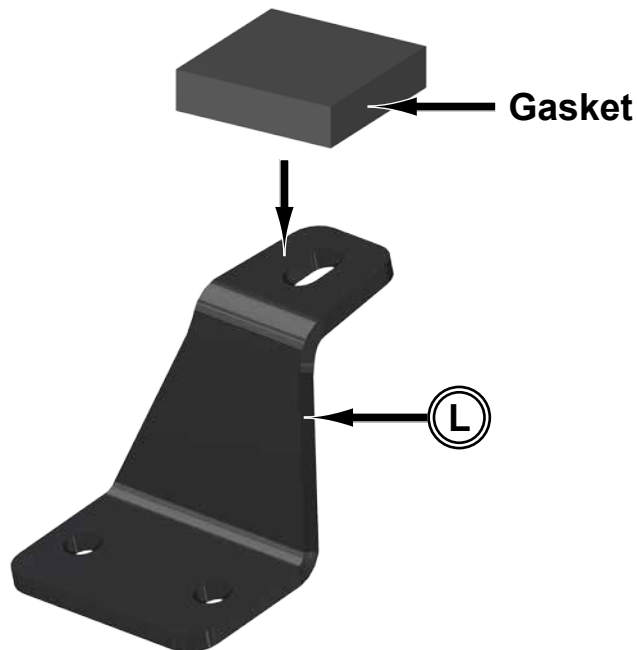


Panel prep: *set aside when completed.*

- Place Panel onto Frame and align with stock hole.
- Mark and drill new hole. Hole should be large enough for Ø6mm bolt.
- Repeat for all Panels.
- **NOTE:** *Center Panel location on Frame will not have a stock hole to locate.*

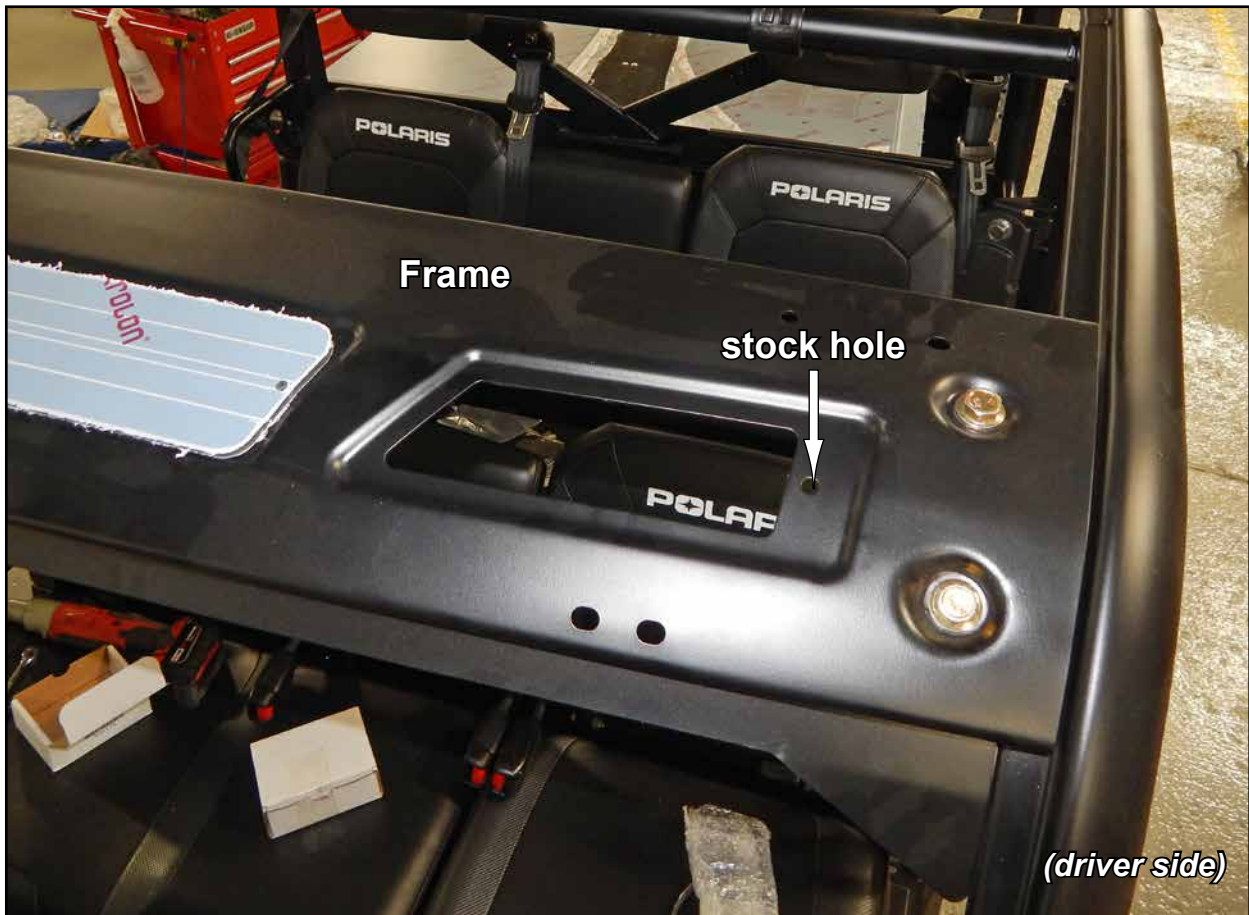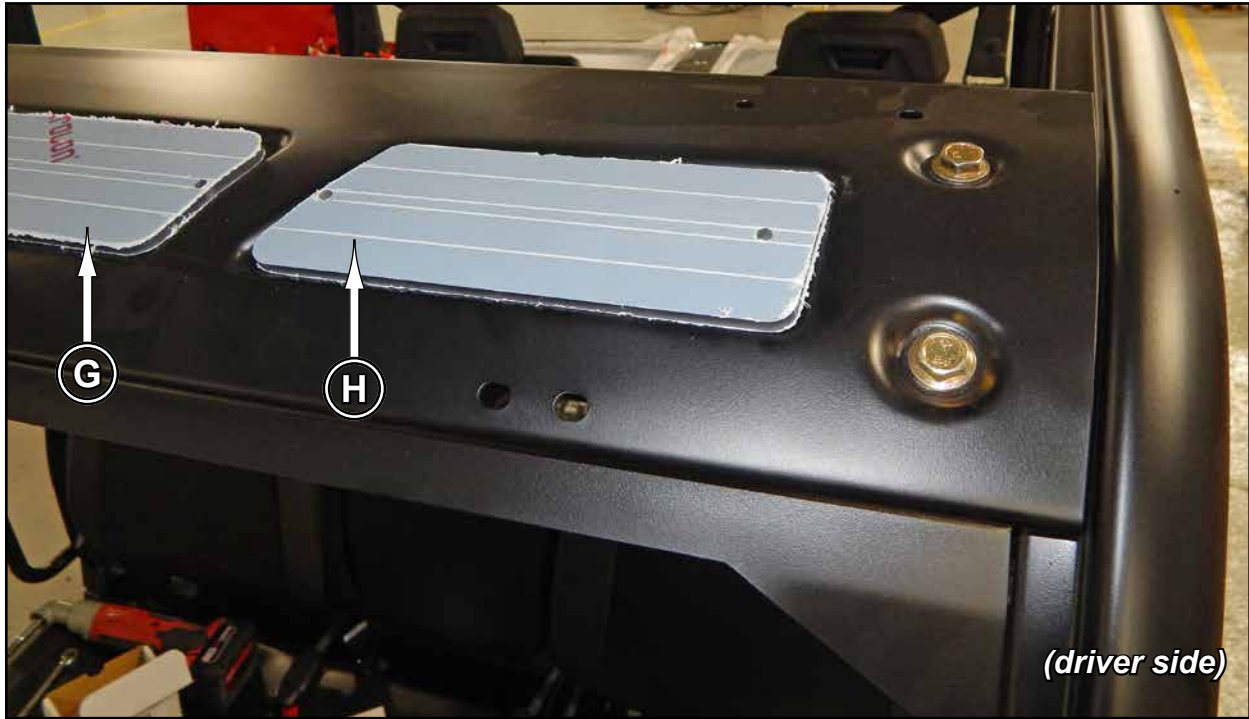


Use hardware shown when installing.

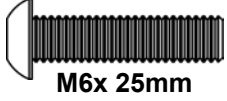


Panel installation: *set aside when completed.*

- Install provided Gasket around edges of all cutouts.
- Install Panels with hardware shown.

Gasket


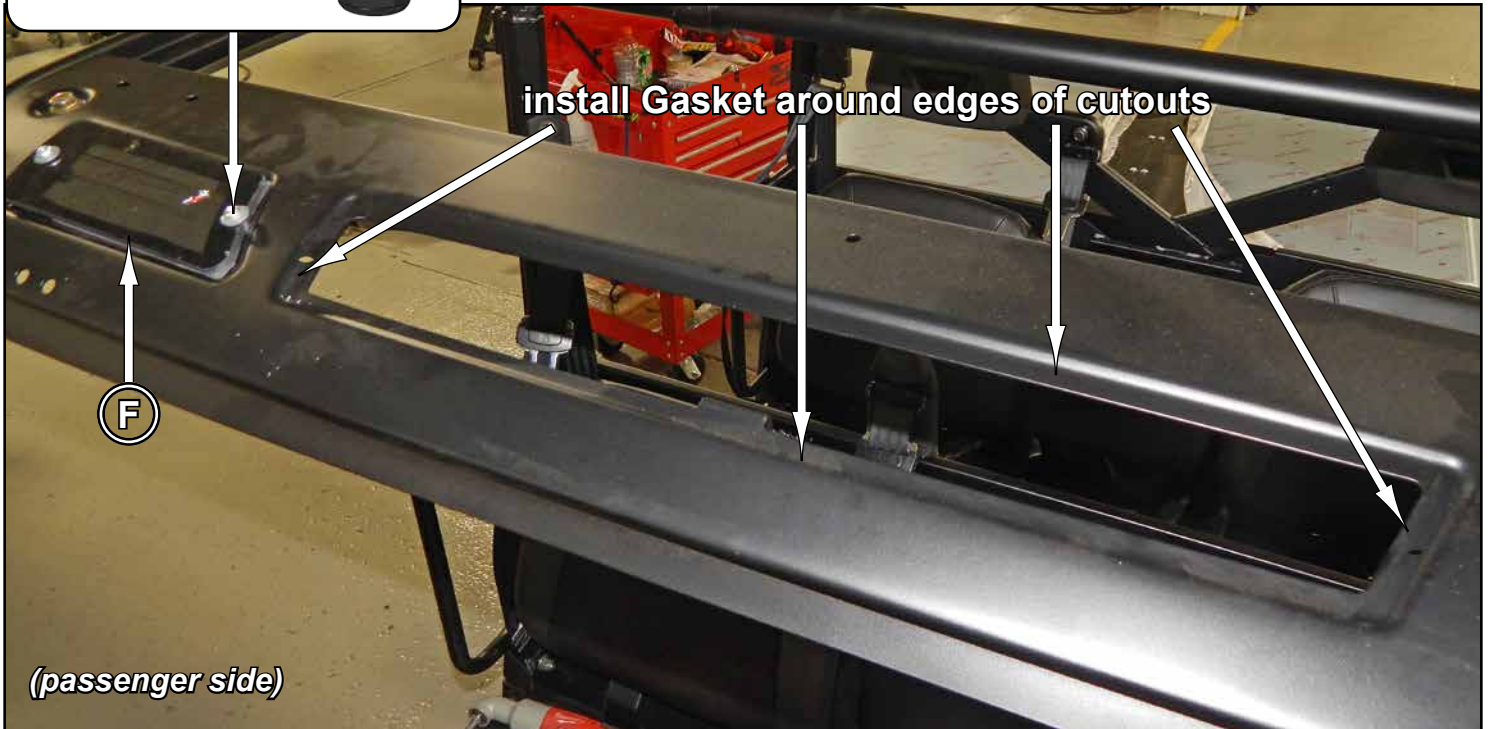


- Plug holes in Frame with provided Shanks. Not all models will use supplied quantities.


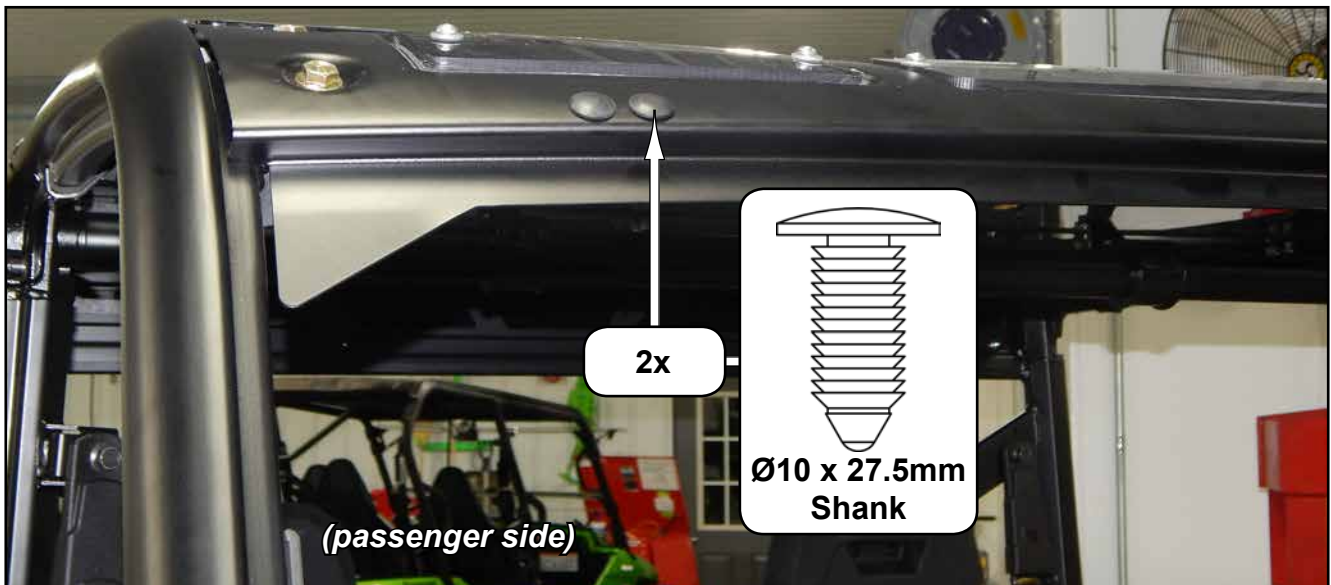


When installing components, do not tighten any hardware completely unless noted.


- Install Clamps (J) to Center Bar of machine with hardware shown.

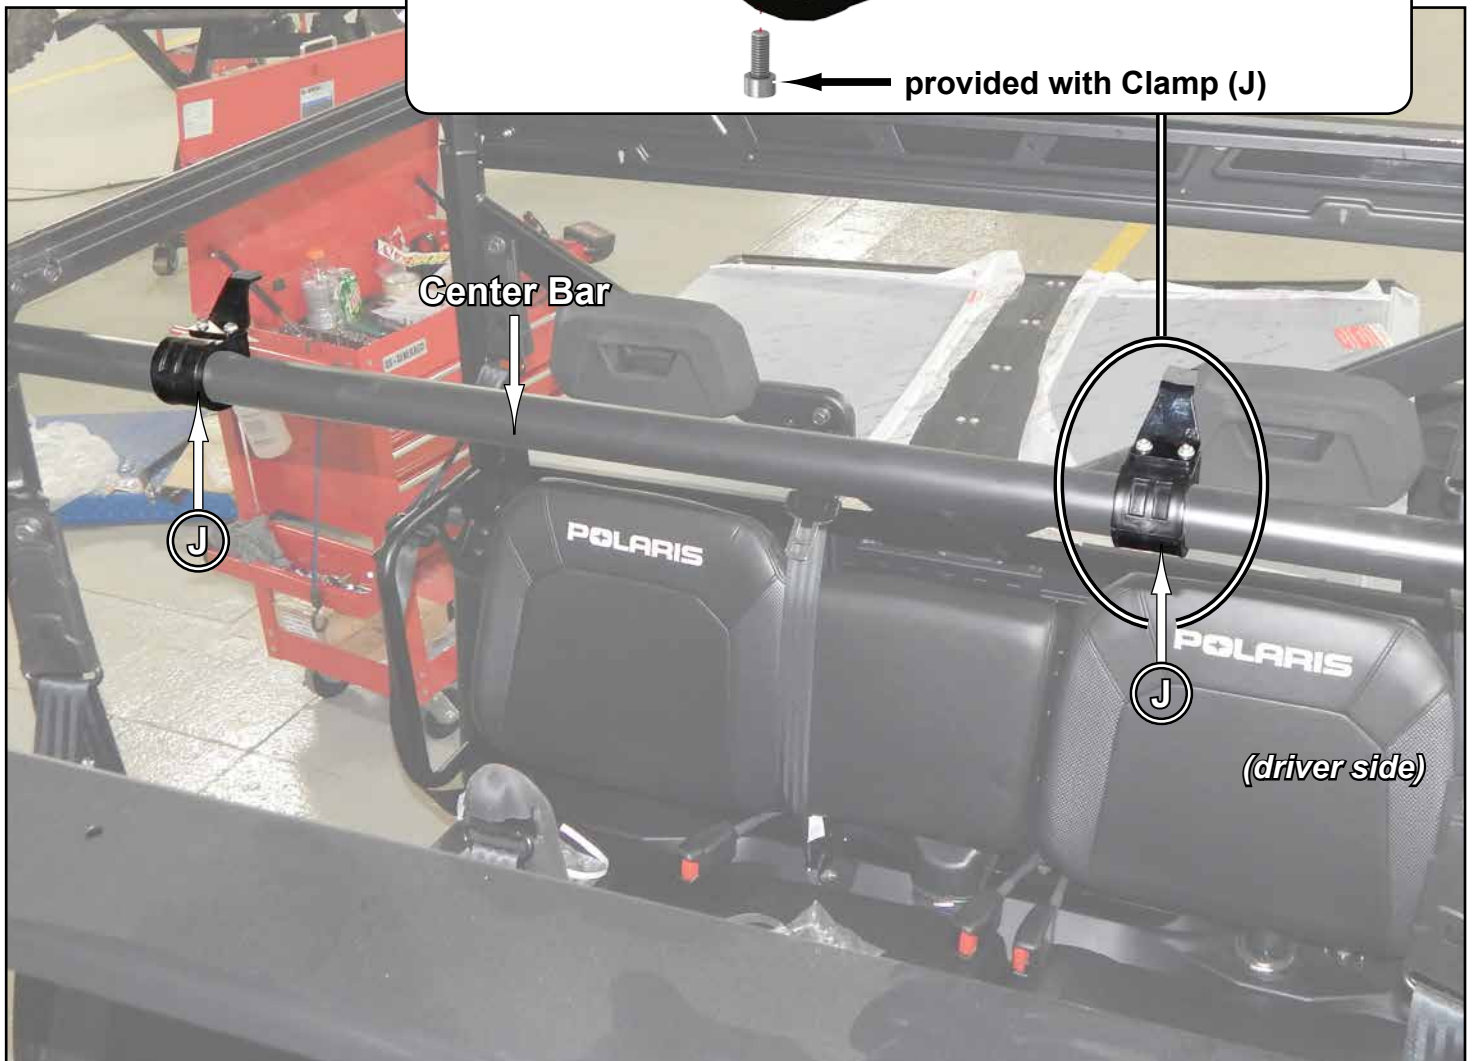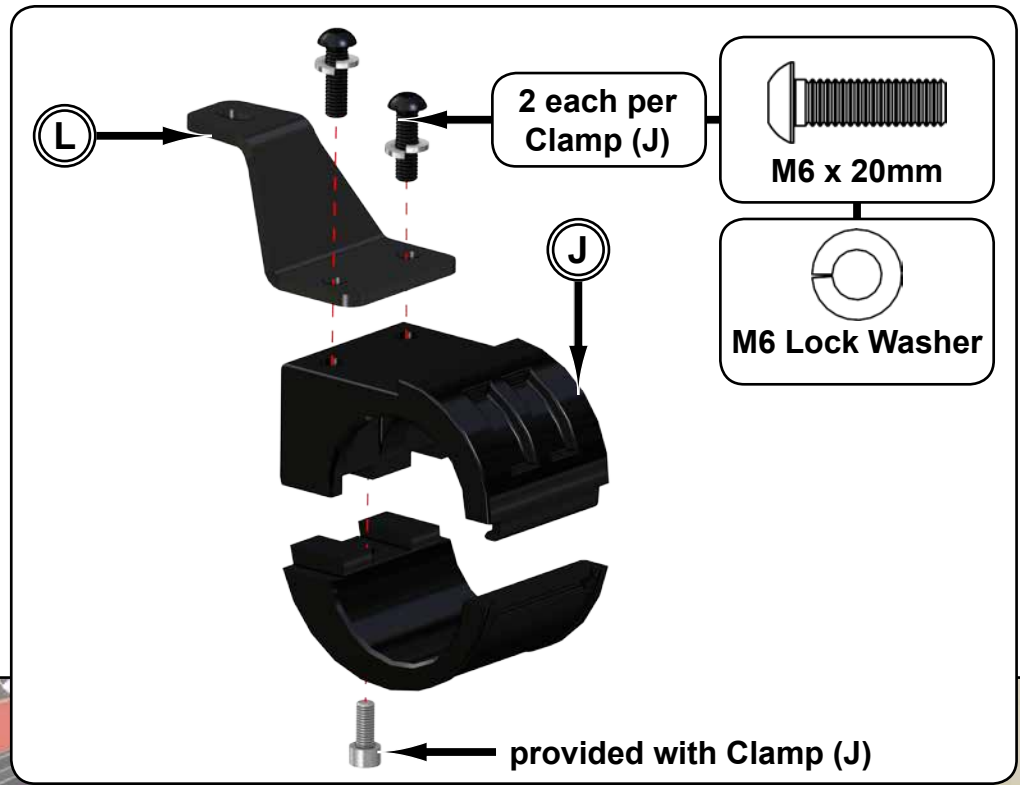


- Install Rear Plate (B) to machine with hardware shown.

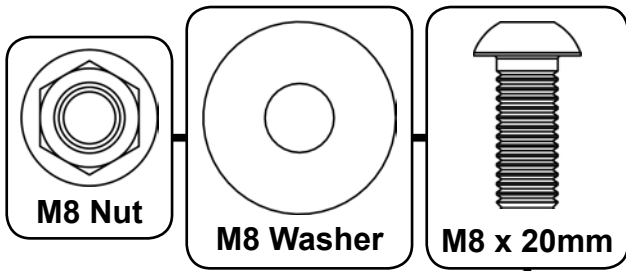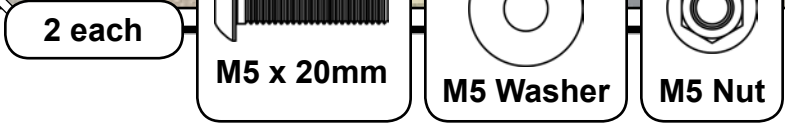



2 each

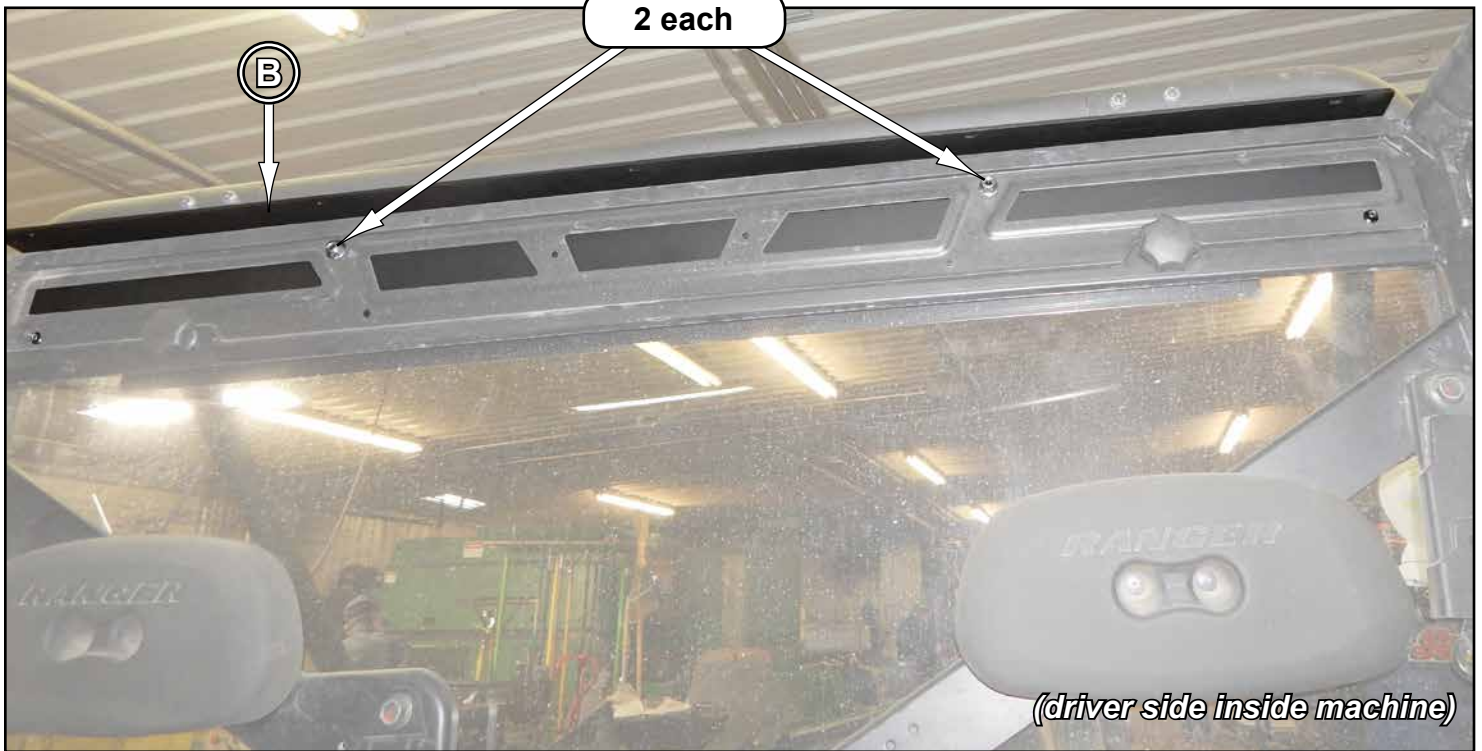


- Install Front (E) and Rear (D) to Middle Plate (C).

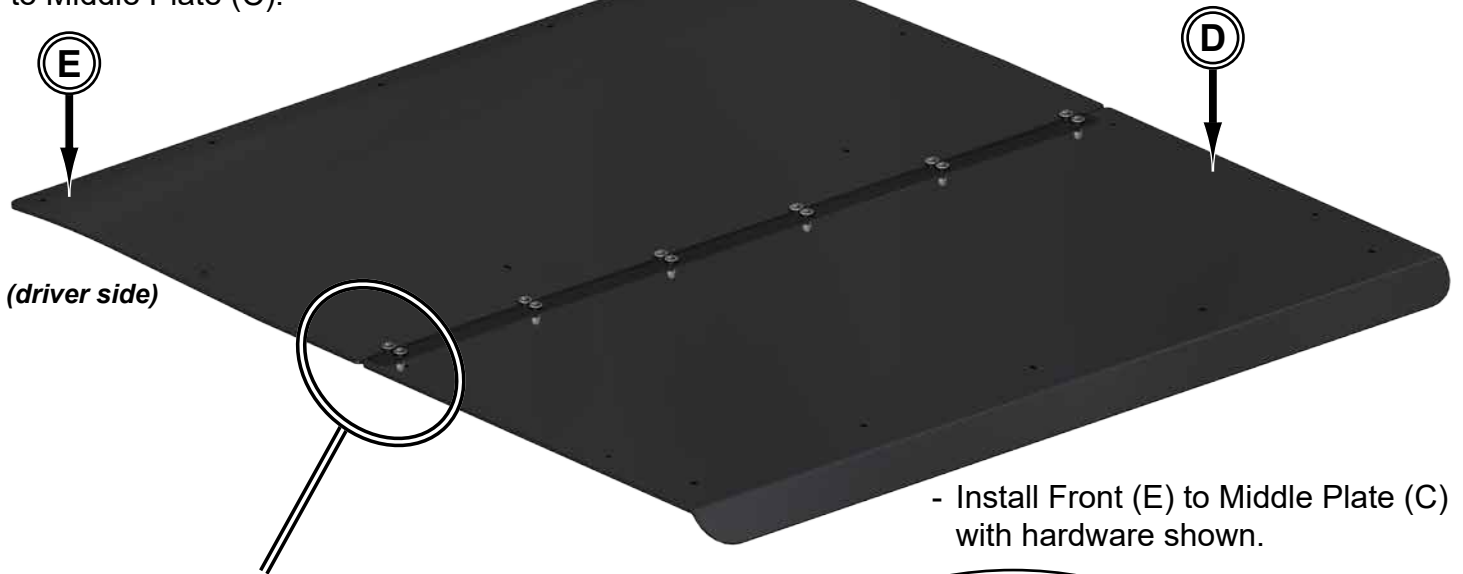

Use hardware shown when installing.

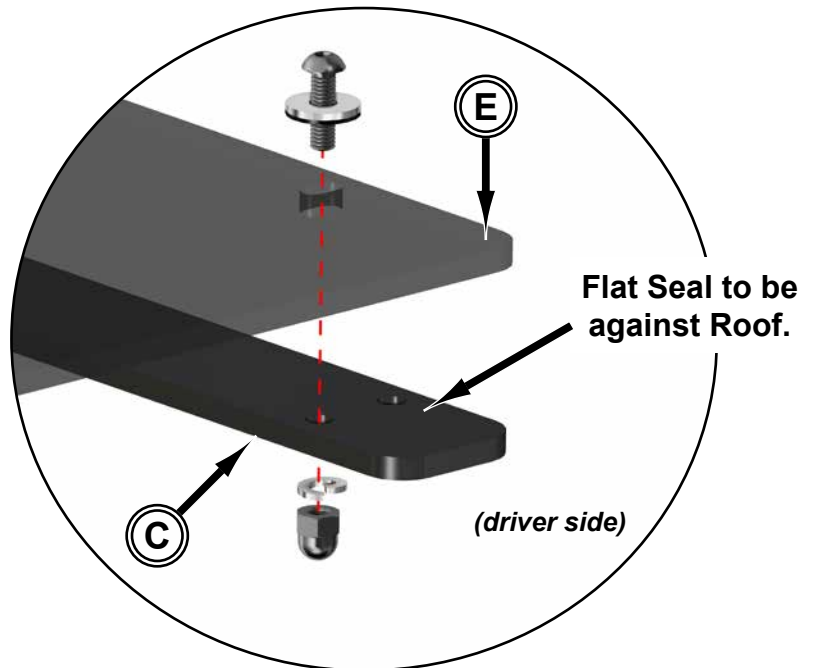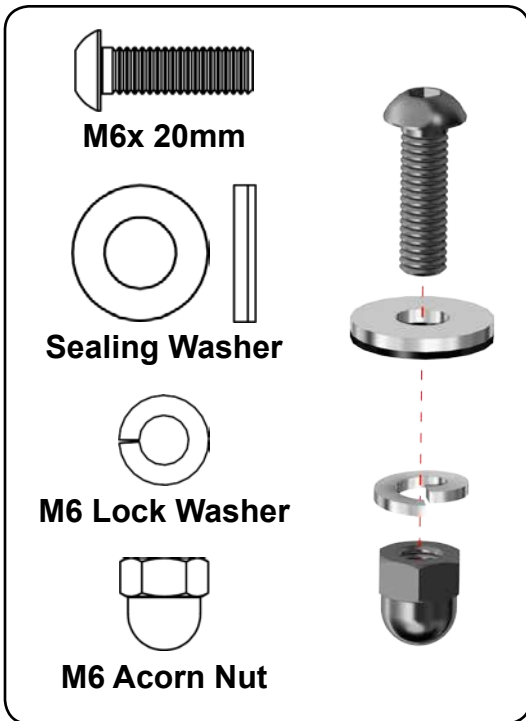


- Install Rear (D) to Middle Plate (C) with hardware shown.

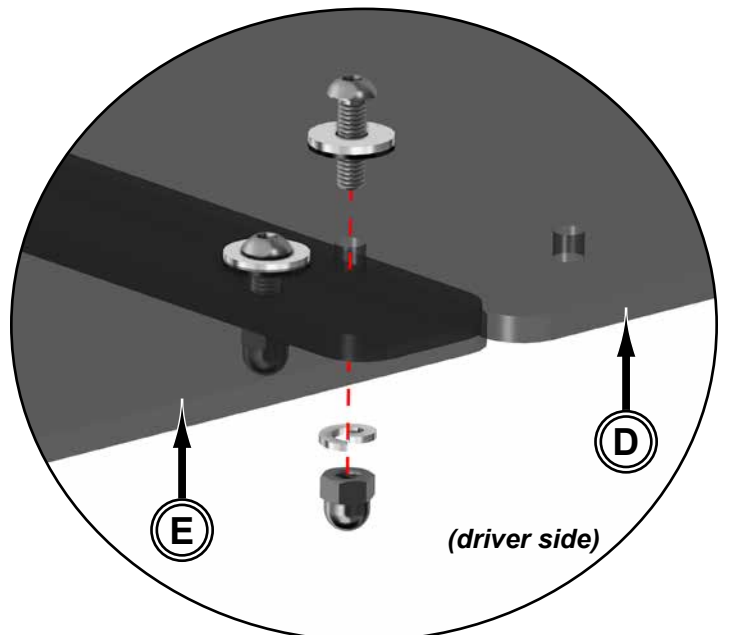


Tighten hardware completely

- Install one continuous piece of Seal down sides of Front (E) and Rear (D) as shown.

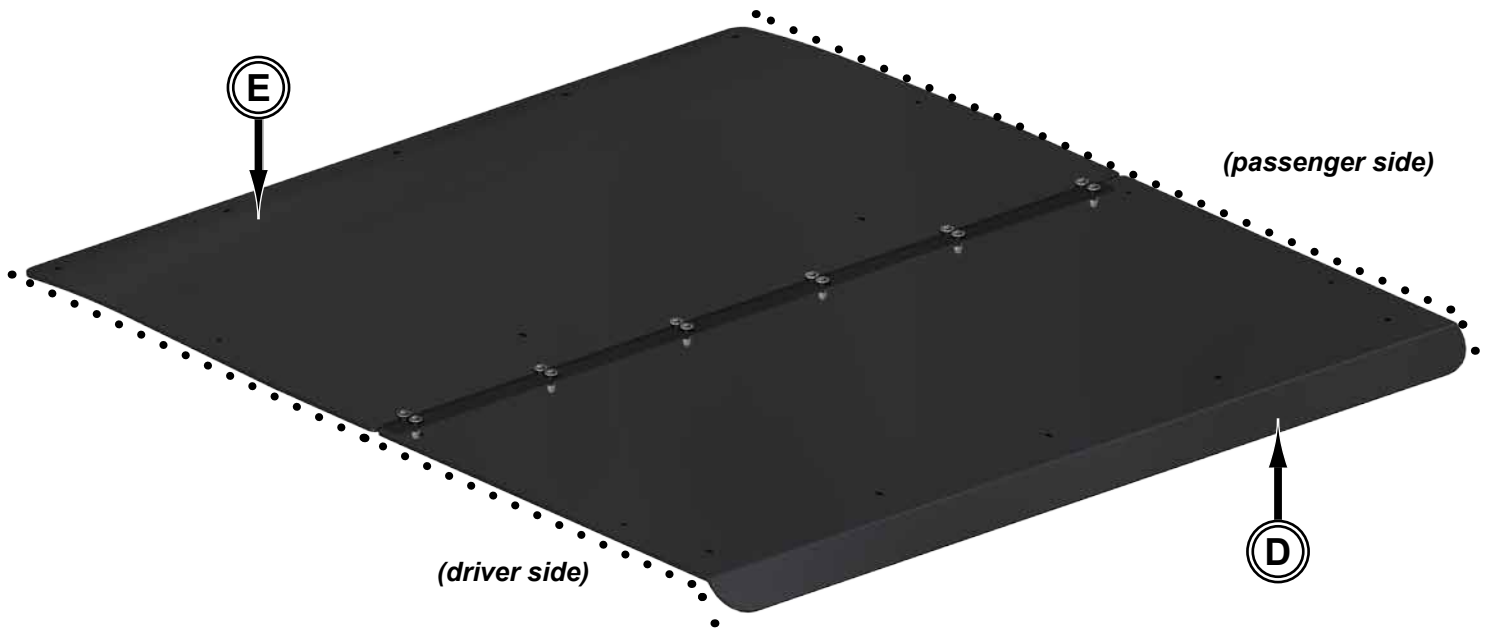


Soak Seal in hot water before cutting or installing to increase flexibility.

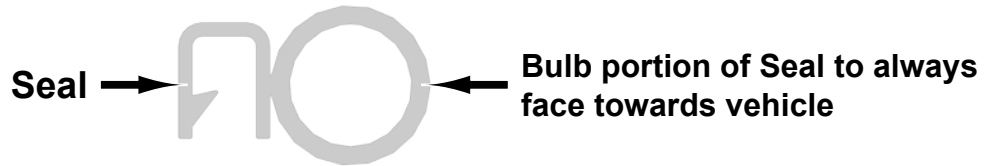


- Place Roof onto machine.


- Secure Roof and Front Plate (A) to machine.

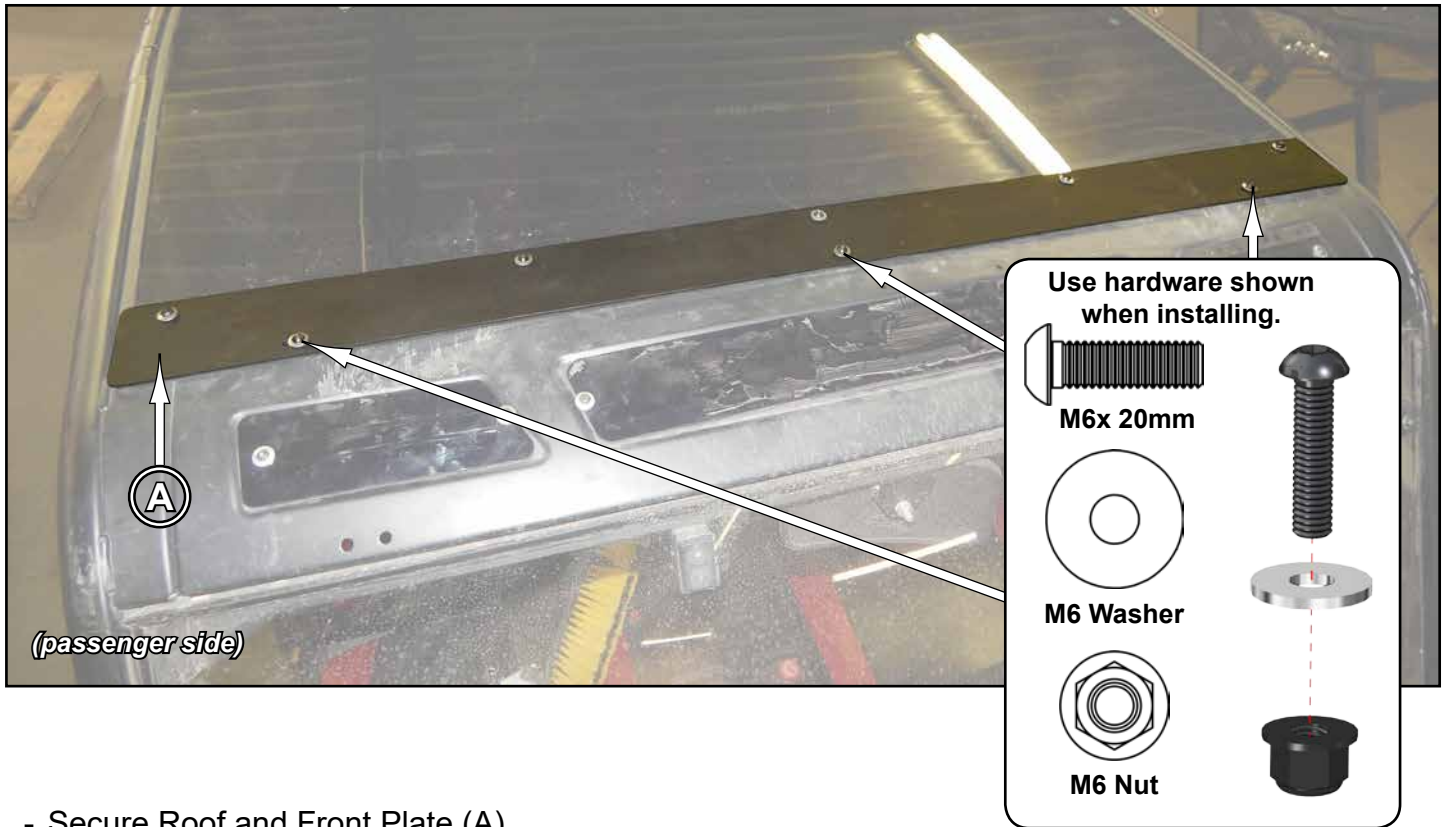

- Secure Roof and Front Plate (A).

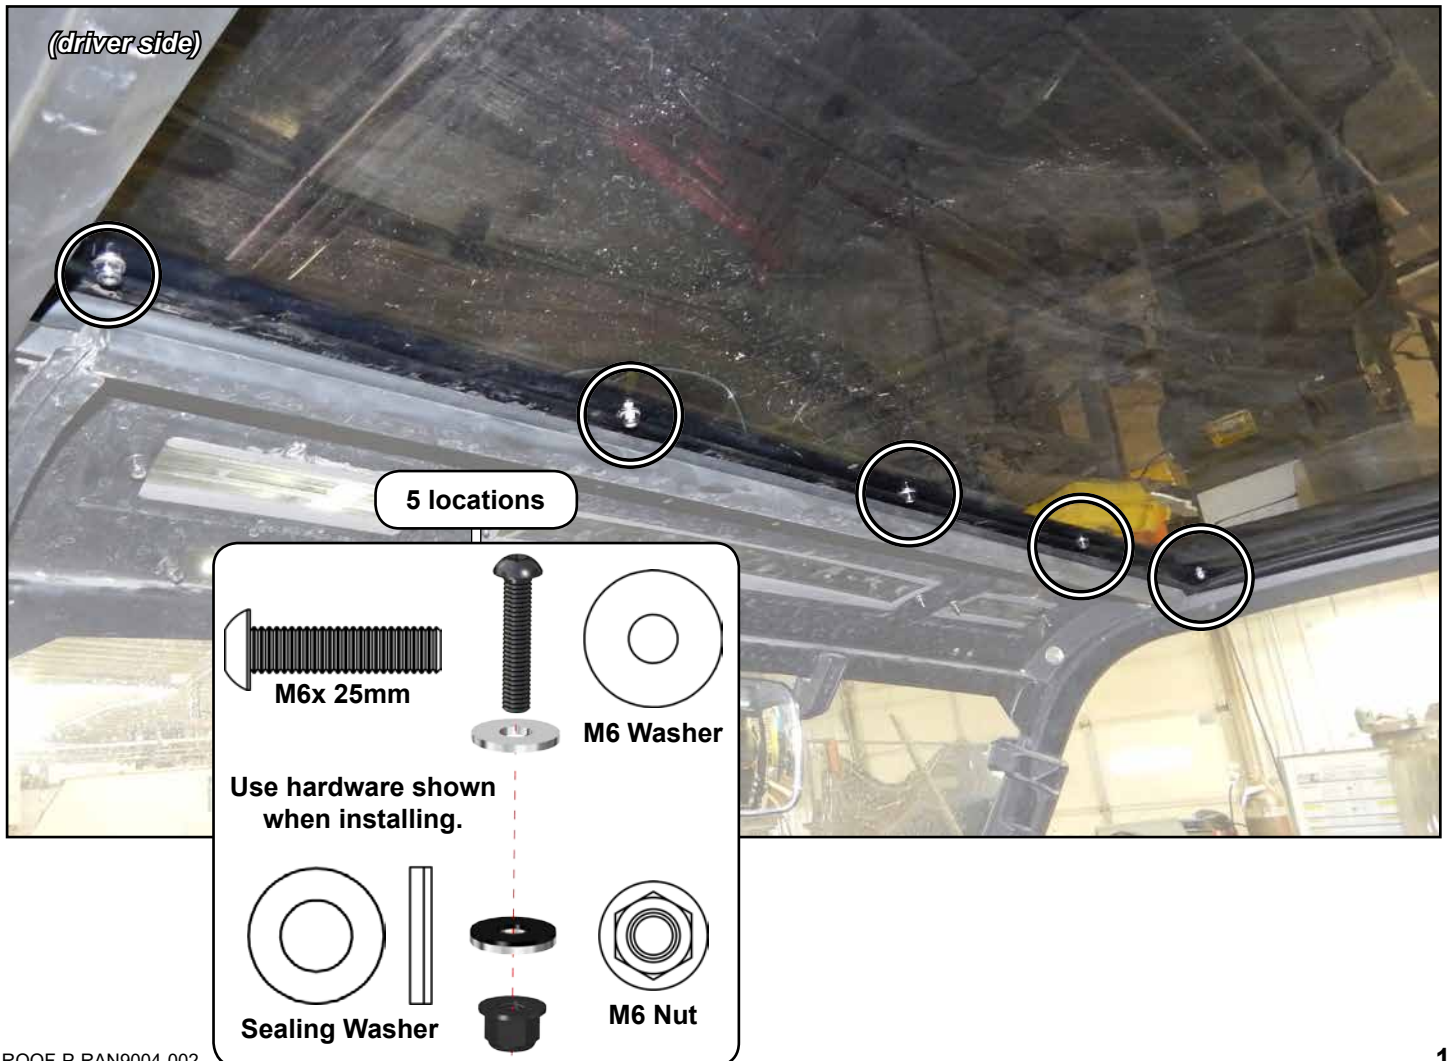

- Secure Roof to Middle Mount Brackets (L) and Rear Plate (B).

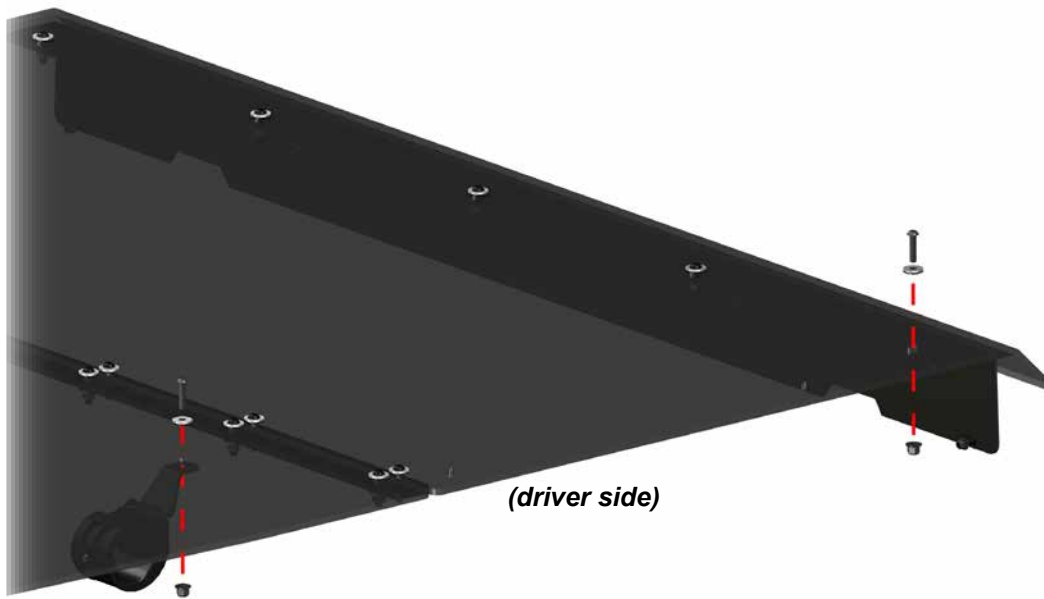


Use hardware shown when installing.

M6x 25mm



Sealing Washer

M6 Nut

A technical diagram showing the hardware required for installation. It includes an M6x 25mm bolt, an M6 Nut, and a Sealing Washer. The bolt is shown with a black cap and a silver body. The nut is shown with a black cap and a silver body. The sealing washer is shown as a circular ring with a central hole.

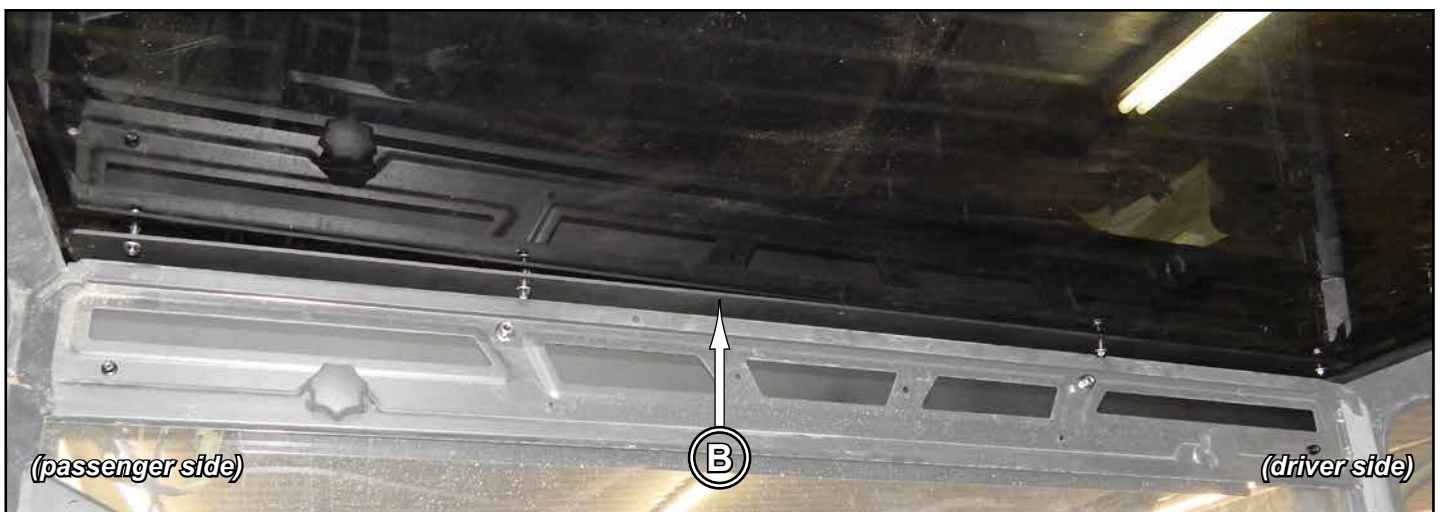

- Install Brackets (K) to Roof with hardware shown.

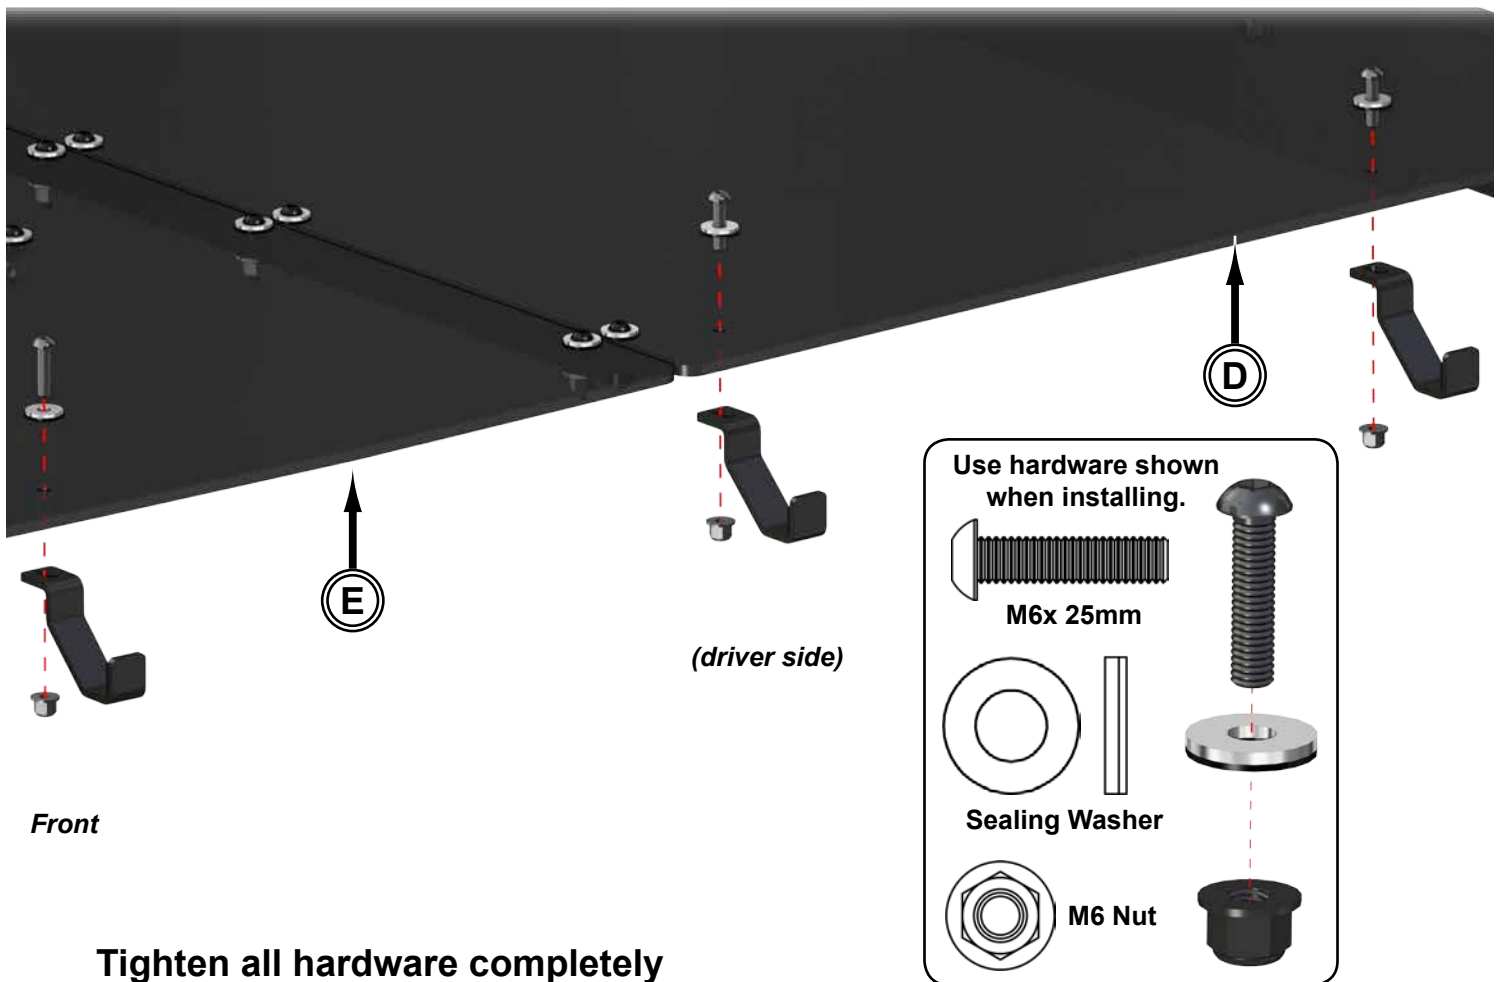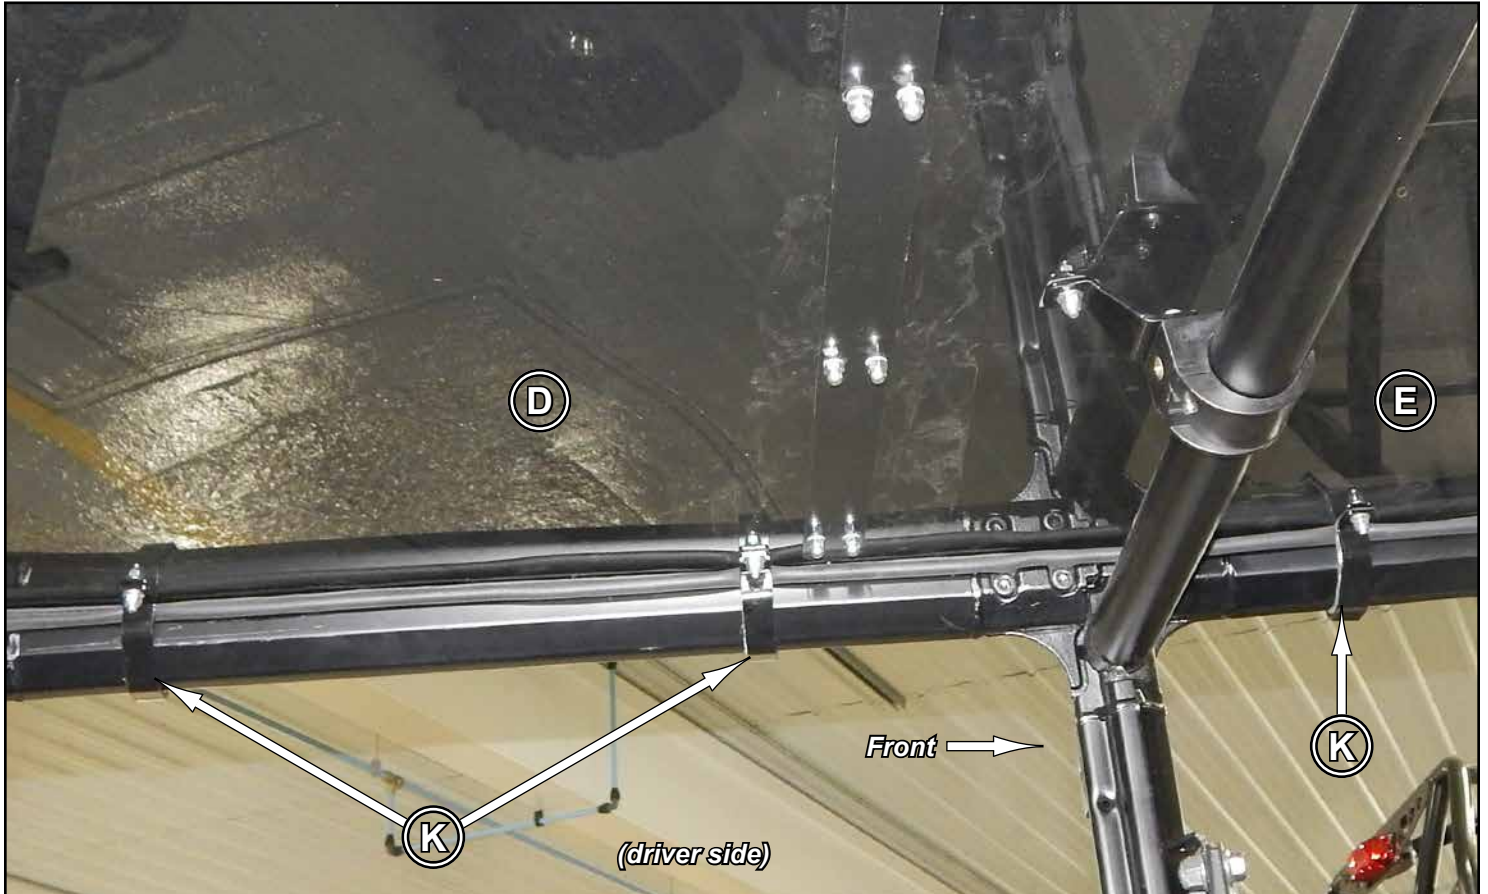

Tighten all hardware completely