



THE RUMBLE SEAT

MODEL: UVRS100BL-300 LB. WEIGHT CAP.

A CAUTION A WARNING

READ ALL INSTRUCTIONS AND THE ADDITIONAL LIST OF WARNINGS BEFORE USING THE RUMBLE SEAT

NOTE: Failure to read instructions before use could result in injury or death.

Instructions for Installation and Use:

CONTENTS: SEE FIG. 1

- 1 BACKREST FRAME WITH 2 CUSHIONS
- 1 SEAT FRAME WITH 2 CUSHIONS
- 1 SEATBELT STRAP W/ 2 MALE BUCKLES
- **4** 5/16" QUICK PINS
- 2 ARMRESTS
- 1 HARDWARE PACKET
- 2 LEG ASSEMBLIES W/ MOUNTING

BRACKETS



FIG. 1

HARDWARE PACKET INCLUDES:

- 4 5/16" X 2 1/2" BOLTS
- 4 5/16" X 1" BOLTS
- 4 5/16" FENDER WASHERS
- 8 5/16" X 1 3/4" BOLTS
- **2** 5/16" X 2" BOLTS
- 14 5/16" LOCKNUTS
- **24** 5/16" FLAT WASHERS
- 2 FEMALE SEAT BELT BUCKLES
- 2 SAFETY ATTACHING STRAPS W/THUMB RELEASE BUCKLES

NOTEPLEASE REMOVE ALL PARTS FROM BOX AND CHECK THE PARTS AGAINST THE CONTENTS LIST BEFORE BEGINNING ASSEMBLY. ANY MISSING OR DAMAGED PARTS NEED TO BE REPORTED TO GREAT DAY, INC.

STEP 1: SEE FIG. 2-

ATTACH LEG ASSEMBLIES TO THE BOTTOM OF THE SEAT FRAME USING **4-**5/16" x 1 3/4" BOLTS, **8-**FLAT WASHERS & **4-**LOCK NUTS. **NOTE**THERE ARE 4 DIFFERENT LEG ASSEMBLY POSITIONS (2 ON SEAT FRAME & 2 ON LEG ASSEMBLIES) TO ENSURE PROPER LEVEL POSITIONING IN THE BED OF YOUR PARTICULAR UTV. **SEE FIG. 2A & FIG. 2B.****







FIG. 2A

FIG. 2B

STEP 2: SEE FIG. 3 & 3A

REMOVE FEMALE ENDS OF SEAT BELTS FROM PACKET & PLACE LOOP END AROUND EAR OF SEAT SECTION. THIS IS THE UPRIGHT WHERE THE SEAT SECTION & BACKREST SECTION ATTACH TOGETHER. REPEAT FOR SECOND FEMALE END OF SEAT BELT. TIGHTEN SECURELY.



FIG. 3



FIG. 3A



FIG. 4

STEP 3: SEE FIG. 4

SECURE BACK FRAME TO SEAT FRAME USING 2-5 /16" x 2" BOLTS, WASHERS & LOCKNUTS. TIGHTEN SECURELY.

STEP 4: SEE FIG. 5

ATTACH ARMRESTS TO SEAT FRAME AND BACKREST FRAME USING 4-5 /16" x 2 1/2" BOLTS, WASHERS & LOCKNUTS. TIGHTEN SECURELY.



FIG. 5



FIG. 6

STEP 6: SEE FIG. 7

MARK LOCATION TO DRILL THE 4 HOLES FOR ATTACHING THE MOUNTING BRACKETS TO THE BED OF THE UTV.

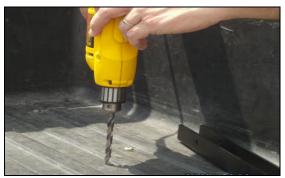


FIG. 8

STEP 8: SEE FIG. 9

BOLT THE MOUNTING BRACKETS TO THE BED OF THE UTV USING 4 – 5/16" X 1" OR 4 - 5/16" X 1 3/4" BOLTS, (WHICHEVER LENGTH IS APPROPRIATE FOR THE UTV) & 4 – 5/16" FENDER WASHERS (ON THE UNDERSIDE OF CARGO BED), & 4 – 5/16" LOCKNUTS. TIGHTEN SECURELY.

STEP 5: SEE FIG.6

PLACE FULLY ASSEMBLED RUMBLE SEAT INTO THE CARGO AREA OF UTV WITH RUMBLE SEAT BACKREST AGAINST THE CAB OF UTV.

NOTETHE RUMBLE SEAT IS INTENDED TO FACE THE REAR OF THE UTV WITH BACKREST AS CLOSE TO THE ROLL BARS AS POSSIBLE.



FIG. 7

STEP 7: SEE FIG. 8

REMOVE RUMBLE SEAT & DRILL THE 4 MARKED LOCATIONS IN THE BED OF THE UTV USING A 7/16" DRILL BIT. **NOTE**BE SURE YOU ARE NOT DRILLING INTO FUEL TANK OR FUEL LINES.



FIG. 9



FIG. 10

STEP 9: SEE FIG. 10 & FIG. 10A

ATTACH THE RUMBLE SEAT TO UTV FRAME USING SAFETY ATTACHMENT STRAPS. PUT LOOP ENDS AROUND BACK OF RUMBLE SEAT FRAME AND UTV ARM REST/SEAT FRAME. **SEE FIG. 10B -** SECURE WITH QUICK RELEASE BUCKLE.



FIG. 10A



FIG. 10B

NOTETHE RUMBLE SEAT MAY BE REMOVED FROM UTV BY REMOVING THE QUICK PINS THAT SECURE THE FRAME TO THE MOUNTING BRACKETS.

WARNING

DO NOT USE THE RUMBLE SEAT WITHOUT SAFETY ATTACHING STRAPS IN PLACE.

A CAUTION

IT IS <u>ABSOLUTELY IMPERATIVE</u> THAT THE SAFETY ATTACHING STRAPS BE INSTALLED AS SHOWN IN STEP 9 TO PREVENT ACCIDENTAL OR UNINTENDED TILTING OF UTV BED!

ACAUTION

SAFETY BELTS MUST BE WORN AT ALL TIMES WHEN SEATED IN THE RUMBLE SEAT.

A CAUTION

TO THE OWNER/OPERATOR OF THE UTV: DO NOT ALLOW ANY PERSON TO SIT ON RUMBLE SEATS WITHOUT HAVING THE SEATBELTS CONNECTED AND SECURED!

A CAUTION

DO NOT EXCEED THE 300 LB. WEIGHT CAPACITY (TOTAL WEIGHT OF BOTH PASSENGERS)
OF THE RUMBLE SEAT.

For more information about this or other products, contact us at:

Great Day, Inc.

604 Kimbrough Dr. * Tallulah, LA 71282 * (866) 649-1918 * www.greatdayinc.com