




STANDARD ACRYLIC WALL SHELVING SYSTEM (66 x 48")

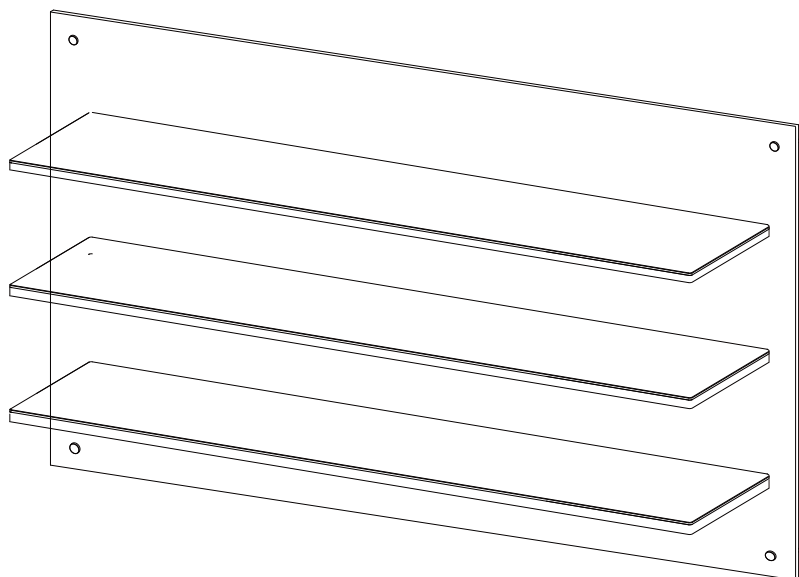

A Back Panel x 1

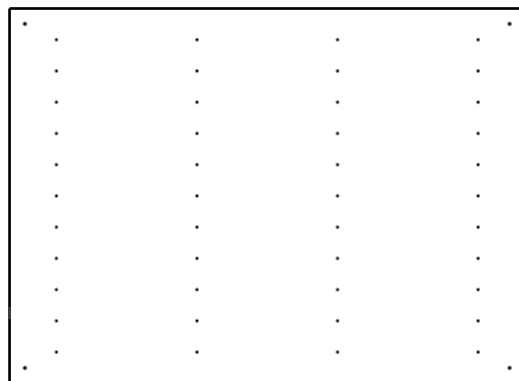


B Shelf

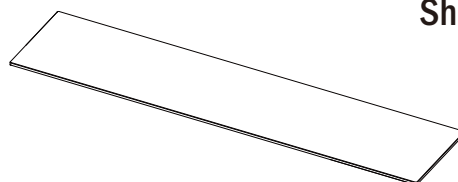


x 3

C 1" standoff (#13.15.20.25)

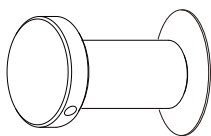


x 4


D Butterfly Anchors + Screws

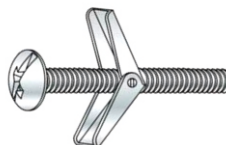

x 4

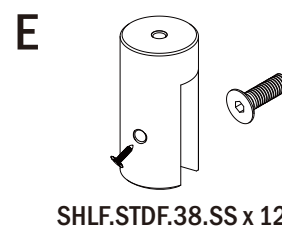

F x 1



Standoff Cap
13.15.20.25-CAP



Upper Inside Threaded Barrel
13.15.20.25-BAR



Standoff Cylinder
13.15.20.25-CYL



Standoff Screw
13.15.20.25-SCR



Lower Inside Threaded Barrel
13.15.20.25-BAR




Standoff Washer
13.15.20.25-WSH




Toggle Bolt

Place the back panel on the wall and mark standoff holes.

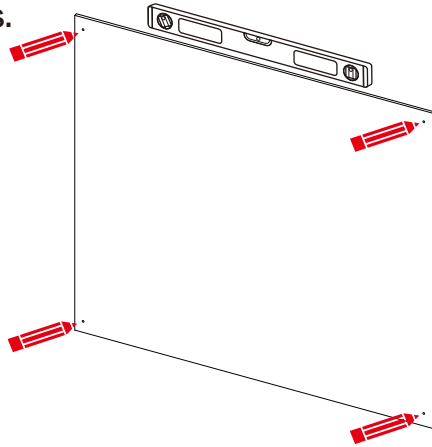


Step 1

Secure the shelf standoffs with the provided screws from the back

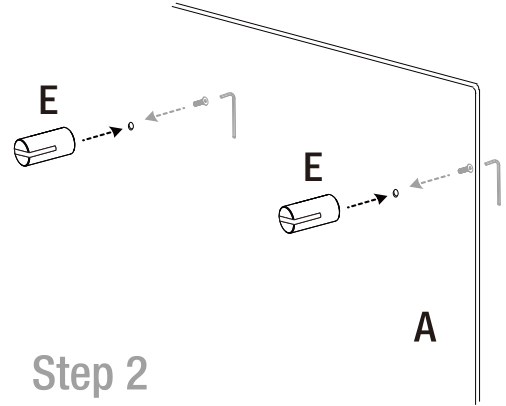

Step 2









Place your shelves into the shelf standoffs and secure by tightening the set screws with provided hex wrench.

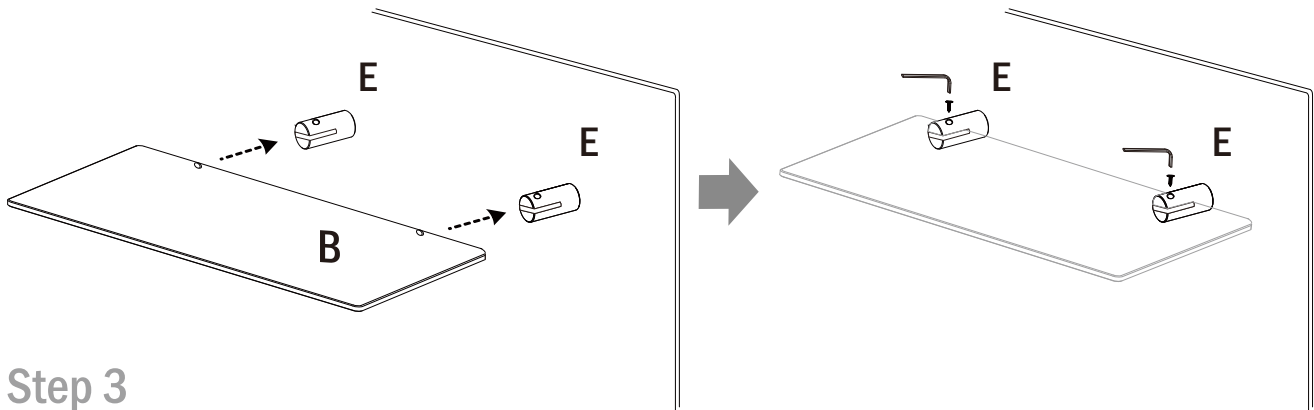


Step 3

Install the standoffs on the marked spots on the wall

Step 4

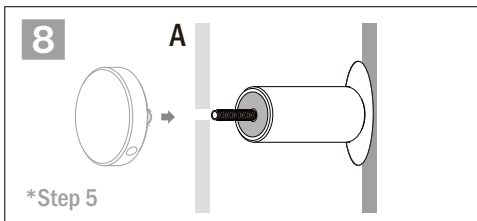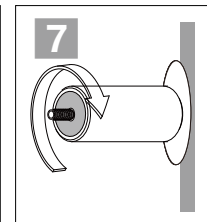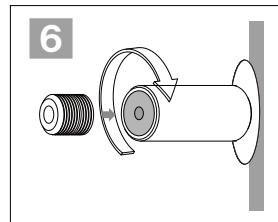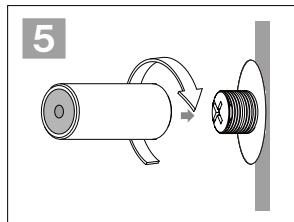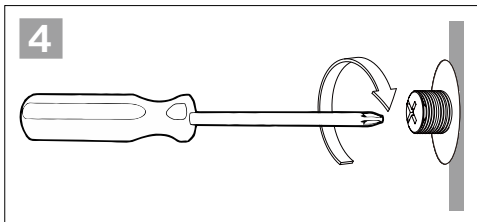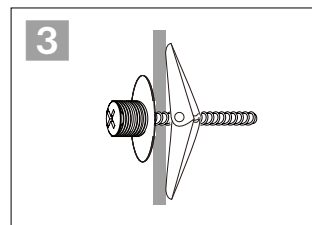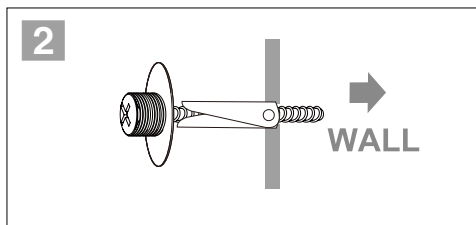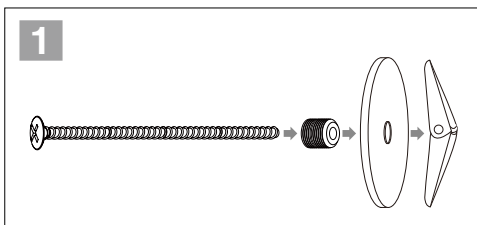

Place the complete panel and shelves on to the standoffs
and secure them with the caps

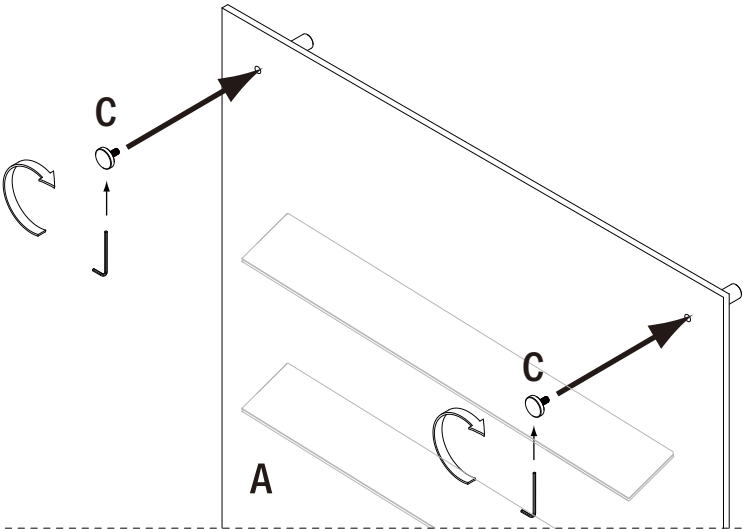

Step 5