




SKIM DELETE INSTRUCTIONS

PRE-INSTALLATION CHECKLIST:


- ✓ Battery terminals clean and charged over 12 Volts
- ✓ Wiring harness is clean and in good condition
- ✓ Defective parts have been repaired/replaced
- ✓ Ground connections are in good condition and secured

INSTALLATION PROCEDURES:

1. Disconnect negative terminal from battery
2. Disconnect SKIM Module under steering column (see diag.)
3. Install PCM
4. Reconnect Battery
5. Start Vehicle

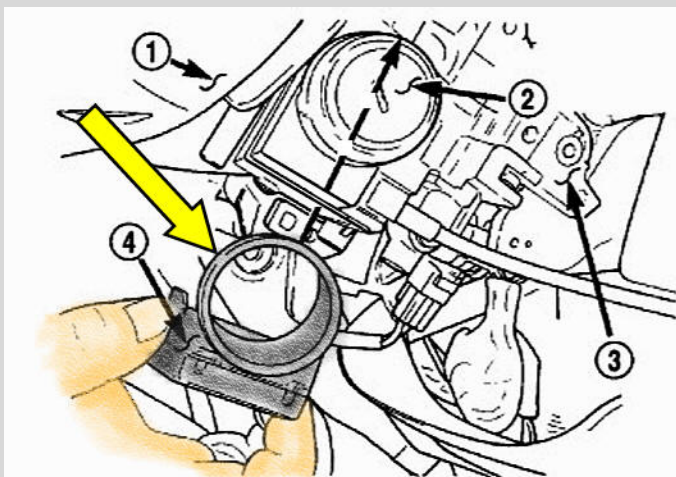

- 1 - STEERING WHEEL
- 2 - IGNITION KEY CYLINDER
- 3 - STEERING COLUMN
- 4 - SENTRY KEY IMMOBILIZER MODULE

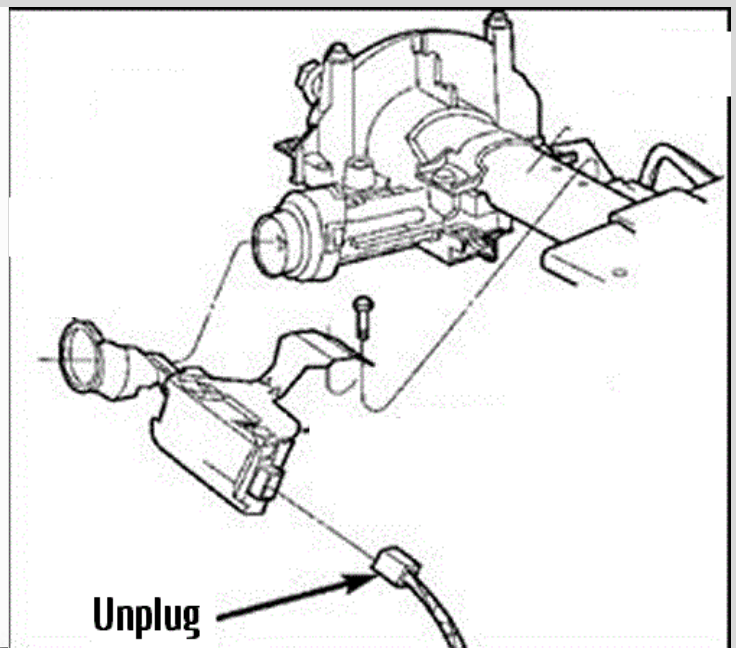

Failure to disconnect the SKIM Module will enable SKIM to the PCM.

*The Security light may remain on after installation.



Click for video instructions

All Computer Resources

www.AllComputerResources.com