GENUINE ACCESSORIES

INSTALLATION INSTRUCTIONS

PART NUMBER:
0000-8K-H02A

CARGO NET

APPLICABLE MODELS:
2003 > MAZDA6
2006 > MAZDASPEED6

PACKAGE CONTENTS

Cargo Net
Hardware Kit

PART NUMBER:
0000-8K-H20

Installation Instructions

TOOLS REQUIRED

Small flat-tip screwdriver
8mm (5/16”)drill bit
Drill
Drop cloth
Vacuum
Lint free rag
Soap and water

0 BEFORE INSTALLATION

1. READ ENTIRE INSTALLATION INSTRUCTIONS BEFORE PROCEEDING

2. BE CAREFUL NOT TO DAMAGE PAINT OR KIT COMPONENTS.

3. DO NOT OVERTIGHTEN SCREWS.

4. CLEAN MUD, DIRT & SALT FROM INSTALLATION AREAS.

1 Remove Trim

1. Open trunk
2. Locate 4 plastic fasteners on trim inside trunk
3. Using a small screwdriver, remove the plastic fasteners by prying out the center (Fig. 1)
4. Remove trim by pulling upward. Be careful not to break plastic pins at bottom (Fig. 2)

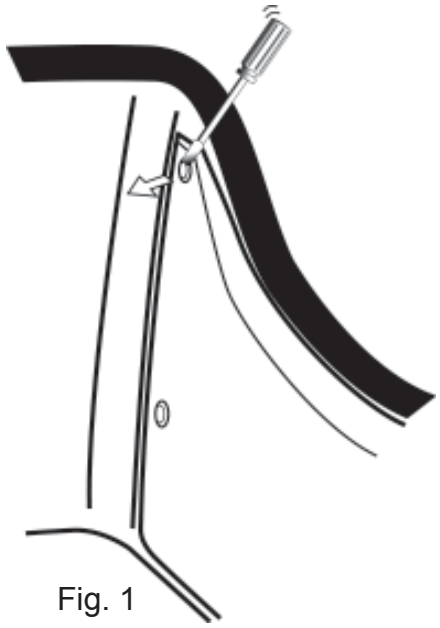

Fig. 1

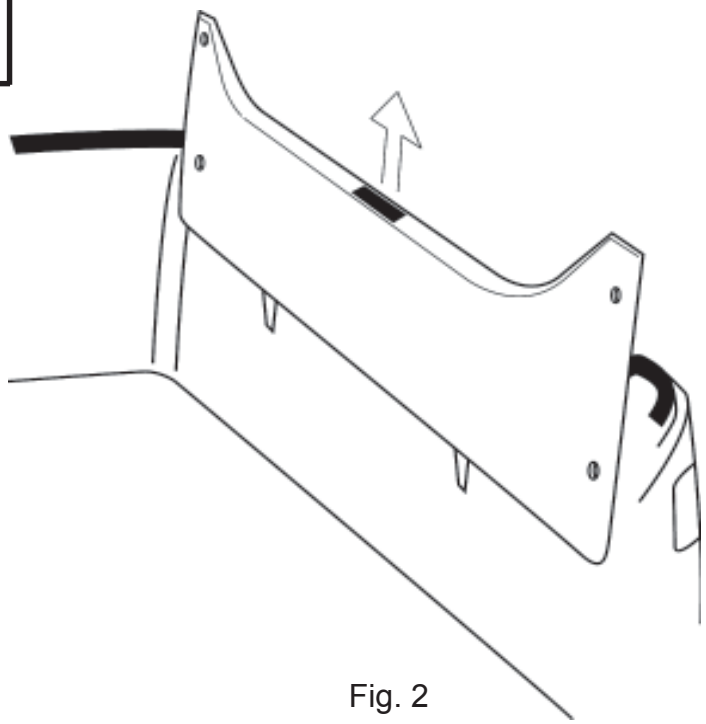

Fig. 2

2 Drilling Holes

1. Locate 4 holes inside trunk that were used to retain plastic fasteners (Fig. 3)
2. Place a towel or cloth at bottom of trunk to catch metal shavings.
3. Using a drill with a 8mm (5/16”) drill bit, enlarge the sheet metal holes.
4. Remove towel with metal shavings. Using a vacuum, remove any remaining shavings.
5. On the plastic trim, locate the 4 holes. (Fig. 4)
6. Locate the 4 T-hook assemblies from th net kit.
7. Disassemble each T-Hook assembly by turning counter-clockwise on the rubber welnut. Remove the wellnut & washer. **NOTE:** Make sure you only disassemble each T-Hook and attach it to the panel one at a time, so as not to lose parts.
8. Place the T-Hook with the metal stud through the attachment hole in the plastic trim. Reassemble the washer and wellnut onto the T-Hook. **NOTE:** The plastic trim should be between the T-Hook and the washer. Be sure not to tighten the T-Hook assembly (Fig. 5).

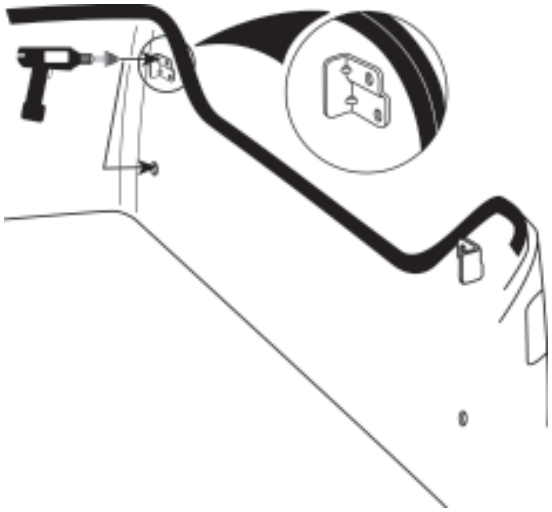

Fig. 3

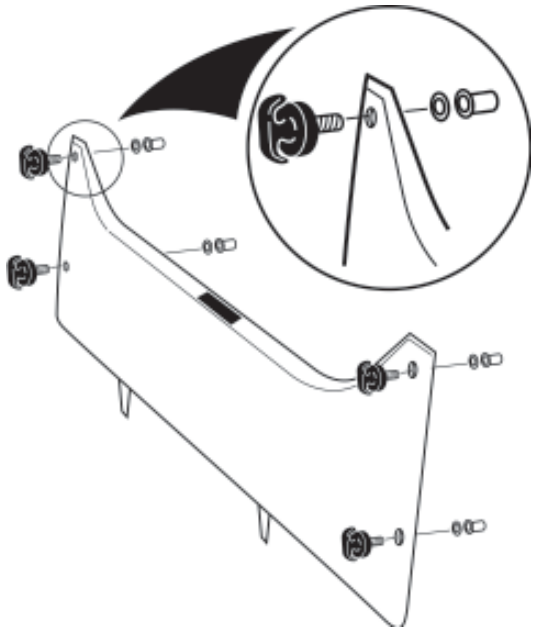

Fig. 4

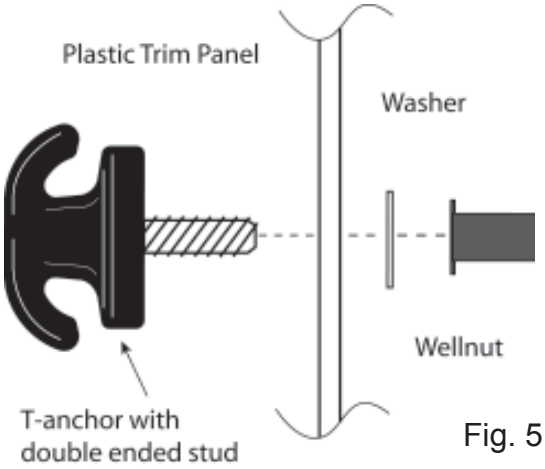

Fig. 5

3 Install Cargo Net

1. Reinstall plastic trim making sure the metal fasteners (4) are intact.
   Note: Make sure to guide the lower plastic pins into the slotted holes in the body.
2. Install T-Hooks into 4 sheet metal holes by applying pressure while turning by hand. (Fig. 6)
   Make sure that T-hooks are in a vertical position. Do not overtighten.
3. Install net to T-hooks as shown making sure the handle at center faces outward. (Fig. 7)
4. Clean off any finger prints from exterior using a lint free rag, soap and water.
5. Contents placed in net not to excees 13.6Kg (30 lbs).

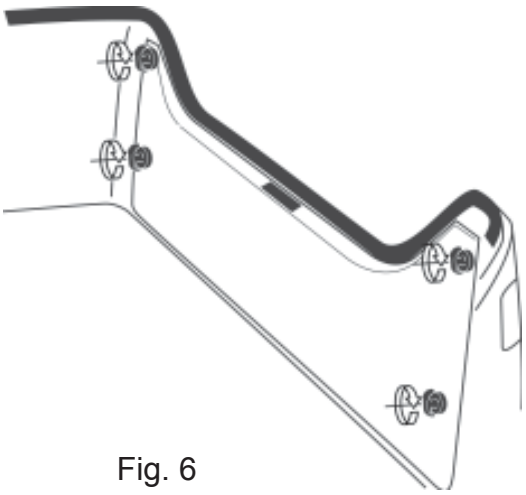

Fig. 6

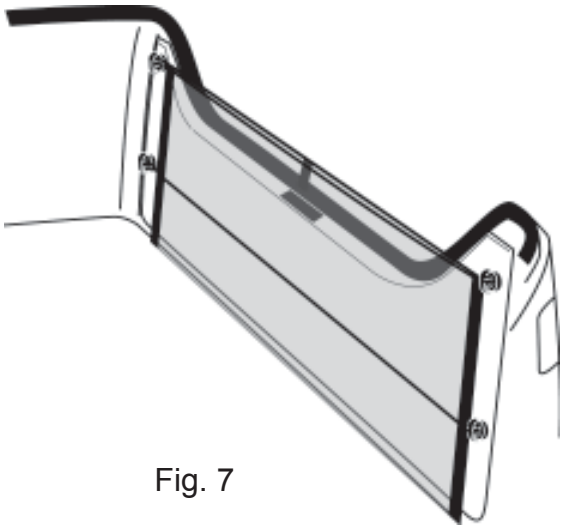

Fig. 7

WARNING: OBJECT(S) RESTRAINED NOT TO EXCEED 30 lbs. (13.6 kg)