
| MODEL | MATERIAL | OVERALL SIZE | INSTALLATION | FINISHES | HARDWARE |
|-------|----------|---------------------------------|--------------|--|-------------------------------|
| E6 | Aluminum | 12 5/8" W 17 1/2" H 3 3/4" D | Wall mounted | Satin black, bronze, rust brown powder coat paint. | 2 screws and 2 keys included. |

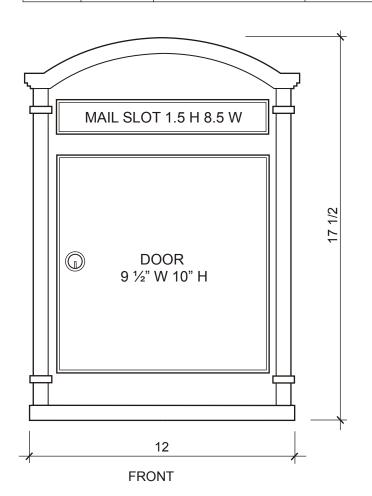

IMAGES NOT TO SCALE 3 3/4 \otimes ∞ 3/8 3 1/4 SIDE **BACK**

Maintenance

Regular dusting and cleaning. Apply 3 in 1 oil into key way of lock a couple of times a year to prevent key from sticking.

Installation Instructions

- 1 Determine the location and height of where the mailbox is to be installed. With the door open, mark the location of screw holes. Install mailbox using screws.
- 2 Upper screw hole is optional and does not need to be used. Two screws provided.

FUORISERIE 351 37TH STREET BROOKLYN NY 11232 T: 718 643 1381 E: FUORISERIE@AOL.COM