

INSTALLATION INSTRUCTIONS: REGENT-DECORATIVE CBU ACCESSORY (USPS APPROVED)



Figure 1



Figure 2



Figure 3



Figure 4



Figure 5

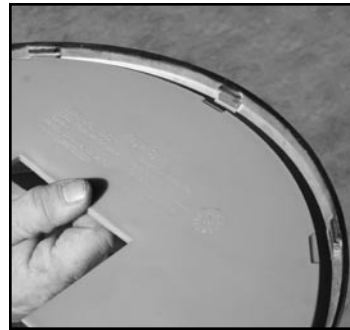


Figure 6



Figure 7



Figure 8



Figure 9



Figure 10

Assembly Instructions:

Assemble and install a USPS approved F-type CBU on a USPS approved concrete pad.

1. Select either the ball finial (left) or flame finial (right) to be fastened to the decorative top piece (Figure 1). Align the threaded holes in the base of the finial with the holes in the top of the decorative top piece. From the underside of the decorative top piece, use two M4x12 allen bolts to secure the finial (Figure 2).
2. Thread four M6x8 allen cone point set screws into the four threaded holes on the corners of the decorative top piece. Apply thread lock to the threads before installing. Warning: when thread lock is used, it will be nearly impossible to remove the set screws. Only thread the set screws until they are flush with the inside surface of the decorative top piece (Figure 3).
3. Place the decorative top piece assembly on top of the CBU (logo positioned to the rear of the CBU).
4. Tighten the four allen set screws evenly to secure the decorative top piece assembly to the CBU (Figure 4).
5. Slide one half of the anti-insect gasket into the top of one of the decorative pedestal wrap pieces (Figure 5). Make sure that the locator tabs line up properly (Figure 6).
6. Slide the decorative pedestal wrap assembly half into position underneath the rear of the CBU (making contact with the mailbox's pedestal) (Figure 7).
7. Repeat steps 5 and 6 for installing the front half of the decorative pedestal wrap (make sure all locator tabs line up with each other) (Figure 8).
8. Use four M4x16 allen bolts (two at the top and two at the bottom) to bolt the two halves of the decorative pedestal wrap together (enclosing the existing CBU pedestal) (Figure 9).
9. Thread four M6x20 allen set screws (one at the top and one at the bottom on both front and rear halves) into the threaded holes and tighten against the existing CBU pedestal to prevent the decorative pedestal wraps from moving (Figure 10).
10. Check all fasteners to be sure they are snug before completion, do not overtighten.

Hardware & Parts List:

- | | |
|-------------------------------|--|
| (1) Decorative top piece | (4) Allen cone point set screws (M6x8) |
| (1) Ball or flame finial | (4) Allen set screws (M6x20) |
| (2) Decorative pedestal wraps | (4) Allen bolts (M4x16) |
| (2) Anti-insect gasket halves | (2) Allen bolts (M4x12) |
| (1) Metric allen wrench | (1) Tube of thread lock |

Custom Home Accessories, Inc.
11300 Trade Center Drive, Ste. A
Rancho Cordova, CA 95742
916-635-0231 • Fax 916-635-0228
www.customhomex.com

