
AM-412 Corner Mount - Prism Series Mount Installation Guide

Compatible Prism Series Cameras

ADC-VC7398PA
ADC-VC8295P

ADC-VC8498PA
ADC-VC8498P

ADC-VC8295P

ADC-VC7398PA

Additional mounting accessories required

AM-71C_V02 Waterproof Junction Box

AM-218 Wall-Mount Bracket

AM-719 Outdoor Junction Box

AM-528 Large Pendant Cap


AM-218 Wall-Mount Bracket

AM-719 Outdoor Junction Box

AM-52E Small Pendant Cap

N/A (direct installation)*

AM-412 Corner Mount Bracket

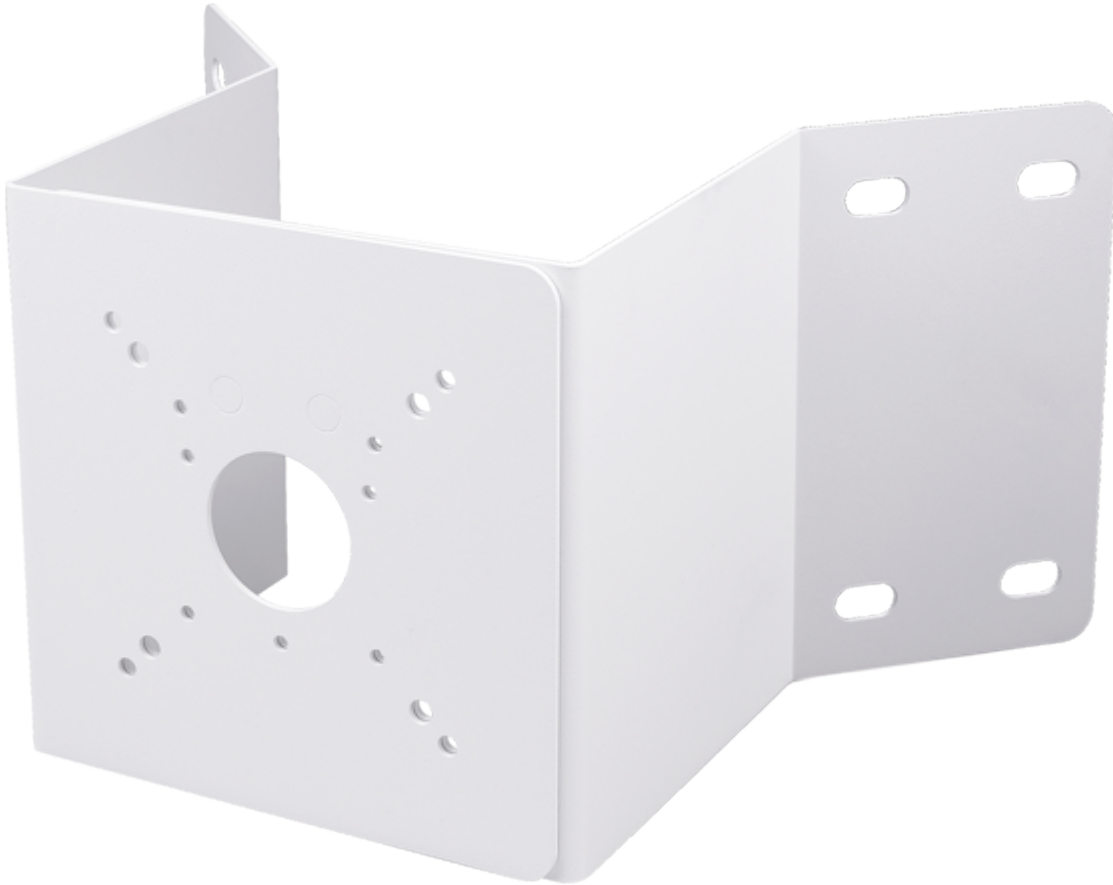


***Important:** The directly-attached installation configuration is less recommended due to the lack of built-in waterproofing and cabling protection. If utilizing a direct installation, make sure to properly wrap the rear-end cables and connectors with waterproof protection such as putties.

The AM-412 Corner Mount Bracket can be ordered through the Partner Portal's [Order Equipment page](#).


In the box

- AM-412 Corner Mount Bracket
- M6X20mm screws (x4)
- M5X20mm screws (x4)

- M4X20mm screws (x4)
- M4X15mm screws (x4)
- M8 nut (x2)
- Hex L wrench 5 mm
- Hex L wrench 4 mm

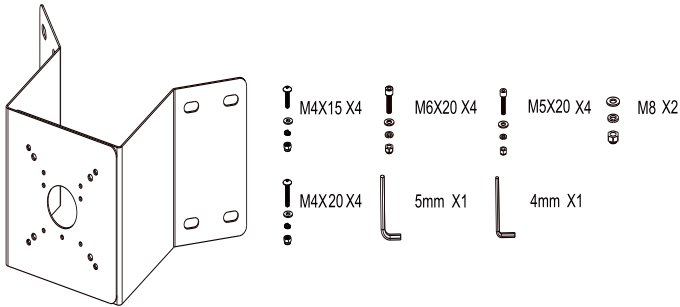


Mechanical drawings

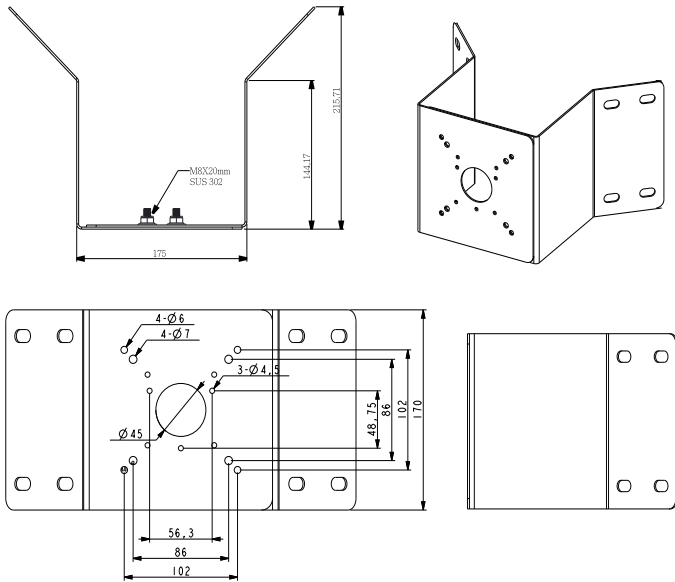

Pre-installation


If you are installing a dome camera, the camera's cowl must be removed in order to install the video device. Retain the camera screws and cover for re-installation after cable routing and mounting is complete.

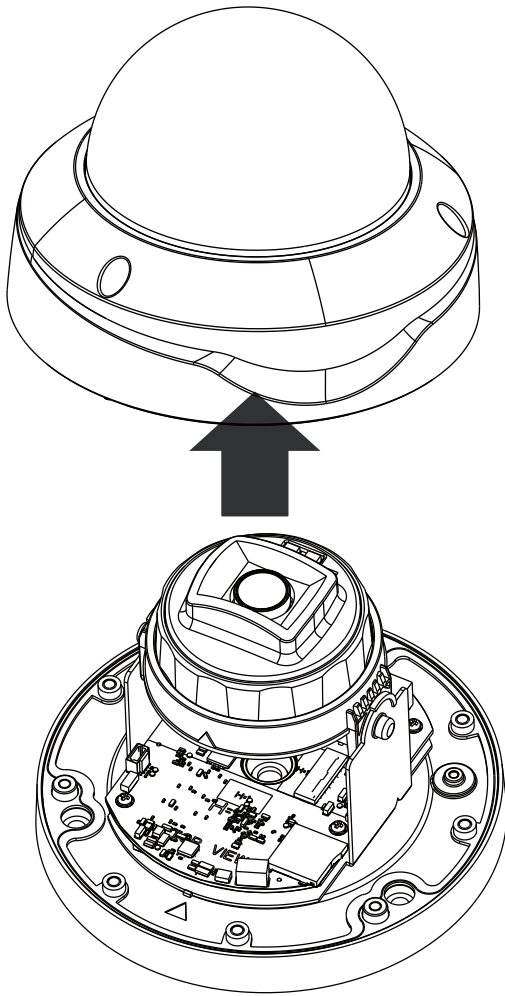


Installation instructions

Note: The following steps and images are examples of the general installation process.

1. Combine the two metal pieces together using the M8 hex nuts and washers.

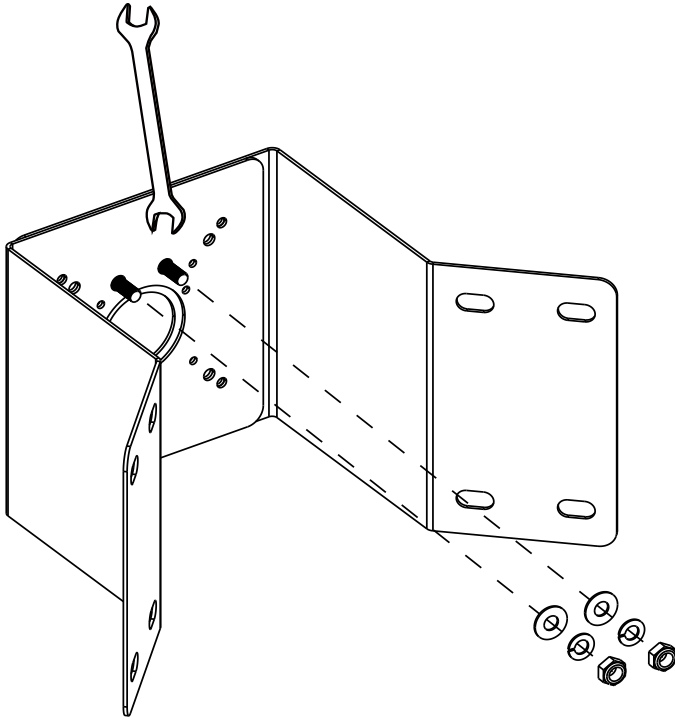


2. Align the assembled brackets with the desired position. Align the screw holes on the brackets against the wall.
3. Drill holes in the wall for securing the bracket and for routing the cables.
4. Hammer the anchors into the wall.

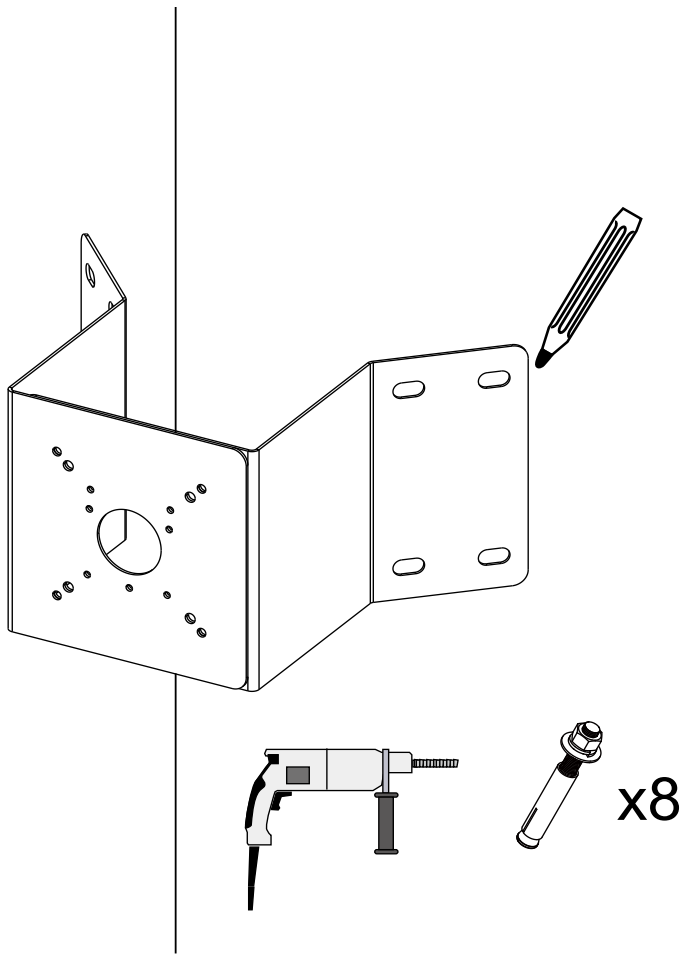


Note: These screws and wall anchors are not included, and must be user-supplied.

5. Secure the conduit box (e.g., AM-719 or AM-71C_V02) to the bracket using the M5 screws, washers, and hex heads. A hex crescent wrench is required.

AM-412, AM-71C_V02, and bullet camera

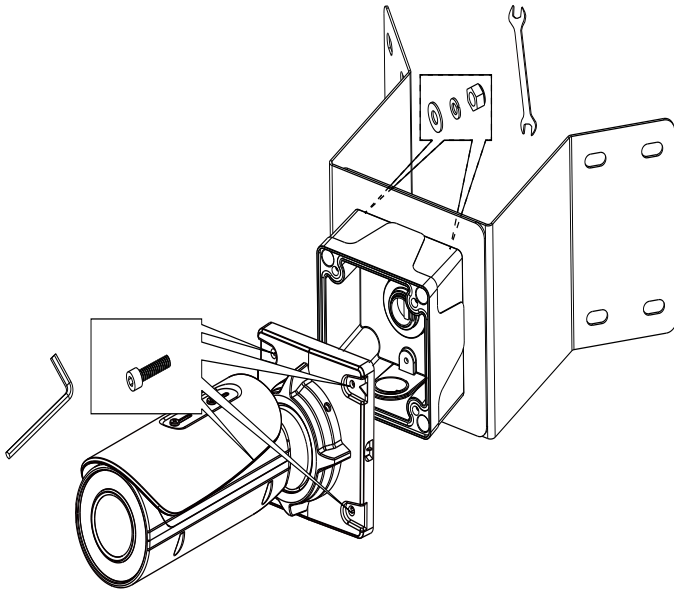

AM-412, AM-719, AM-218, Adapter Plate, and dome camera

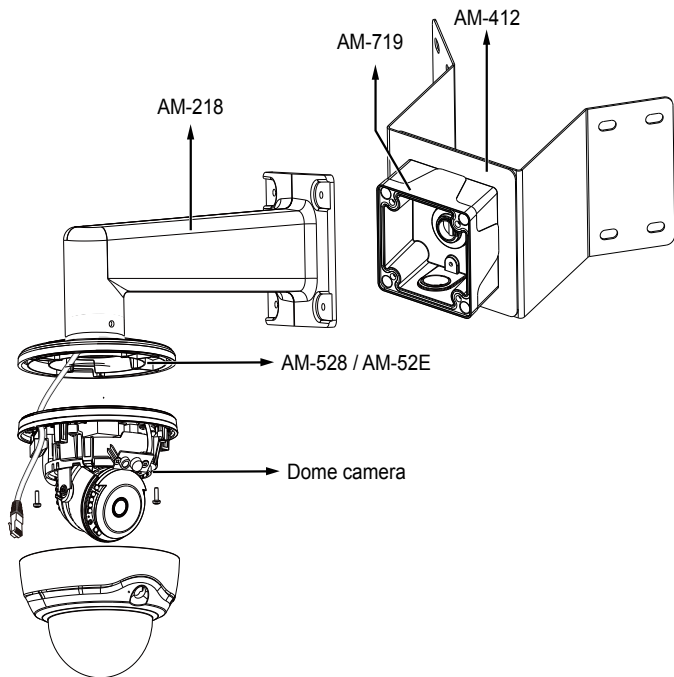

Note: These examples depict generic bullet and dome cameras. Alarm.com Prism Series Cameras will look different when installed.

6. For installation instructions for the AM-719 or AM-71C_V02, see:
 - [AM-71C_V02 Waterproof Junction Box - Prism Series Mount Installation Guide](#)
 - [AM-218 Wall-Mount Bracket - Prism Series Mount Installation Guide](#)

Note: This Installation Guide includes steps to install the AM-719 along with the AM-218 for a compatible

setup.

Additional resources

- For assistance with choosing the correct mounting accessories for your installation, see [Prism Series Camera Mounting Accessories](#).
- For steps and information about installing Prism Series Cameras, see [Prism Series Cameras - Installation Guide](#).