

QUICK START GUIDE - QUICKBOX - Z-Wave Edition

We strongly suggest you visit us online at: www.safetechproducts.com/tutorials
for additional instructions and video tutorials.

1

CONTENTS



- 1- The QuickBox
- 2- AC adapter
- 3- Wristband
- 4- Hex Key
- 5- Stop Block - To be used when side or under mounting The QuickBox.

2

POWER ON




- 1- Plug the AC adapter into the back of The GunBox and into the wall.

(Blue light will indicate power on)

- 2- Flip power switch to the "ON" position, located on the bottom of The QuickBox.
- 3- Use the wristband provided to open The QuickBox.

3

SYNC FINGERPRINT

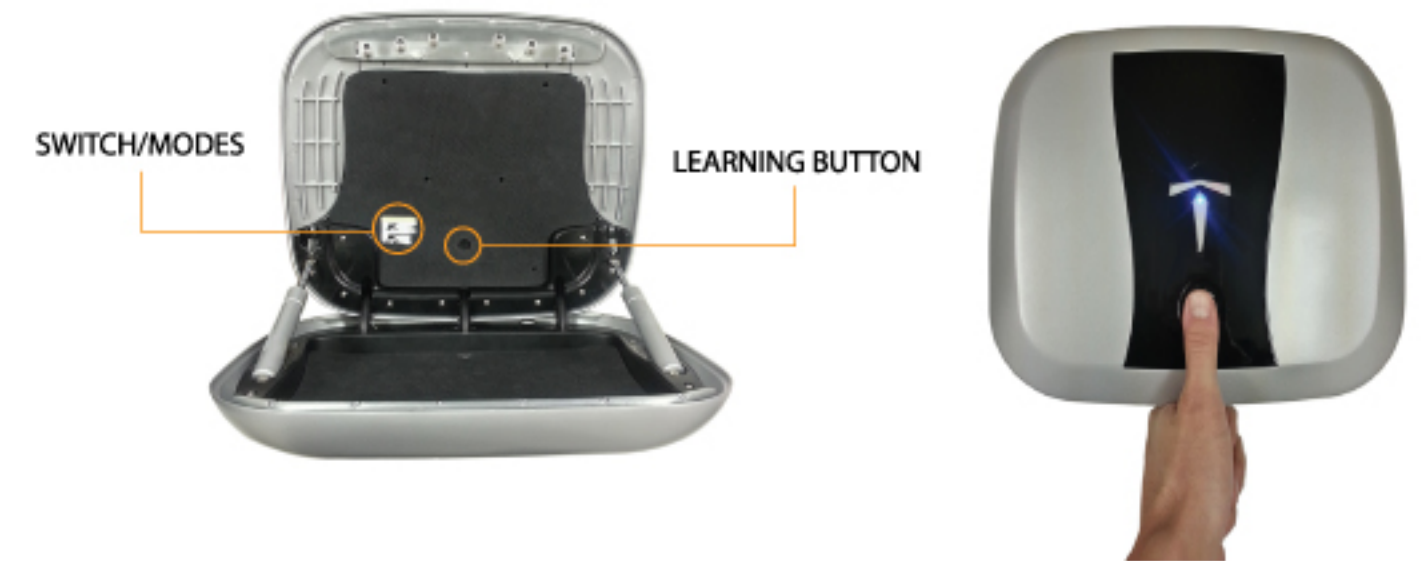


- 1- Press the "learning" button to activate learning mode. A green light will appear.
- 2- Close The QuickBox.

(Wristband comes synced and will open The QuickBox.)

- 3- To register your fingerprint, press the fingerprint scanner firmly 3 times, waiting for the green light to flash between each try.
- 4- For help registering additional wristbands, please visit our tutorial section online.

ADDITIONAL TIPS

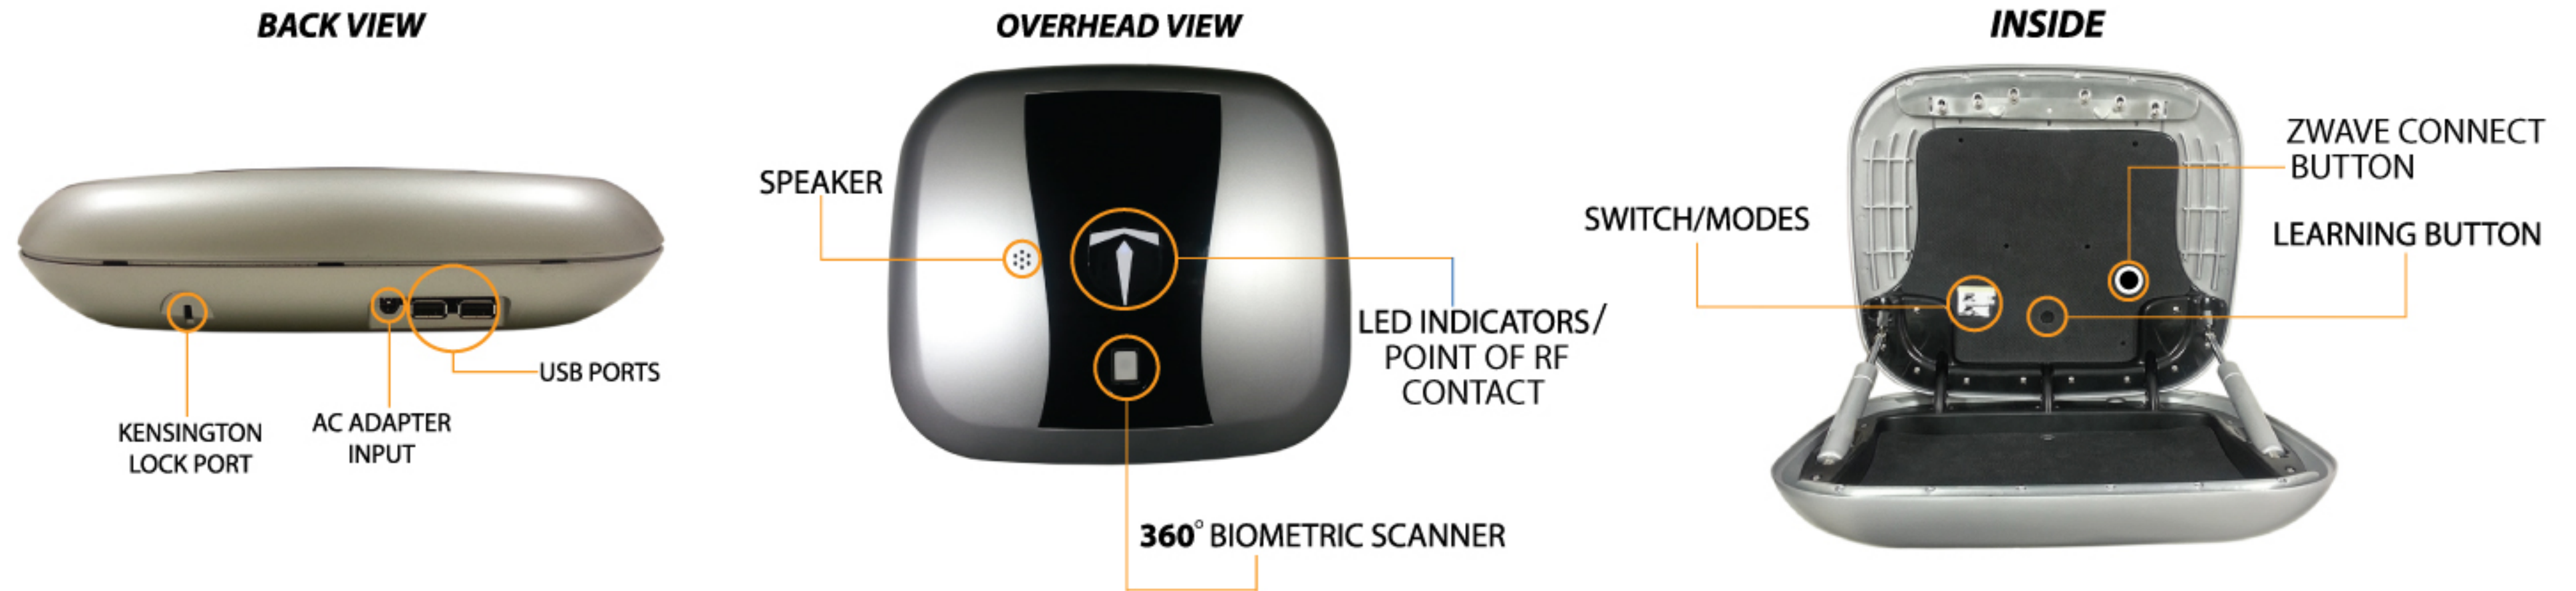

LEARNING MODE

To put The QuickBox in "learning mode," make sure the power switch on the bottom of the unit is in the "ON" position. Then press the learning button once.

(Indicated by a Solid Green Light)

TO REMOVE ALL WRISTBANDS & FINGERPRINTS

To reset, put into learning mode. Press and hold learning button for 20 seconds. The QuickBox **will not close** until a fingerprint, wristband or sticker is programmed.

(This will erase all stored fingerprints and wristbands)

CHARGING

Charging will be indicated by a Blue LED when the unit is plugged in and the button switch in the "ON" position

LIGHTS

GREEN - Learn Mode
BLUE - Power
RED - Alarm

USB CABLE

DO NOT plug USB cable into computer. It should only be used with the power supply that came with The QuickBox.
(This could damage your CPU)

Z-Wave Instructions for "The QuickBox"

Adding The Quickbox to your Z-Wave network (Inclusion):


- Put the Z-Wave controller into "ADD MODE" (refer to controller's user manual for details.)
- Push the Z-Wave button on The Quickbox. (See Diagram to the left for button placement.)

Removing The Quickbox from your Z-Wave network (Exclusion):

- Put the Z-Wave controller into "DELETE MODE" (refer to controller's user manual for details.)
- Push the Z-Wave button on The Quickbox. (See Diagram to the left for button placement.)

Manual Reset:

- To reset The Quickbox Z-Wave settings to its factory defaults, hold the Z-Wave button for 5 seconds.
- The Quickbox will be disconnected from Z-Wave enabled panel.

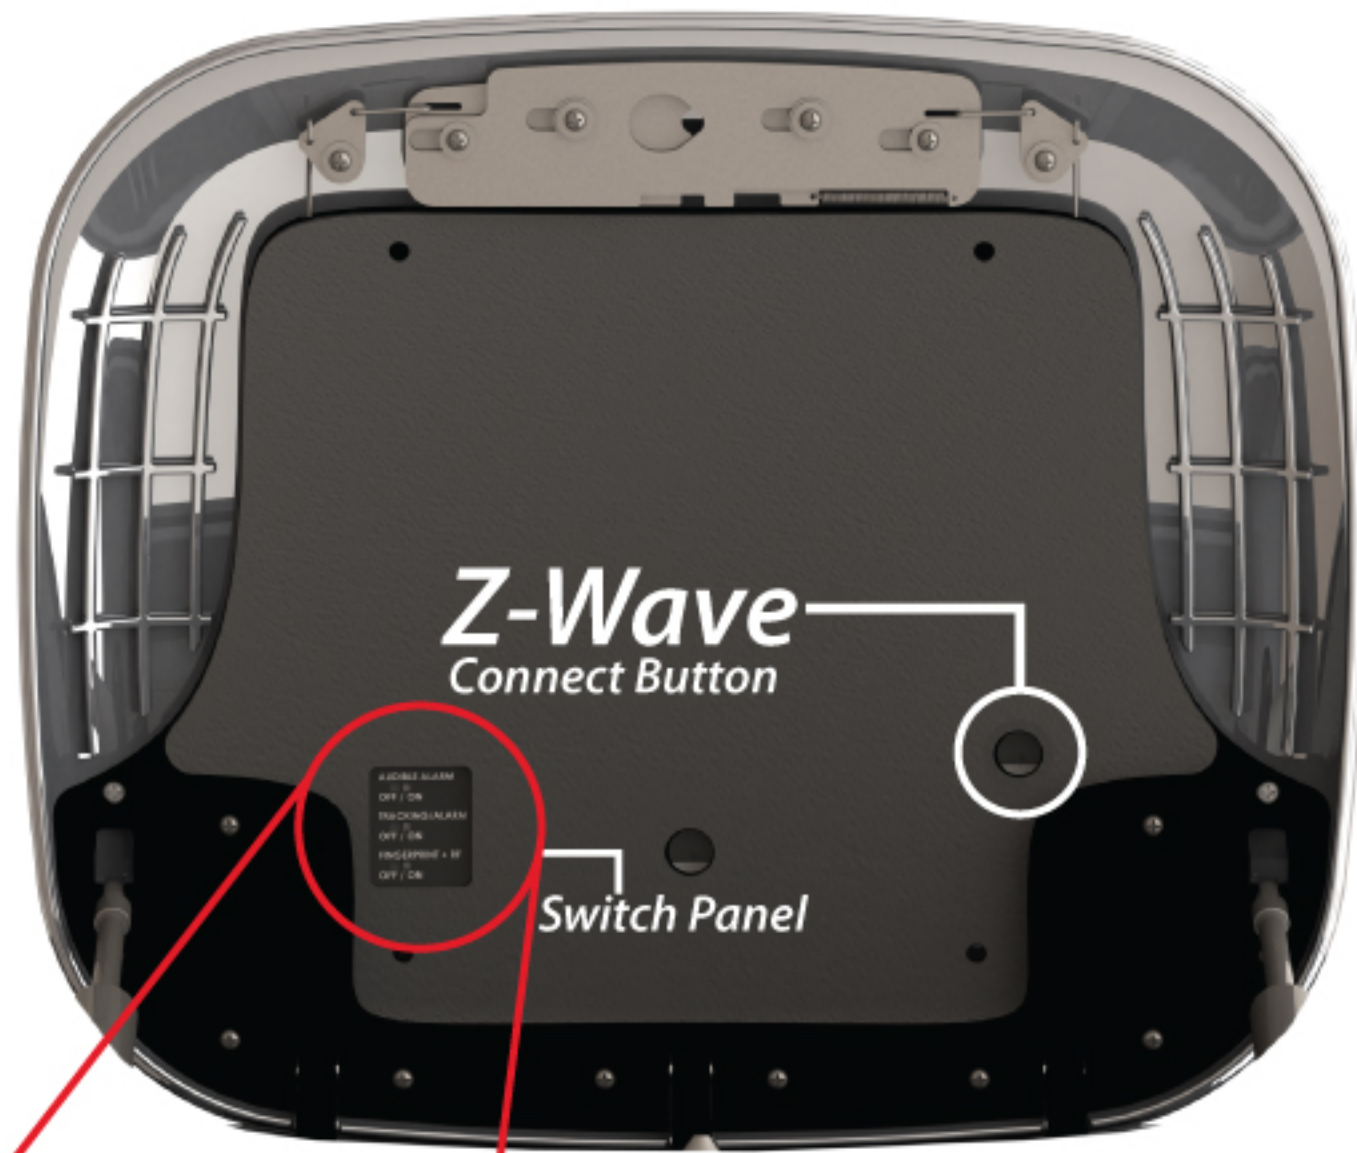

Z-Wave
Connect Button

Switch Panel

AUDIBLE ALARM
OFF / ON
TRACKING/ALARM
OFF / ON
FINGERPRINT + RF
OFF / ON

EXTREMELY IMPORTANT

The 2nd switch (see left diagram for switch description) **MUST** be in the "ON" position in order for The Quickbox to connect to Z-Wave.

Compliance:

This product can be included and operated in any Z-Wave network with other Z-Wave certified devices from other manufacturers and/or other applications. All non-battery operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network.

To fully support all Z-Wave features of The Quickbox, your Z-Wave controller must have support for the Notification Command Class.