




Tri-Fold® Restraints

Read all instructions prior to use.

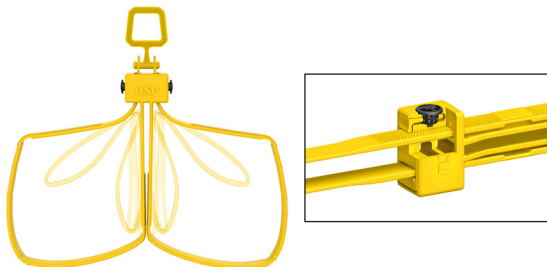

ASP Tri-Fold disposable restraints incorporate a revolutionary new twin strap design. A shim guard completely surrounds the ratchet mechanism of each restraint. The reinforcement provides protection against shimming. The design also makes it physically impossible to “pull through” the locking ratchet as is possible on other double restraints.

Each Tri-Fold strap folds in three locations for compact storage. The straps are .5” wide with rounded edges to protect the subject’s wrists. The design provides a smooth pull during application.

The square configuration of expanded Tri-Fold straps provide large pre-formed loops. Once expanded, the straps can be rapidly applied. The design allows both restraints to be pulled simultaneously with the reusable Tri-Fold Pull.

Tri-Fold straps may be opened for use and returned to a folded position for storage. However, once the teeth engage the locking ratchet, it is not possible to retract the straps for storage.

PREPARATION

1. Remove a Tri-Fold restraint from its storage bag.
2. Insert each strap through the Retaining Block.
3. Force a retaining post of the Tri-Fold Pull through the hole in the end of each Tri-Fold strap.
4. Fold the Tri-Fold by bringing the center of each strap back to touch the Retaining Block.
5. Insert the Tri-Fold into a carrier.

APPLICATION

ASP Tri-Fold disposable restraints are intended to be applied only to compliant subjects in either a cooperative or controlled (combat) position.

POP

1. Remove the Tri-Fold from its case by grasping the Pull.
2. Place a thumb between each of the end loops.
3. Pull the loops to the side to “pop” them open.
4. Grasp the restraints in the Weapon Hand with the Pull in the web of the hand.

PLACE



5. Instruct the subject to place their hands into the small of their back with the palms facing outward.
6. Beginning with the subject’s right hand, place the Tri-Fold loops on both of the subject’s wrists.

PULL

7. Tighten the Tri-Fold by grasping the Pull with the Reaction Hand.

PRESS

8. Compress the buttons on either side of the retaining block.

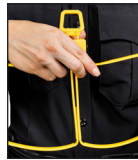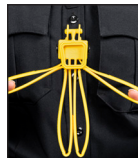

IDENTIFY the subject's Tri-Fold with an indelible marker.

REMOVAL should be done in a secure area when assistance is available and control of the subject can be maintained. Tri-Fold restraints may be removed by cutting with a pair of safety shears, side cutters or an ASP Scarab® cutter.

Cut the straps in the area of the Retaining Block. This portion of the restraint allows access to the strap without pinching the skin or lacerating the subject.

Do not cut Tri-Fold restraints with a blade or unprotected scissors.

Each Tri-Fold restraint is subject to the following limitations:

- The product is designed for use only by authorized personnel.
- The product is to be used as a temporary disposable restraint for cooperative, non-violent subjects.
- Once the strap is inserted into the locking mechanism, it is not to be removed under any circumstances.
- Any reuse of this product voids all warranties.
- Care must be exercised during application to insure that blood circulation is not restricted.



ASP Designs

Contact your local retailer or go to asp-usa.com for more information regarding other innovative ASP products.

LIFETIME LIMITED WARRANTY

ASP, INC warrants each Tri-Fold to be free from defects in materials and workmanship. Our obligation under this warranty shall be limited to replacing or repairing any Tri-Fold or part thereof returned (prepaid) to us and found to be defective in either material or workmanship. This service will be provided free of charge for parts and labor.

Misuse voids any warranty, expressed or implied. Any Tri-Fold damaged by misuse will be repaired at a minimal charge if returned (prepaid) to ASP, INC · 2511 E Capitol DR · Appleton, WI 54911.

ASP reserves the right to make changes at any time in prices, specifications or design without notice. ASP may add or remove accessory materials and add or discontinue models without incurring obligation.

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This Limited Warranty and Statement of Liabilities supersedes all previous warranties and commitments.

DISCLAIMER OF ALL IMPLIED WARRANTIES AND STATEMENT OF LIABILITIES

The parties agree that this instrument constitutes the entire warranty agreement between the parties, superseding all previous communications, oral or written, and no changes, amendments, or additions hereto will be recognized unless in writing signed by both ASP and the client. It is expressly agreed by both parties that no representations or warranties, expressed or implied, have been or are made by ASP except as stated herein, and ASP makes NO WARRANTY, EXPRESSED OR IMPLIED, AS TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR AS TO ANY IMPLIED WARRANTY OF FITNESS FOR ANY PARTICULAR PURPOSE, or with respect to any other obligation or liability on the part of ASP.

The Laws of the State of Wisconsin shall govern construction and interpretation of this warranty.

The exclusive remedy for claims arising hereunder shall be for damages. The liability of ASP for any and all loss or damage resulting from any cause whatsoever including negligence of ASP and for alleged damaged or defective goods, irrespective of whether such defects are discoverable or latent, shall in no event exceed the price of the particular Tri-Fold with respect to which losses or damages are claimed, or, at the election of ASP, the repair or replacement of defective or damaged equipment. IN NO EVENT, INCLUDING THE CASE OF A CLAIM OF NEGLIGENCE, SHALL ASP BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING IN CONNECTION WITH THE USE OR INABILITY TO USE THIS PRODUCT.

