

CARETAKERSENTRY



- Cellular Accessory (40914ACC)
- Wireless communication between CaretakerSentry base and cellular network
 - No wired telephone connection needed

- Base Unit (40914)
- Call placed to Central Station via Red Emergency Button
 - Program additional phone number to call friends, family or a nurse assist hotline



- Basic Pendant (40915)
- Battery: Up to 5 year battery life
 - Waterproof to IPX7 standards

- Two-way Voice Pendant (41915)
- Battery: 3.7V Lithium-ion (up to 4 hour talk and 6 month standby times)
 - Water resistant to IPX5 standards

- Emergency Wall Communicator (41920)
- Operates at 1.9 Ghz
 - Uses DECT Communication
 - (4) AAA batteries required

See reverse side for full list of features.

FEATURES:



FULLY SUPERVISED

Pendants communicate with base station every 13 hours to ensure proper connection. Central station is contacted in the event of a power outage, low battery or loss of RF signal. Central Station is contacted every 52 hours if 4 tests are missed.



AUDIBLE PROMPTS

Audible prompts can be heard during system set-up, system programming, testing and full system check. English, Spanish, French and Chinese voice prompts are standard.



SOS CALL

Emergency call is placed by either pressing the 'EMERGENCY' button on the pendant or on the base unit. Braille lettering is included on the base unit buttons.



CARETAKER BUTTON

Program an additional phone number to call family, friend or a nurse assist hotline. The programmed number is called only upon activation from the 'CARETAKER' button on the base unit.




BUILT-IN LINE-SEIZURE

This feature allows for the telephone line to be seized during an emergency call.



BATTERY BACK-UP

Base unit includes rechargeable batteries for up to 24 hours of emergency battery power in the event of a power outage. The Cellular Accessory uses a Lithium Ion backup battery for 24-48 hour standby time.

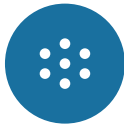

SPEAKER PHONE

Built-in speaker phone provides exceptional communication upon system activation.



STATUS INDICATORS

Phone connection, backup battery status, pendant and AC power are displayed by 4 LEDs.



WIRELESS COMMUNICATION

Cell Accessory communicates through Uplink with an additional monthly charge from Uplink for this service. CDMA technology is used and available only in the U.S.A.



PROGRAMMING

Program to any central station. Program the primary and secondary receiver numbers. Enter your 4 digit account number. Enter your 4 digit dealer code. Choose between monthly, weekly or daily test timers. Can program remotely via phone.

SPECIFICATIONS:

- Central Station: Contact ID and 4+2 formats
- Compatibility: POTS, most VoIP systems and cell accessory
- Coverage: up to 600ft (183m) line of sight
- Combination up to 9 pendants can be associated with a single base

- Battery: Four AA NiMH rechargeable for base backup power
One 3.7V Li-ion rechargeable for 2-way voice pendant (plus one spare included)
- Two-way voice communication technology using 1.9GHz Digital Enhanced Cordless Telecommunications (DECT)